

#### **INSTRUCTION MANUAL**

Type 1654 Impedance Comparator

A


#### **GENERAL RADIO**

#### Contents

SPECIFICATIONS CONDENSED OPERATING INSTRUCTIONS INTRODUCTION – SECTION 1 INSTALLATION - SECTION 2 OPERATION – SECTION 3 SPECIAL MEASUREMENTS – SECTION 4 THEORY – SECTION 5 SERVICE AND MAINTENANCE – SECTION 6 PARTS LISTS AND DIAGRAMS – SECTION 7

#### WARRANTY

We warrant that each new instrument manufactured and sold by us is free from defects in material and workmanship and that, properly used, it will perform in full accordance with applicable specifications for a period of two years after original shipment. Any instrument or component that is found within the two-year period not to meet these standards after examination by our factory, District Office, or authorized repair agency personnel will be repaired or, at our option, replaced without charge, except for tubes or batteries that have given normal service.

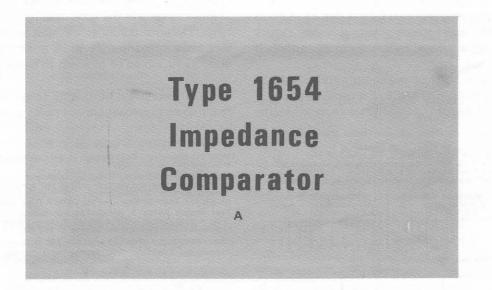

#### ©GENERAL RADIO COMPANY 1969

West Concord, Massachusetts, U.S.A. 01781 Form 1654-0100-A June 1969 ID-0100

#### **Condensed Operating Instructions**

#### CAUTION DO NOT APPLY CHARGED CAPACITORS

#### **GENERAL PROCEDURE.**

a. Turn the POWER switch on and wait at least 30 seconds for the instrument to warm up.

b. Select the operating frequency and check with the table below for impedance limits.

c. Connect the standard and unknown components to the appropriate terminals, using either direct connections or the Type 1680-P1 Test Fixture for the unknown.

d. To check the zeros on the meters, turn the INPUT switch to the ZERO position. Turn both deviation FULL SCALE ranges to the most sensitive range. Adjust both ZERO controls for zero meter readings.

e. To calibrate the  $\Delta Z$  meter, set the MAGNITUDE DIFFERENCE % switch to 1. Set the INPUT switch to CAL 1%, and adjust the CAL 1% control to give a 1% full-scale indication.

f. Select the desired range for the  $\Delta Z$  and  $\Delta \theta$  meters as well as the test voltage. Test-voltage and measurement ranges are related and their panel switches interlocked to reflect this relationship.

g. Select GUARDED or UNGUARDED operation. GUARDED operation is preferred for shielded components or for remote and high-impedance measurements. Capacitance to the shield is reduced by a factor of about 1000, if the shield is guarded.

h. Select type of measurement: RESISTANCE/ INDUCTANCE or CAPACITANCE. For certain inductance measurements, the guarded operation may cause self-excitation of the circuit as indicated by the OFF-SCALE lamp being lit. The UNGUARDED position should be used if such oscillations occur.

Phase-angle difference and magnitude difference between the standard and unknown are indicated by the  $\Delta\theta$ and  $\Delta Z$  meters respectively, and by analog voltage outputs from the rear panel.

#### EXTERNAL OR REMOTE START.

Remote start can be achieved with the use of the 1680-P1 Component Test Fixture or by external contact closure. Insert the phone jack on the test fixture into the START socket on the rear panel and, with the START switch on EXT, momentarily closing the built-in switch on the fixture will initiate measurement.

#### ACCURACY.

The accuracy of the 1654 is 3% of full scale, i.e., for the  $\pm 0.1\%$  magnitude-difference scale, accuracy is 0.003% of the measured impedance magnitude.

The instrument may produce small errors above the specified 3% when the meters are used at opposite range extremes, i.e., when one meter is near full scale on its least sensitive range and the other reading on its most sensitive range. The error occurs on the most sensitive meter. When very small differences are to be accurately measured, the other meter should be balanced to better than 1% (or 0.01 radian).

For measurement outside the ranges listed above, refer to the correction equations and tables in Section 3.

Frequencies: Internal only 100 Hz, 1, 10, and 100 kHz,  $\pm 1\%$ . Ranges: 0.1% to 30% full-scale impedance difference; 0.001 to 0.3 radians full-scale phase-angle difference. Available ranges depend on test voltage selected as shown in the following table.

Test Voltage	Impedance Difference Full-scale Range — % 0.1[0.3]1[3]10 30		Full	Phase-Angle Difference Full-scale Range — Radian .001[0.003]0.01]0.03]0.1]0										
0.3 V 1 V 3 V	xx	X X X	X X X	××	×	×	x	X X X	X X X	××	×			

Impedance Ranges (0.3-V test voitage\*):

	Resistance	Capacitance	Inductance
Full useful range	2Ω — 20 MΩ	50 pF** 1000 μF	20 µH 1000 H
at 10 kHz	2Ω — 20 ΜΩ 2Ω — 2 ΜΩ 2Ω — 200 kΩ 10Ω — 10 kΩ	50 pF** 10 #F	500 μH — 100 H

\*Low R and L limits are increased and upper C limit decreased by 10:1 for 1-V test voltage and by 100:1 for 3-V. \*\*To 0.1 pF by substitution method.

**Resolution:** Meter, 0.003% and 0.00003 radian. Analog-voltage output, 0.001% and 0.00001 radian. **Accuracy:** 3% of full scale.

Voltage Across Standard and Unknown: 0.3, 1, or 3 V selected by

front-panel control. Test voltage of 2 V (with 0.6 and 6 V) can be obtained on special order.

Analog-Voltage Outputs: Voltages proportional to meter deflections at two rear-panel connectors:  $\pm 10$  V full scale behind < 100 for 1782 Analog Limit Comparator;  $\pm 3$  V or  $\pm 10$  V (depending on range) full scale behind 2 k $\Omega$  for DVM, A-D converter or other use. Test Speed: About 1 component per second with meter, max. With analog output voltage, about 4 components per second, except about 1 component per second at 100 Hz.

Power Required: 105 to 125 or 210 to 250 V, 50 to 60 Hz, 15 W.

Accessories Available: 1782 Analog Limit Comparator; GR decade boxes and standards of resistance, capacitance, inductance. Accessories Supplied: Multiple contact connector, and power cord

Mounting: Bench model (in metal cabinet) or rack model.

Dimensions (weight x height x depth): Bench, 19½ x 8¾ x 15 in. (495 x 225 x 385 mm); rack, 19 x 7 x 13½ in. (485 x 180 x 345 mm).

Net Weight: Bench, 40 lb (19 kg); rack, 25 lb (12 kg). Shipping Weight: Bench, 60 lb (28 kg); rack, 40 lb (19 kg).

Catalog Number	Description
1654-9700 1654-9701	1654 Impedance Comparator Bench Model Rack Model

General Radio Experimenter, May/June, 1969

specifications

#### Introduction-Section 1

1.1	PURPOSE
1.2	DESCRIPTION
1.3	CONTROLS, CONNECTORS, AND INDICATORS
1.4	ACCESSORIES SUPPLIED
1.5	ACCESSORIES AVAILABLE
1.6	DEFINITIONS AND ABBREVIATIONS
1.7	GENERAL RECOMMENDATIONS

#### 1.1 PURPOSE.

The 1654 Impedance Comparator indicates on large panel meters, and by analog output voltages, the difference in magnitude and phase angle between two external impedances, usually a standard and an unknown. These measurements are made rapidly and easily because no bridge-balancing operation is necessary. Wide ranges of impedance, resistance, capacitance, and inductance can be compared.

Because the 1654 is a transformer bridge, its accuracy is little affected by loading or by stray impedance. The precision possible when precise impedance standards are used, results in a system that can replace many intricate measurement setups in the laboratory and simplify most measurement procedures.

With an adjustable standard, the 1654 can be brought to a null, thus allowing for determination of transfer impedances of three-terminal networks. When the comparator is nulled, impedance shunting of the detector does not affect the balance, and the effect of impedance shunting the ratio arms is usually negligible due to the tight coupling of these arms.

Because the impedance-difference information is provided continuously, the measurement of changes in impedance due to environmental changes is greatly simplified. With a suitable analog recorder, such as the GR 1522, a record of the data can be easily made. The combination of measurement speed, wide range, and high accuracy make the 1654 particularly useful for manual, semi-or fully-automatic selection and sorting applications, as well as intricate laboratory measurements.

Some typical uses are: rapid sorting and matching of precision components and networks, measuring the effects of time and environment on components, testing of the tracking of ganged potentiometers and variable capacitors, and studying the frequency dependence of components. Comparison of quantities usually requiring laboratory techniques are easily made, such as: small impedance differences, D of low-loss dielectric materials, D of inductors, Q or phase angle of wire-wound resistors and potentiometers, balance of transformer windings, semiconductor capacitances, and capacitance drift with temperature.

#### **1.2 DESCRIPTION.**

The instrument is basically a self-contained, bridgemeasurement system consisting of a signal source, a bridge network, and a detecting circuit. The bridge network consists of the two external impedances to be compared and two highly precise unity ratio arms. Because of the inherent accuracy of the bridge, the measurement accuracy depends largely on the precision of the external standard.

Because the 1654 measures differences to an accuracy of 3% of full scale, the measurement accuracy and resolution as a percent of the total impedance are considerably better. The detector sensitivity permits measurements to 0.003% and 0.00003 radian, an order-of-magnitude more accurate than that of most precision impedance bridges.

The bridge circuit is not adjusted for a balance; instead, the unbalance voltage is measured to give the required impedance-difference information. The detector is phase sensitive and it selects those vector components of the unbalance voltage that are proportional to the impedancemagnitude difference in percent, as well as the phase-angle difference.

The metering circuit and the analog output voltage for the magnitude channel of the 1654 have been linearized to ensure accurate readings without correction for up to 30% impedance differences. Solid-state circuits are used in the

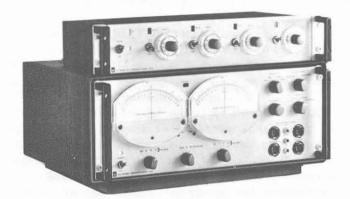


Figure 1-1. Typical 1654/1782 sorting system.

1654 so that drift of the meter zero is negligible, thus permitting more certain accuracy and fewer interruptions for readjustment.

The combination of four fixed frequencies from 100 Hz to 100 kHz, with a wide impedance range and several difference ranges, results in a flexible and extremely versatile impedance comparator.

The GR 1782 Analog Limit Comparator is available as an accessory for increasing the speed at which the 1654 operates when used for sorting applications (see Figure 1-1).

#### 1.3 CONTROLS, CONNECTORS, AND INDICATORS.

The controls, connectors, and indicators described in Table 1-1 are located on the front panel of the 1654 Impedance Comparator (see Figure 1-2):

The contols and connectors described in Table 1-2 are located on the rear panel of the 1654 (see Figure 1-3).

#### 1.4 ACCESSORIES SUPPLIED.

Accessories normally supplied with the 1654 Impedance Comparator are listed in Table 1-3.

#### 1.5 ACCESSORIES AVAILABLE.

Table 1-4 lists accessories that are available for use with the 1654 comparator.

A variety of GR patch cords and adaptors are also available for the use with the 1654; refer to Table 1-5.

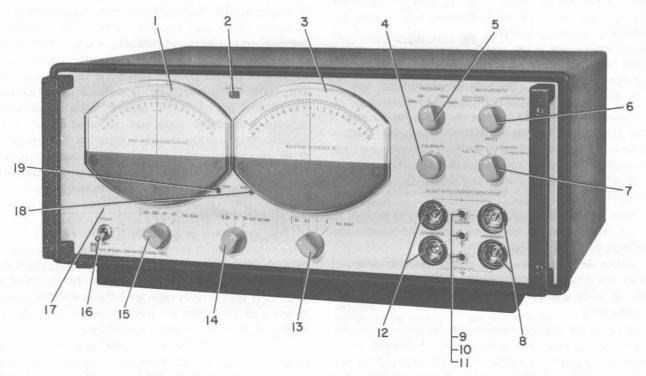


Figure 1-2. Controls, connectors, and indicators on the front panel of the 1654 comparator (refer to Table 1-1).

Fig. 1-2 Reference	Name	Description	Function
1	PHASE ANGLE DIFFERENCE- RADIANS	Meter with zero adjust (screwdriver adjustment) in center of lower panel (19)	Indicates phase-angle difference; a + reading indicates that the un- known has a larger phase angle than the standard, where $\theta$ is positive in the ccw direction on the conventional complex-impedance plane. If $D_s$ and $D_x$ (or $Q_s$ and $Q_x$ )are both $\leq 0.1$ and $\Delta Z \leq 10\%$ , $\Delta \theta$ can be interpreted direct- ly as $\Delta D$ or $\Delta Q$ with negligible error.
2	OFF SCALE	Incandescent lamp- operated indicator	Lights when bridge unbalance exceeds about 80% for 0.3-V test voltage, 20% for 1-V test voltage, and 6% for 3-V test voltage.
3	MAGNITUDE DIFFERENCE-%	Meter with zero adjust (screwdriver adjustment) in center of lower panel (18)	Indicates magnitude difference; a + reading indicates that the unknown has a higher impedance than the standard.
4	CALIBRATE	Potentiometer, continuous knob adjustment	Used to calibrate the instrument for 1% (full scale) with the INPUT switch set at CAL 1% and the MAGNITUDE DIFFER- ENCE/FULL SCALE control (13) set at 1.
5	FREQUENCY	Rotary switch, four- position	Provides selection of four measurement frequencies: 100 Hz, 1 kHz, 10 kHz, and 100 kHz.
6	MEASUREMENT	Rotary switch, two- position	Provides selection of RESISTANCE/ INDUCTANCE or CAPACITANCE measurement.
7	INPUT	Rotary switch, four- position	Provides choice of four operations: CAL 1% - provides 1% unbalance voltage to input. ZERO - shorts input to ground, thus permitting both channels to be zeroed. GUARDED - The outer conductors of the upper GR874 connector pair are driven at nearly the same potential as the inner conductors. UNGUARDED - the outer conductors of the upper GR874 connector pair are grounded.
8	UNKNOWN	GR874 locking connectors, a pair	For connection of the unknown imped- ance to the bridge circuit.

#### TABLE 1-1 FRONT-PANEL CONTROLS, CONNECTORS, AND INDICATORS

#### TABLE 1-1 (cont) FRONT-PANEL CONTROLS, CONNECTORS, AND INDICATORS

Fig. 1-2 Reference	Name	Description	Function
9	GUARD	Jack, guard (accepts banana plug)	Guard voltage available at this jack when the INPUT control is switched to GUARDED.
10		Jack, ground (accepts banana plug)	Chassis ground.
11		Jack, floating (accepts banana plug)	Means of connecting to guard or ground when measuring high impedances.
12	STANDARD	GR874 locking con- nectors, a pair	For connection of the impedance standard to the bridge circuit.
13	0.1, 0.3, 1, 3, 10, 30 FULL SCALE	Rotary switch, four- position	Selects deviation range to be read on MAGNITUDE DIFFERENCE- % meter.
14	0.3 V, 1V, 3V TEST VOLTAGE	Rotary switch, three- position	Provides selection of test voltages.
15	.001, .003, .01, .03 0.1, 0.3 FULL SCALE	Rotary switch, four position	Selects deviation range to be read on PHASE ANGLE DIFFERENCE meter.
16	POWER/OFF	Toggle switch, two- position	Applies or interrupts line-voltage supply to the instrument.
17	POWER	Incandescent lamp	Lights when power is applied to the instrument
18	ZERO	Potentiometer, con- tinuous screwdriver adjustment	Means of adjusting meter zero of MAGNITUDE DIFFERENCE channel when INPUT control is set at ZERO.
19	ZERO	Potentiometer, con- tinuous screwdriver adjustment	Means of adjusting meter zero of PHASE ANGLE DIFFERENCE channel when INPUT control is set at ZERO.

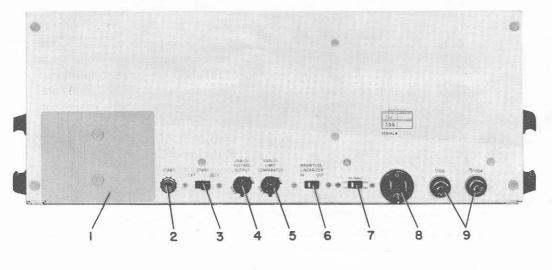


Figure 1-3. Controls and connectors on the rear panel of the 1654 comparator (refer to Table 1-2).

Fig. 1-3 Reference	Name	Description	Function
1	STANDARD/UNKNOWN	Connector cover plate	Covers opening for STANDARD and UNKNOWN jacks and GR874 connectors when connection is made on other panel. Example; cover used on rear panel when connectors are located on front panel.
2	START	Phone jack, two- terminal	A momentary short between phone- jack terminals starts measurement when START switch (3) is set at EXT. For connection to remote- start unit, such as the 1680-P1 Test Fixture.
3	START EXT/SELF	Slide switch, two position	Selects either external start by contact closure or self start for automatic indication as soon as the unknown is connected to the UN- KNOWN terminals.
4	ANALOG VOLTAGE OUTPUT	Socket, five-pin	Connection to output voltages that are proportional to meter deflections, ±3-V or ±10-V full scale. For con- nection to digital voltmeter or recorder.
5	ANALOG LIMIT COMPARATOR	Socket, seven-pin	Connection to output voltages that are proportional to meter deflections, ±10-V full scale. For connection to 1782 Analog Limit Comparator.
6	MAGNITUDE LINEARIZER IN/OUT	Slide switch, two- position	Switches, in or out, the compensa- tion network in the magnitude channel for nonlinearity of the bridge In normal operation, the switch shoul be set to IN.
7	50-60 Hz	Slide switch, two- position	Selects 115-V or 230-V, 50-60 Hz operation.
8		Power plug, three- pin	Power-line connector, accepts power cord supplied.
9		Fuse, Slo-Blo, 0.15 A for 115-V opera- tion, 0.1 A for 230-V operation	Over-load and short-circuit protection

#### TABLE 1-2 REAR-PANEL CONTROLS AND CONNECTORS

#### TABLE 1-3 1654 ACCESSORIES SUPPLIED

Quantity	Description	Part Number				
1	Hardware Set, for installation of rack-mount instrument	4174-2000				
1	Power Cable, 3-wire, 7 foot, for connecting instrument to power source	4200-9622				
1	Multiple-Contact Connector, 5-contact, for connecting DVM, recorder, etc. to ANALOG VOL- TAGE OUTPUT socket on rear panel	4220-5401				
A	panel EFINITIONS AND ABBREVIATION complex impedance may be written					
Cartes	ian form:					
Z =  Z	$ e^{j\theta} = R + jX$					
where	Z = complex impedance  Z  = magnitude of impedance $\theta = \text{obase angle of impedance}$					

#### $\theta$ = phase angle of impedance

R = Real part of impedance										
X = imaginary part of impedar	nce or equi-									
valent series reactance										

Relationships between the two forms are:

$$|Z| = \sqrt{R^2 + X^2} \qquad R = |Z| \cos \theta$$
$$\theta = \tan^{-1} X/R \qquad X = |Z| \sin \theta$$

Likewse, a complex admittance can be written in two forms:

$$Y = |Y| e^{j\theta} = G + jB$$

where Y = complex admittance |Y| = magnitude of admittance  $\phi = \text{phase angle of admittance}$  G = real part of admittance or equivalentparallel conductance B = imaginary part of admittance or

equivalent parallel susceptance

#### TABLE 1-4ACCESSORIES AVAILABLE

Name	GR Type	Description
Analog Limit Comparator	1782	Increases the speed of the 1654 for use in sorting applications. The 1782 compares the analog-voltage output of the 1654 against high and low limits and displays GO or NO GO lights for manual sort- ing. Models with optional relay contacts are available for auto- matic sorting.
Test Fixture	1680-P1	Facilitates rapid connection of unknown capacitors to the 1654 for manual sorting.
Dielectric Sample Holder	1690-A	Holder for convenient measure- ment of dielectric constant, dissipation factor, and volume resistivity of dielectric materials.
Standard Capacitors	1422	Variable, two- or three-terminal standard. The 1422 series of standards cover a range of 0.005 pf to 1150 pF.
Decade Capacitors	1423 1424 1425	Two- or three-terminal standards. 1423: 100 pF to 1.111 $\mu$ F in 100 pF steps 1424: 10 $\mu$ F in 1 $\mu$ F steps 1425: 100 $\mu$ F in 10 $\mu$ F steps
Decade Inductor	1491	Two- or three-terminal standard. The 1491 series covers a range of 0.0001 H to 11.111 H.
	1440	Fixed, two-terminal standard. The 1440 series cover a range of 1 $\Omega$ to 1 M $\Omega$ .
Standard Resistors	1433	Variable, two- or three-terminal decade box. The 1433 series cover a range of 0.01 $\Omega$ to + 11M $\Omega$ .
Coupling Probe	874-MB	Adaptor consisting of a binding post mounted on an 874 coaxial connector
Adaptor Plate	1654- 9600	Rermits connection of unknowns with 3/4 in. lead spacings

The relationships between the two forms become:

$$|Y| = \sqrt{G^2 + B^2} \qquad G = |Y| \cos \phi$$
  
$$\phi = \tan^{-1} \frac{B}{G} \qquad B = |Y| \sin \phi$$

Relationships between the impedance and admittance are:

$$Y = \frac{1}{Z} \qquad |Y| e^{j\phi} = \frac{1}{|Z| e^{j\theta}}; |Y| = \frac{1}{|Z|}$$
$$\phi = -\theta \qquad \frac{B}{G} = -\frac{X}{R}$$

The MAGNITUDE DIFFERENCE meter, which will be referred to as the  $\Delta Z$  meter, reads:

$$\frac{|Z_{x}| - |Z_{s}|}{|Z_{x}| + |Z_{s}|} = -\frac{|Y_{x}| - |Y_{s}|}{\frac{|Y_{x}| + |Y_{s}|}{2}}$$

where the subscripts x and s refer to the unknown and standard components. These expressions give the difference in impedance or admittance magnitude as a percent of the average of the magnitudes of the standard and unknown. If the percent difference is small, these expressions are equal to

$$\frac{|\mathsf{Z}_{\mathsf{x}}| - |\mathsf{Z}_{\mathsf{s}}|}{|\mathsf{Z}_{\mathsf{s}}|} \text{ and } - \frac{|\mathsf{Y}_{\mathsf{x}}| - |\mathsf{Y}_{\mathsf{s}}|}{|\mathsf{Y}_{\mathsf{s}}|}$$

with negligible error. (Since it is desirable to indicate the magnitude difference as a percent of the standard, the larger deviations have been linearized to compensate for the usual nonlinearity of the bridge output.)

These expressions will be referred to as  $\frac{\Delta|Z|}{|Z|}$  and  $\frac{\Delta|Y|}{|Y|}$  or, more simply,  $\Delta Z$  and  $\Delta Y$ . A positive reading, therefore, indicates that the unknown is a larger impedance or a smaller admittance.

If pure elements are measured (R, L, or C), the  $\Delta Z$  indication can be interpreted as a percent difference in resistance or reactance. The reactance difference in percent is equal to the inductance or capacitance difference in percent.

If the compared components are not pure, an error may result in interpreting the  $\Delta Z$  reading as a  $\Delta R$ ,  $\Delta L$ , or  $\Delta C$  if the angle of the standard or unknown is over 0.01 radian; that is, if D (for inductors or capacitors) or Q (for resistors) is greater than 0.01. (Refer to paragraph 3.15.)

The PHASE ANGLE DIFFERENCE meter, which will be referred to as the  $\Delta\theta$  meter, reads  $\theta_x - \theta_s = -(\phi_x - \phi_s)$  in radians.

The phase angle,  $\theta$ , is taken as positive in the counterclockwise direction on the complex inpedance plane. (See Figure 1-4.) Therefore, a positive  $\Delta \theta$  indicates that the unknown is more inductive (or less capacitive) than the standard. Thus the reactance is positive if inductive (+j $\omega$ L) and negative if capacitive (-j  $\frac{1}{\omega C}$ ).

If relatively pure elements (C, R, or L) are measured (D or Q less than 0.1 or larger than 10),  $\Delta\theta$  can be interpreted as a D or Q difference with negligible error. The instrument indicates whichever quantity is less than 0.1.

For inductors and resistors, we will define

$$Q = \frac{X}{R} = -\frac{B}{G} \qquad D = \frac{1}{Q} = \frac{R}{X} = -\frac{G}{B}$$

For capacitors, we will define

$$D = -\frac{R}{X} = \frac{G}{B}$$

(The minus sign is necessary to make the D of capacitance be positive, since  ${\rm X}_{\rm c}$  is negative.)

Figure 1-5 defines D and Q in terms of series or parallel elements.

Table 3-4 should be of help in determining the correct sign for the various measurements. However, it is usually simple enough to determine the correct sign by remembering that:

1. A positive  $\Delta Z$  indicates that the component on the unknown terminals is the larger impedance.

2. A positive  $\Delta \theta$  indicates that the unknown has the larger phase angle where  $\theta$  is positive in the counterclockwise direction on the conventional complex Z plane.

#### **1.7 GENERAL RECOMMENDATIONS.**

The general operation of this instrument is simple and straightforward. However, this instruction book does contain many graphs and charts, which are useful at the extremes of the various ranges and which are helpful in interpreting the meter indications. If the operation of the instrument is understood, reference to these charts is often unnecessary.

Measurement errors are most likely to result from either of two causes:

1. The standard and unknown impedances are so large that the input impedance of the detecting circuit affects the measurement (refer to paragraph 3.11).

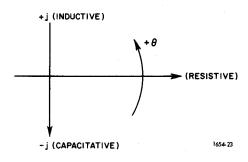


Figure 1-4. Definition of sign of  $\theta$ .

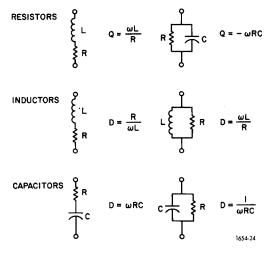


Figure 1-5. Definition of D and Q for series and parallel elements.

2. A very small  $\Delta \theta$  is to be observed in the presence of a large  $\Delta Z$ , or vice versa (refer to paragraph 3.13).

Interpreting the meter indications can cause an error if:

1. The  $\Delta Z$  indication is over 3% and the MAGNITUDE LINEARIZER switch is in the OUT position.

2. The meter indications are interpreted in other than polar form, when  $\Delta \theta$  is large (refer to paragraphs 3.15 and 3.16).

One point should perhaps be emphasized. Occasionally, the bridge will give an indicator reading that may seem, intuitively, to be in error. Experience has shown that the bridge is correct. It is particularly important to know what is being measured and to make sure that the external components are connected properly. Most difficulties reported with similar instruments result from errors introduced by improper connection of the unknown.

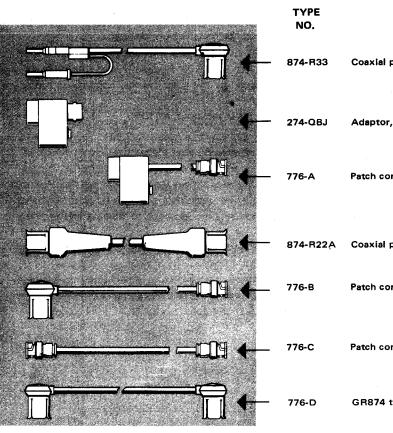


TABLE 1-5 AVAILABLE INTERCONNECTION ACCESSORIES

'Е	DESCRIPTION	CATALOG NO.
733	Coaxial patch cord, two plugs to GR874, 36" long	0874-9690
2B1	Adaptor, shielded double plug to BNC jack	0274-9884
A	Patch cord, shielded double plug to BNC plug, 36" long	9 0776-9701
722A	Coaxial patch cord GR874 to GR874, 36" long	0874-9682
3	Patch cord, GR874 (right-angle) to BNC plug, 36" long	0776-9702
;	Patch cord, BNC plug to BNC plug, 36" long	0776-9703
D	GR874 to GR874, both right-angle, 36" long	0776-9704
		274-13XA

2**-**69

#### Installation-Section 2

2.1	GENERAL					•	•						. 2-	1
2.2	DIMENSIONS			•						•			. 2-	1
2.3	BENCH MODELS	•											. 2-	2
2.4	RELAY-RACK MODELS					•	•						. 2-	3
2.5	POWER-LINE CONNECTION .												. 2-	4
2.6	TEST CONNECTORS AT REAR												. 2-	4
2.7	LINE-VOLTAGE REGULATION												. 2-	5

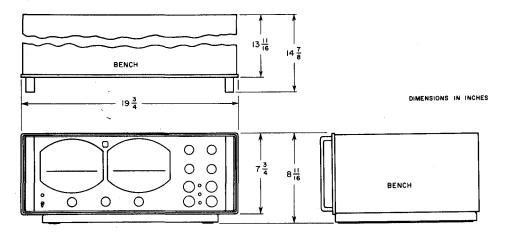


Figure 2-1. Dimensions of the bench model 1654 Impedance Comparator.

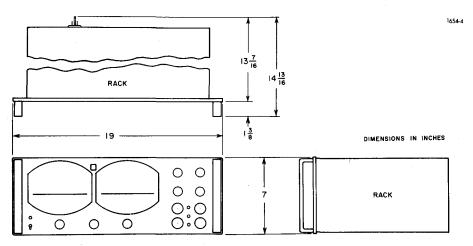


Figure 2-2. Dimensions of the relay-rack model 1654 Impedance Comparator.

#### 2.1 GENERAL.

The 1654 Impedance Comparator is available for either bench use or for installation in an EIA standard 19-in. relay rack with universal spacing. The connectors for the standard and unknown test component are normally installed in the front panel, but these connectors can be removed and reinstalled in the rear panel. Appropriate accessories and mounting hardware are available for conversion of the bench model for relay-rack use, or for conversion of the relay-rack model for bench use.

#### 2.2 DIMENSIONS.

The dimensions of both the bench and relay-rack models of the 1654 are given in Figures 2-1 and 2-2.

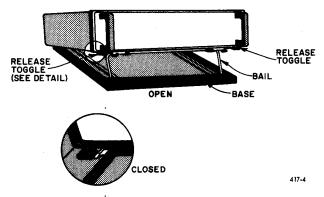


Figure 2-3. The 1654 tilted for better view of frontpanel controls and indicators.

#### 2.3 BENCH MODELS.

#### 2.3.1 Mounting.

The bench models of the comparator are delivered completely assembled in a metal cabinet, ready for bench use. A convenient bail, located along the bottom front edge of the instrument, can be pulled down to raise the front and provide a better view of the front-panel meters and indicators (see Figure 2-3). To tilt the instrument, proceed as follows:

a. Place the right thumb on the right-hand release toggle and the left thumb on the left-hand release toggle under the front corners of the instrument.

b. Push both release toggles toward the rear as far as they will go.

c. Using the rear of the base as a pivot, lift the front of the instrument, permitting the bail to drop down on the base.

d. With one hand, hold the instrument in the tilted position; with the other, pull the bail forward as far as it will go and carefully lower the instrument. The bail is now locked place and the instrument will remain in the tilted position.

Reverse this procedure eliminate the tilt. Be sure the toggles are pushed back, toward the rear of the instrument.

Then lower the front carefully onto the base. Lock the base to the bottom of the instrument by sliding the toggles forward.

#### 2.3.2 Cabinet Removal.

To remove a bench-model instrument from its cabinet: Remove the four panel screws (A, Figure 2-4), two on each side of the front panel. These are No. 10-32, 9/16-in. screws, with nylon washers. To loosen them, insert a Phillips-head screwdriver through the holes in the handles, as shown in the figure. Then pull the instrument forward, out of the cabinet.

#### 2.3.3 Conversion For Rack Use.

To convert a bench model for relay-rack use, order from GR one Rackable Cabinet Assembly (refer to Table 2-1). Then proceed as follows:

a. Disconnect all cables from the rear of the instrument, remove the four panel screws (A, Figure 2-4), and pull the

#### TABLE 2-1 RACKABLE CABINET (P/N 4174-3144)

Quantity	Description	Part Number
2	Cover	4174-8012
2	Side Pan	4174-8144
12	Screw, thread-forming, 8-32, 1/4	7170-1304
1	Hardware Set, consisting of:	4174-2402
4	Rivet, blind, 0.156 x 0.254	
2	Track, modified	
1	Hardware Set, consisting of:	4174-2002
4	Nut, hex, 10-32	
4	Screw, thread-forming, 8-32, 1/4	
4	Screw, dress-panel, 10-32, 9/16	
4	Washer, No. 10	
4	Washer	

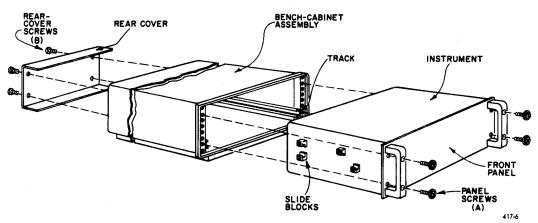


Figure 2-4. Cabinet removal and conversion for rack mounting.

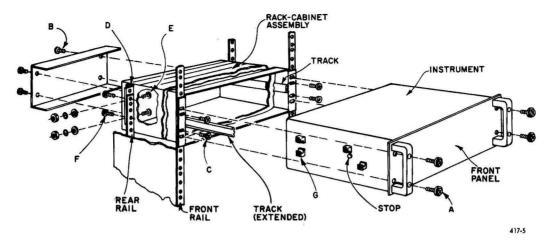


Figure 2-5. Relay-rack installation.

instrument forward, out of the cabinet (refer to paragraph 2.3.2).

b. From the rear, remove the four screws (B) holding the rear cover to the bench cabinet and remove the cover.

c. Proceed with the relay-rack installation, as given in paragraph 2.4.1.

#### 2.4 RELAY-RACK MODELS.

#### 2.4.1 General.

Relay-rack models of the comparator are supplied with Rackable Cabinet Assembly, P/N 4174-3144, and Hardware Set, P/N 4174-2000. The items in the Hardware Set are listed in Table 2-2.

#### 2.4.2 Installation.

To install a rack-model instrument in an EIA standard RS-310 19-in. relay rack, with universal mounting-hole spacing, proceed as follows:

a. Remove the four panel screws (A, Figure 2-5) slide the instrument forward, out of the rack cabinet, until it stops. Raise the front edge slightly to release the stops. The instrument can then be completely removed from the rack cabinet.

b. From the rear, remove the rear-cover screws (B) holding the rear cover to the rack cabinet and remove the cover.

c. Insert the rack cabinet in the rack and secure it to the front rails of the rack with the four front-support screws (C).

d. If the rack contains a rear support, attach the brackets (D) to the rack cabinet, using the rear support screws (E), with washers and nuts. Insert the screws from inside the rack cabinet through the slotted holes in the bracket. Use the set of slots in the cabinet that properly aligns holes in the brackets with holes in the rear rail of the relay rack.

e. Secure the brackets to the rear rails, using the rearbracket screws (F).

f. Place the rear edge of the instrument in the rack cabinet so that the rear slide blocks (G) engage the track. Slide the instrument into the cabinet, making sure that the front slide blocks also engage the tracks. Lock the instrument in the cabinet with the four panel screws (A) with nylon washers. (Tighten these screws by inserting a Phillipshead screwdriver through the holes in the handles).

g. Replace the rear cover and lock it in place using the rear-cover screws (B).

By removing the four panel screws (A), one can slide the instrument forward, out of the rack cabinet on the extend-

TABLE 2-2
HARDWARE SET SUPPLIED WITH RACK MODEL
(P/N 4174-2000)

Fig. 2.5 Ref.	Quantity	Description
D	2	Brackets, L-shaped
Е	8	Screws, binder-head, 10-32
	8	*Washers, flat, No. 10
	8	*Washers, locking, No. 10
	8	*Nuts, hex, 10-32
F	4	Screws, pan-head, thread-cutting 10-32, 1/2 in. for rear bracket where required.

\*For use with 10-32 screws as required.

.

1

able tracks (see Figure 2-5). The tracks will still support the instrument for easy access to its interior.

#### 2.4.3 Conversion For Bench Mounting.

To convert a relay-rack model for bench use, order a Bench Cabinet Assembly complete. Then, remove the rear-cover screws (B, Figure 2-5) and remove the rear cover. Follow the reverse procedure described in para-graph 2.3.2.

#### 2.5 POWER-LINE CONNECTION.

With the comparator placed in position on a bench or in a relay rack, set the recessed slide switch (7, Figure 1-3) on the rear panel to the range corresponding to the power-line voltage to be used Connect the instrument to the power source using the 3-terminal power cord supplied (P/N 4200-9622, Table 1-3). Turn on the POWER/OFF switch on the front panel

Two Slo-Blo fuses are installed in the fuse holders on the rear panel A 1/10-A fuse is used for 230-V operation; a 15/100-A fuse is used for 115-V operation (9, Figure 1-3).


#### 2.6 TEST CONNECTORS AT REAR.

#### 2.6.1 General.

The STANDARD and UNKNOWN connectors, as well as the three jacks (8 through 12, Figure 1-2) are normally mounted on the front panel For some applications, it may be desirable to connect the test components at the rear of the instrument; this can be done by removing these connectors (as a single unit) and remounting them in the openings provided under the cover plate (1, Figure 1-3) on the rear panel The following paragraphs described this procedure.

#### 2.6.2 Procedure.

First remove the cabinet (refer to paragraph 2.3.2) and turn the instrument upside down.

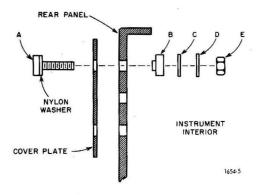



It is assumed that the connectors are to be removed from the front panel and installed at the rear. If the connectors are to be moved from the rear to the front panel, the procedure is essentially the same.

The procedure is as follows:

a. On the rear panel: remove the two sets of Phillipshead screws and their associated nylon washers (A, Figure 2-6), nylon washers (B), flat washers (C), lockwashers (D), and nuts (E).

b. Remove the cover plate and retain all parts.

c. On the front panel (see Figure 2-7): Remove and retain the upper and lower (not the center or ground jack) jacks with nylon washers (F), flat washers (G), lockwashers (H), and nuts (I).

#### NOTE

The bottom (GUARD) jack is not secured with a nut; it is threaded into a tapped hole in a spacer block that is attached to the connector unit.

 d. Slide the connector unit, containing the four GR874 connectors, back and out.

e. Remove the ground (center) jack and install it in the center hole in the rear panel.

f. Refer to Figure 2-8. Remove the plastic cable-holder clip with a Phillips-head screwdriver and retain all parts.

g. Swing the connector arount (180°, horizontally) and slide it into position in the rear panel.

#### NOTE

Be sure to insert the correct set of GR874 connectors into the appropriate openings in the rear panel. Make note of the colored leads attached to each set of connectors; blue for the UNKNOWN set and orange for the STAND-ARD set.

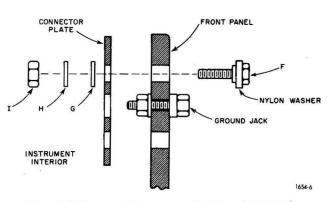


Figure 2-7. Removal of connector plate from front panel.

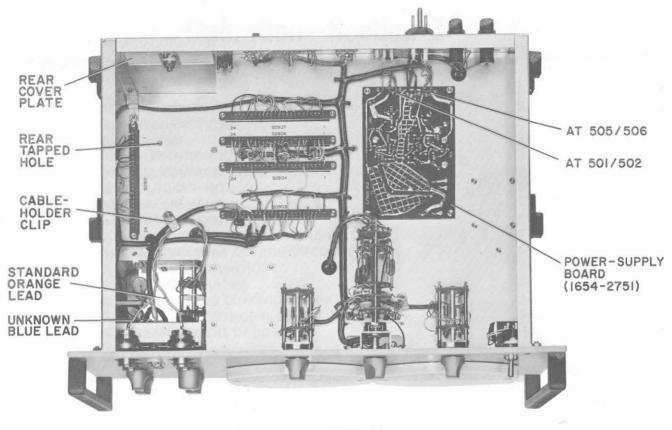


Figure 2-8. Bottom interior of 1654 with connectors installed in the front panel.

h. Refer to Figure 2-7. Install the two jacks (parts F through I) that were previously removed from the front panel.

#### CAUTION

Prevent accidental grounding of the GR874 connectors; be sure that the metal connectors and their mounting plates do not touch the rear panel when the upper and lower jacks are secured.

i. Install the plastic cable-holder clip, previously removed in step f, in the rear tapped hole (see Figure 2-8).

j. Mount the cover plate (see Figure 2-6) on the front panel, using the previously removed hardware (parts A through E).

The instrument is now ready for installation in a relay rack, or for bench use, once it is reinstalled in its cabinet.

#### 2.7 LINE-VOLTAGE REGULATION.

The accuracy of measurements accomplished with precision electronic test equipment operated from ac line sources can often be seriously degraded by fluctuations in primary input power. Line-voltage variations as great as  $\pm 5\%$  are commonly encountered, even in laboratory environments.

Although most modern electronic instruments incorporate some degree of line-voltage regulation, serious consideration to possible power-source problems should be given for every instrumentation set-up. The use of linevoltage regulators between power lines and the test equipment is recommended to prevent undesirable effects of low line voltage, transients, and other power phenomena.

The General Radio 1591 Variac® Automatic Voltage Regulator is a compact and inexpensive instrument that is capable of regulating ac power within ±0.2% accuracy for up to a rack full of solid-state instrumentation. The 1591 has a basic capacity of 1 kVA, with no distortion of the input waveform. This rugged electro-mechanical regulator is available for bench or rack use, both of which permit direct plug-in of measurement-instrument power cords.

Further details can be found in the GR catalog, or in the GR *Experimenter* for October, 1967.

#### **Operation**-Section 3

3.1 GENERAL	1
3.2 CONNECTION OF STANDARD AND UNKNOWN	1
3.3 FREQUENCY SELECTION	
3.4 ZEROING	
3.5 CALIBRATION	
3.6 TEST-VOLTAGE AND RANGE SELECTIONS	
3.7 GUARD CIRCUIT	
3.8 MEASUREMENT	
3.9 RANGES AND ERRORS	
3.10 MEASUREMENT OF LOW IMPEDANCES	
3.11 MEASUREMENT OF HIGH IMPEDANCES	
3.12 LARGE △Z DEVIATIONS	3
3.13 POSSIBLE ERRORS	3
3.14 UNBALANCED LOADING ON TRANSFORMER	7
3.15 MEASUREMENTS OF R, L, and C DIFFERENCES	
3.16 MEASUREMENT OF $\Delta D$ and $\Delta Q$	)

#### 3.1 GENERAL.

The operating procedure in paragraphs 3.1 thru 3.8 is the general procedure for comparing components that are well within the ranges of the 1654 Impedance Comparator. For measurement of impedances at the extremes of the range and for error corrections, refer to paragraphs 3.9 thru 3.16. For special measurements and applications, refer to Section 4.

Install the bridge as described in Section 2 and turn the POWER/OFF switch on. When the instrument is first turned on, the meters will momentarily indicate off-scale and the OFF SCALE indicator lamp will light. After a few seconds, the meter pointers should come to rest near zero (midscale) if the INPUT switch is set to ZERO.

Although measurements can be made as soon as the bridge is operative, it is desirable to wait about 30 seconds to stabilize the oscillator and meter circuits. After this period of time, the meter drift should be very small and rechecking of the zero is not necessary except for the most precise measurements using the most sensitive deviation range.

#### 3.2 CONNECTION OF STANDARD AND UNKNOWN.

Because so many different types of components can be measured with this comparator, it is impossible to design a suitable terminal arrangement to accomodate all measurements. The terminals on the instrument itself were designed to have small capacitance. For measurements unaffected by

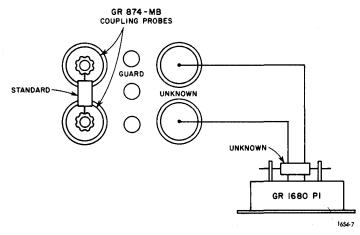


Figure 3-1. Test setup using the 1680-P1 Test Fixture and 874-MB Coupling Probes.

a moderate amount of input capacitance, connections can be simplified by means of the GR 1680-P1 Test Fixture for the unknown and two GR 874-MB Coupling Probes or an adaptor plate (refer to Table 1-4) for the standard, as shown in Figure 3-1.

When low-impedance measurements are made, it is necessary to make sure that the connections have negligible resistance. In some cases, it is desirable not to use the 1680-P1 Test Fixture due to lead and contact impedances. Direct connection can be made using GR 874-MB Coupling Probes.

For high-impedance measurements, it is desirable not to add any capacitance to ground from the common terminal (refer to paragraph 3.11). If the unknown is encased and the case is connected to one terminal, it is desirable to connect this terminal to a transformer terminal. Note also that capacitance between leads connecting external components effectively changes the value of these components. Special jigs will be required for some applications. Remember that such a jig will be in the bridge circuit so that series impedance and stray capacitance should be carefully considered.

that resetting is usually not necessary. At 100 Hz, the calibration level is about 3% lower than 1 kHz. At 100 kHz, the calibration level is about 6% higher than at 1 kHz.

When low impedances (below 20  $\Omega$ ) are being measured, it is desirable to set the calibration level with the external components connected (refer also to paragraph 3.10).

### **3.6 TEST-VOLTAGE AND RANGE SELECTIONS.**

Test voltage and measurement ranges are related and their panel switches are interlocked to reflect this relationship. Four measurement ranges can be used with each test voltage. The largest test voltage (3 V) gives the greatest sensitivity. The lower test voltages (1 V and 0.3 V) limit maximum sensitivity and extend large-difference capability to 10% and 30% full scale, respectively.

The desired deviation ranges are set by the MAGNITUDE DIFFERENCE and PHASE ANGLE DIFFERENCE switches. These switches indicate the full-scale value of the

## **3.3 FREQUENCY SELECTION.**

The comparator provides internal frequencies of 100 Hz, 1 kHz, 10 kHz, and 100 kHz. Set the FREQUENCY switch to the desired position.

For most measurements, it is desirable to consider the test frequency, in order that the information presented will be useful, and so that the high-impedance limitation is not exceeded (refer to paragraph 3.11).

### 3.4 ZEROING.

To zero both meters, set the INPUT switch to ZERO position and adjust the zero adjustments to set the meters to zero, with both deviation ranges set at the most sensitive range. Once the instrument is warmed up, it should not be necessary to check meter zero, except for the most precise measurements. Meter drift should be less than 1% of full scale for at least a day on the most sensitive range and negligible on the less sensitive ranges.

As the frequency is changed, the meter zeros should move less than 1% of full scale, so that rezeroing is usually not necessary.

meters.

Note that there is a possibility of error in measurement on the most sensitive range if the other meter is indicating on its least sensitive range (refer to paragraph 3.13).

## **3.7 GUARD CIRCUIT.**

The GUARDED and UNGUARDED positions of the INPUT switch are the same except for the potential of the outer conductors of the upper two 874 coaxial connectors, which are common. When the control is switched to UN-GUARDED, the outer conductors are grounded. In the GUARDED switch position, the outer conductor is driven at nearly the same potential as the inner conductor (detector input) and therefore acts as a guard circuit. This results in a substantially lower input capacitance.

With the INPUT switch in the GUARDED position, oscillation and actuation of the OFF SCALE indicator is possible when measuring some inductors. The UN-GUARDED position should be used if such oscillations occur.

#### **3.8 MEASUREMENT.**

Turn the comparator on and allow it to warm up. Zero the meters and calibrate the instrument, if necessary.

## **3.5 CALIBRATION.**

To calibrate the instrument, set the MAGNITUDE DIF-FERENCE control to 1 and the INPUT switch to CAL 1%. Adjust the CALIBRATE control to obtain the 1% (fullscale) indication on the MAGNITUDE DIFFERENCE meter. Ignore the  $\Delta \theta$  reading.

For most accurate measurements, the calibration should be rechecked if the test frequency is changed. For frequencies of 1 kHz and 10 kHz, the calibration level should be constant to about 1% as the frequency is changed, so

Connect accessory equipment, such as DVM, recorder, or 1782 Analog Limit Comparator to the rear panel and set the appropriate controls.

Set the instrument controls. Refer to Tables 1-1 and 1-2. and the above paragraphs for a complete description of the use and function of all controls on the 1654.

Connect the standard and unknown components, using appropriate test fixtures, if necessary (refer to paragraph 3.2). Set the MEASUREMENT switch to either the **RESISTANCE/INDUCTANCE** or the CAPACITANCE position, depending on the type of component to be measured.

3-2 OPERATION



With the instrument zeroed and calibrated, and the components properly connected, the meters will indicate the desired readings when the INPUT switch is set to either the GUARDED or UNGUARDED position.

## 3.9 RANGES AND ERRORS.

#### 3.9.1 General.

The remainder of this section deals with the identification and correction for possible errors, and extension of normal measurement ranges.

The FREQUENCY switch provides four test frequencies of 100 Hz, 1 kHz, 10 kHz, and 100 kHz. It is not possible to use an external oscillator for other frequencies since the phase-shift networks also depend upon the frequency. The fixed capacitors of the oscillator and phase-shift network could be changed to produce other fixed frequencies, but this is a rather complicated procedure.

## **3.10 MEASUREMENT OF LOW IMPEDANCES.**

## 3.10.1 Normal Limits.

The low end of the impedance range is limited by the power available from the transformer and the source impedance of the primary circuit. The ranges for R, L, and C values of external components are listed in Table 3-1.

It will be impossible to obtain sufficient bridge voltage to calibrate the instrument if the unknown components are of substantially lower impedance than the values in Table 3-1 (i.e., about 1/2 the values given).

As these values are approached, the bridge voltage will be slightly reduced when the components are connected, so that the calibration should be made with the components in place. At 100 kHz, the bridge voltage may actually increase with a large capacitive load due to resonance with the transformer inductance. Also, as these values are approached, there may be an increase in the error at opposite deviation extremes, due to distortion resulting from oscillator loading (refer to paragraph 3.13).

The deviation ranges provided are 0.1, 0.3, 1, 3, 10 and 30% full-scale for  $\Delta Z$ , and 0.001, 0.003, 0.01, 0.03, 0.1, and 0.3 radian full-scale for  $\Delta \theta$ .

The impedance range is quite wide. The range limitations are simple at the low end (refer to paragraph 3.10) but become more complex at the high end (refer to paragraph 3.11).

The choice of several test frequencies permits wide ranges of C and L. All these ranges are not possible at one particular frequency.


Paragraph 3.13 lists the possible errors that may occur in measurement. These errors are negligible compared with the overall 3% accuracy for most measurements.

		ABLE 3-1 AND C LI	MITS	
Frequency	Test Voltage	R (Ω)	L	C (µF)
100 Hz	0.3 V	2	5 mH	1000
	1 V	20	50 mH	100
	3 V	200	500 mH	10
✓ 1 kHz	0.3 V	2	500 <b>μ</b> Η	100
	1 V	20	5 mH	10
	3 V	200	50 mH	1
10 kHz	0.3 V	2	50 μΗ	10
	1 V	20	500 μΗ	1
	3 V	200	5 mH	0.1
100 kHz	0.3 V	10	20 μΗ	0.1
	1 V	100	200 μΗ	0.01
	3 V	1000	2 mH	0.001

It is necessary, in order to avoid errors, to make lowimpedance connections to the unknown. These connections should be made directly to the panel terminal, via GR874-MB connectors, if small deviations are to be detected. The smallest resistance difference that the comparator can detect is 0.03% x 2  $\Omega$  = 600  $\mu\Omega$ . The difference in output impedance between the two secondary windings is substantially lower than this so that it causes negligible error.

#### 3.10.2 Extending The Low-Impedance Range.

A useful method of extending the range to lower impedances is to put equal impedances (R) in series with both the standard ( $R_s$ ) and unknown ( $R_x$ ) so that the total impedance is above the limit. With this method, both the  $\Delta Z$  and  $\Delta \theta$  readings must be corrected.

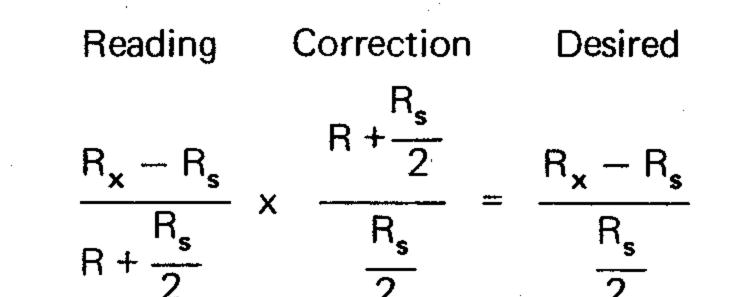

As an example, the correction for measuring resistance difference is given above. The resistors (R) need not be equal since it is possible to determine the difference and correct for it.

## 3.11 MEASUREMENT OF HIGH IMPEDANCES.

With instruments of this type, where the bridge output is measured rather than brought to a balance, the high end of the impedance range is limited by the input impedance of the detecting or measuring circuit. In this instrument, the input circuit was designed with this in mind.

**OPERATION 3-3** 



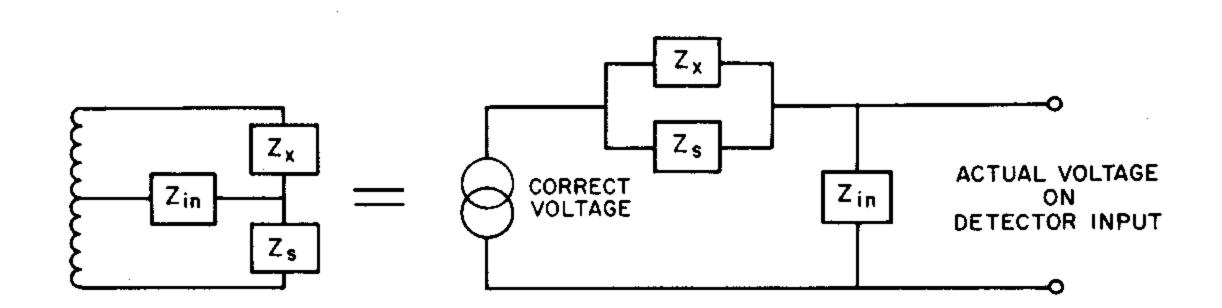



Figure 3-2. Equivalent circuit of bridge circuit loaded by the input impedance of the detector.

With the INPUT switch in the GUARDED position, the input impedance is about 1 pF in parallel with over 1000 M $\Omega$ . In the grounded position, capacitance is increased to approximately 43 pF.

The effect of this finite impedance is to attenuate the signal and shift its phase. This effect can be easily seen by the equivalent circuit of Figure 3.2. For some applications, the equivalent circuit of Figure 3-3 is useful.

The effect of the attenuation is easy to calculate. For

If we let this correction factor be:

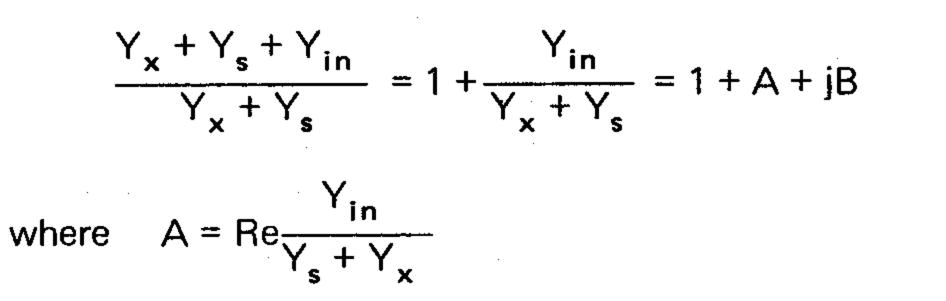

example, if the input resistance is 1000 M $\Omega$  (at such a frequency that the capacitance is negligible), there will be an error of approximately 1% when 20-M $\Omega$  resistors are measured.

The effect of the phase shift is more difficult to correct for, since it is a function of the frequency, the external impedance, and both meter readings. An unbalance voltage that was real (magnitude only), for example, would be shifted in phase, resulting in a  $\Delta\theta$  meter reading.

The charts of Figures 3-4 through 3-7 are given to show quickly the limitations for measuring various components at the various frequencies.

With an input admittance, Y<sub>in</sub>, the actual bridge voltage is proportional to:

$$-2\frac{Y_{x}-Y_{s}}{Y_{x}+Y_{s}+Y_{in}}$$

For the correct reading, a correction factor is necessary:

$$-2\frac{Y_{x} - Y_{s}}{Y_{x} + Y_{s} + Y_{in}} \times \frac{Y_{x} + Y_{s} + Y_{in}}{Y_{x} + Y_{s}}$$

$$B = Im \frac{Y_{in}}{Y_s + Y_x}$$

or since:  $Y_s \approx Y_x$ 

$$A \approx \text{Re} \frac{\text{Y}_{\text{in}}}{2\text{Y}_{\text{s}}}$$

$$B \approx Im \frac{Y_{in}}{2Y_{s}}$$

we can write:

$$\Delta Z_{T} = \Delta Z_{A} (1 + A) - B\Delta \theta_{A}$$
$$\Delta \theta_{T} = \Delta \theta_{A} (1 + A) + B\Delta Z_{A}$$

where the subscript T refers to the true value and A to the actual value read on the meters; also  $\Delta\theta$  and  $\Delta Z$  are expressed as decimals (i.e., 1% = 0.01).

Note that A and B may be positive or negative (refer to equations in Figures 3-4, 3-5, and 3-6).

The A term is the magnitude correction and causes a percent error, so that it is negligible if less than 0.02 (2%). The B term is the effect of phase shift and results in an additive error, so that its effect is worse on the most sensitive ranges.

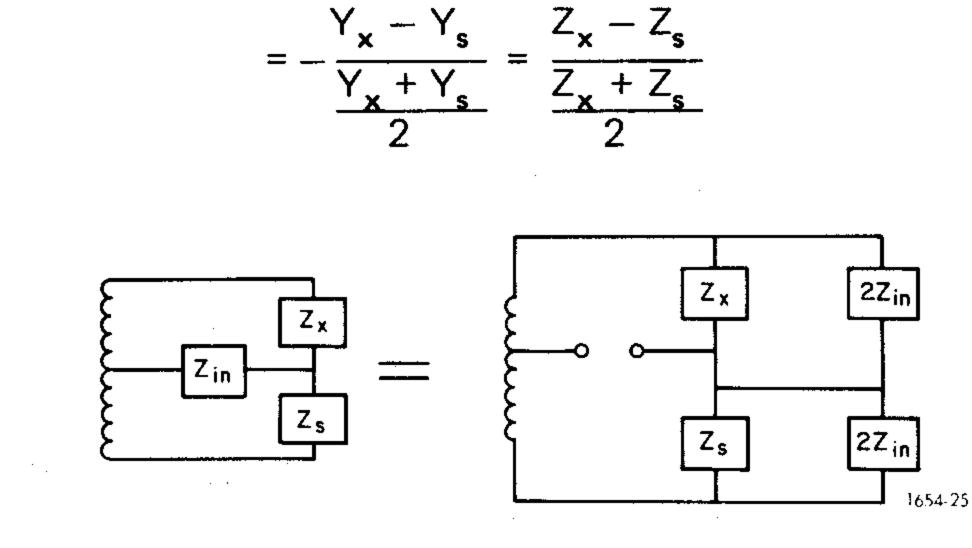
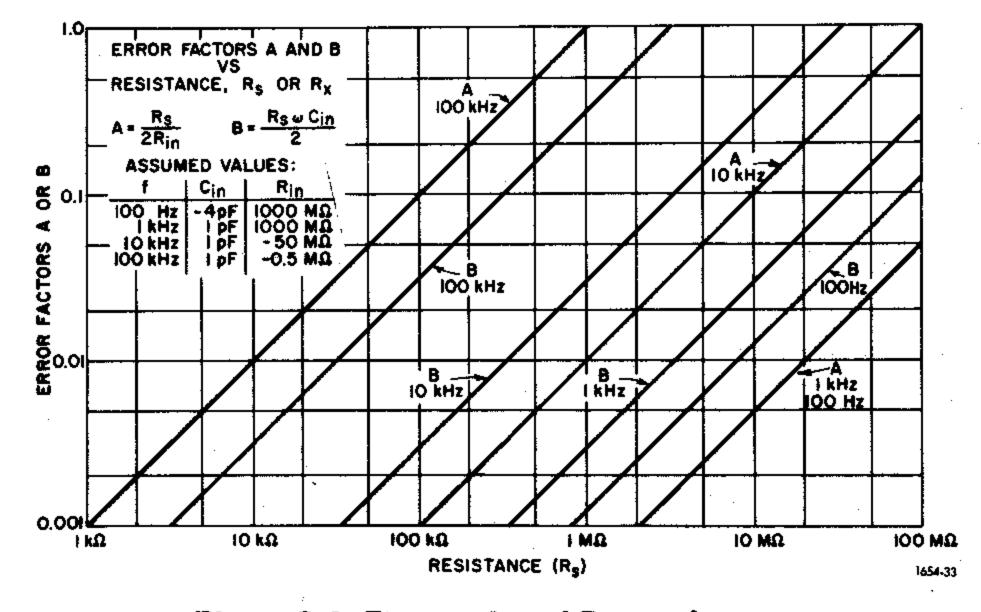


Figure 3-3. Alternate equivalent circuit of the loaded bridge circuit.

The values of A and B are plotted in Figures 3-4, 3-5, and 3-6 for different types of components (R, C, and L) at different frequencies with a nominal input impedance of 1 pF in parallel with 1000 M $\Omega$ .

The error terms involving B above, also include the reading of the other meter. This means that to find the  $\Delta Z$ error, one has to know  $\Delta \theta_A$  as well as B. It is easy to calculate B $\Delta Z$ , or B $\Delta \theta_A$ , or the chart of Figure 3-7 can be used to avoid mistakes.

## **3-4 OPERATION**





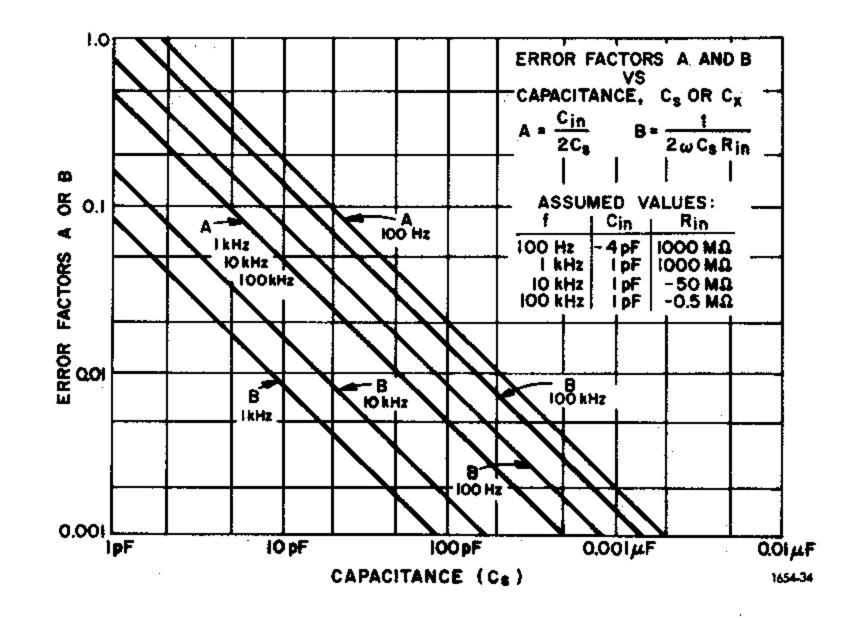


Figure 3-5. Factors A and B vs capacitance.

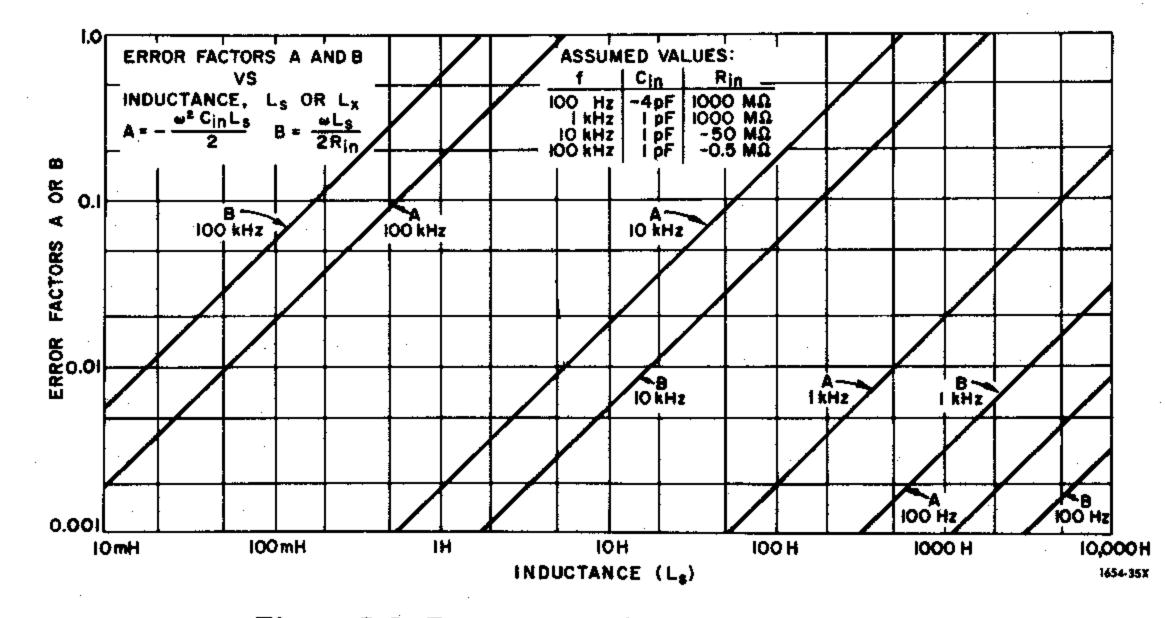


Figure 3-6. Factors A and B vs inductance.

•

.

. .

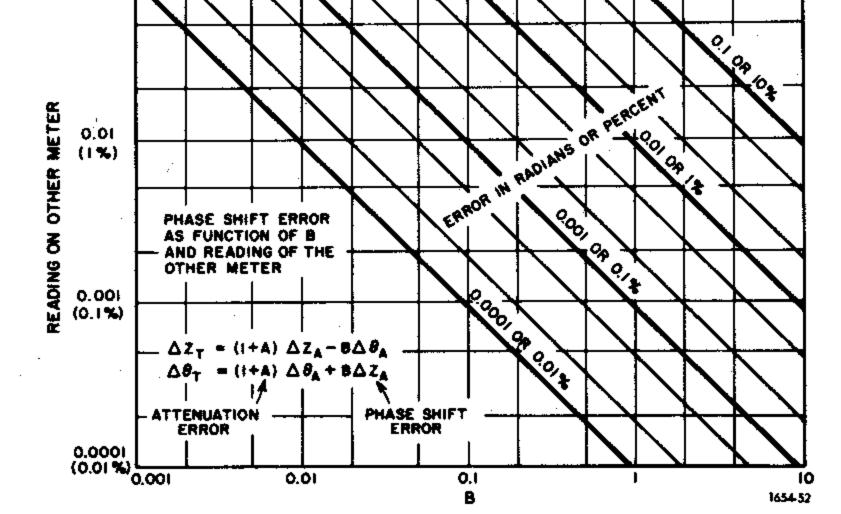


Figure 3-7. Phase-angle error as a function of B and  $\Delta Z$  range or magnitude error as a function of B and  $\Delta \theta$ .



**OPERATION 3-5** 

.

These charts are designed primarily to show the range possible rather than to attempt to make corrections for measurements outside the range. Crude corrections are possible, but precision is difficult due to added input impedance resulting from the actual physical connection of the components, which is hard to determine.

Hum pickup can also cause appreciable difficulty when high-impedance (at 60 Hz) components are measured. A slight amount of hum pickup should cause no error in the readings except for a beating vibration when the 100-Hz test frequency is used. Large hum pickups, however, may cause the off-scale indicator to be actuated, which shorts the signal channels to ground.

Usually this pickup difficulty can be overcome by proper shielding of the components under test. Grounding the instrument is usually necessary, as well as grounding any nearby equipment. extremes; that is, when one meter is near full scale on its least sensitive range and the other reading on its most sensitive range. The error occurs on the more sensitive meter.

These errors result from several causes. Under the above conditions, the synchronous-switching operation of the phase-sensitive detector of the sensitive meter causes a slight error because the signal voltage, that is largely in quadrature with the reference square-wave voltage, becomes large. The desired result is the difference of two large integrals, which is very small. This error is a function of both frequency and deviation. In the worst case, when the coarse meter is indicating 30% or 0.3 radian, the reading on the sensitive meter is in error by the amount shown in Table 3-2.

**TABLE 3-2** 

#### **3.12 LARGE** $\triangle$ **Z DEVIATIONS**.

With the MAGNITUDE LINEARIZER switched to the OUT position, the instrument measures the impedance difference as a percent of the average between standard and unknown, rather than a percent of the standard. When measuring large  $\Delta Z$  deviations, 10% for example, the ap-

proximation in going from 
$$\frac{|Z_{\mathbf{x}}| - |Z_{\mathbf{s}}|}{\frac{|Z_{\mathbf{x}}| + |Z_{\mathbf{s}}|}{2}} \text{ to } \frac{\frac{|Z_{\mathbf{x}}| - |Z_{\mathbf{s}}|}{|Z_{\mathbf{s}}|}$$

results in an error of 0.5%. At a 5% deviation, this error is only 0.13%, which is less than the general accuracy statement of 3%, so that the correction can generally be omitted.

With the MAGNITUDE LINEARIZER switched IN, the usual nonlinearity of the bridge output is compensated to indicate the magnitude difference expressed as a percent of the standard on both the 10% and 30% full-scale ranges.

#### **3.13 POSSIBLE ERRORS.**

Within the deviation ranges of the instrument (30% and 0.3 radian), the basic bridge equations (refer to paragraph 5.3.1) give the desired magnitude difference and phaseangle difference with negligible error, except for the 10% and 30% ranges where compensation is required to give the desired readout. This information, presented in polar form, can be interpreted in terms of  $\Delta R$ ,  $\Delta L$ , or  $\Delta C$ , and  $\Delta D$  and  $\Delta Q$  for many measurements (refer to paragraphs 3.15 and 3.16).

## SENSITIVE-METER ERRORS

0.0001%	0.000002
0.001%	0.00002
0.01%	0.0002
0.1%	0.001
	0.001% 0.01%

Under the same conditions of opposite range extremes, a small error in the phase of the quadrature voltage causes some of the large quadrature voltage to appear in phase with the reference. This phase-shift error in the reference voltage can be caused by a changed value of the components in the oscillator or phase-shift network. The  $\Delta Z$  reference is less susceptible to this error, since the phase shift is small. The  $\Delta \theta$  reference shift is minimized because of the like resistors and capacitors in components in the oscillator or phase-shift similator or phase-shift error in the error because of the like resistors and capacitors in components in the oscillator or phase-shift network, which cause the effects of temperature to cancel to some degree.

This bridge output voltage, of course, can be in error if the impedance range is exceeded, so that it is important to make sure the standard and unknown components are within the range (refer to paragraphs 3.10 and 3.11).

The instrument may produce small errors above the specified 3% when the meters are used at opposite range

Changes in harmonic distortion in the signal voltage will cause an effective phase-shift change since the harmonics of the reference are not at the correct phase.

Both these errors are proportional to the reading of the other meter and should be only a few percent of full scale when the other meter is reading 30% or 0.3 radian.

Another error is possible when the instrument is operating near the extremes of its temperature range (the normal temperature range is 10 - 40° C). Under these conditions, the cross-term factors in Table 3-3 can be applied to calculate the correction required for higher accuracy.

## 3-6 OPERATION

TABLE 3-3         CROSS-TERM FACTORS         FOR TEMPERATURE         CORRECTION         A Factor						
Frequency	$-\Delta T (ppm)$	+ \Delta T (ppm)				
100 Hz	+2	- 2				
1 kHz	+1	— 1				
10 kHz	+2	-2				
100 kHz	- 2	- 2				
	FO Frequency 100 Hz 1 kHz 10 kHz	CROSS-TERM FACT FOR TEMPERATUR CORRECTION A FactorFrequency-ΔT (ppm)100 Hz+ 21 kHz+ 110 kHz+ 2				

portant advantages for many measurements since stray impedances may be placed across one transformer winding. Figure 3-8 shows an equivalent circuit, with shunt impedances  $Z_1$  and  $Z_2$  across the two balanced windings. Here  $I_p$ ,  $r_p$ ,  $I_s$  and  $r_s$  do not cause an unbalance because both  $E_1$  and  $E_2$  are reduced by a voltage drop in the primary.

If the leakage inductance and resistance are assumed equal for the two bridge windings (a very good approximation), it can be shown that the only important error is a fixed, additive error of:

 $\Delta Y (r + j\omega l)$ 

where  $\Delta Y = Y_1 - Y_2 = \frac{1}{Z_1} - \frac{1}{Z_2}$ 

which is most important on the most sensitive ranges. If only one side is loaded with an impedance, Z, the error becomes:

 $\frac{r+j\omega \ell}{2} = Y (r+j\omega \ell)$ 

Cross-term correction = A x other reading in %/°C x  $\Delta$ T (where T nominal = 25° C). As an example, at 40° C and a frequency of 10 kHz, if the  $\Delta$ Z reading = 16% and the  $\Delta\theta$  reading = -0.0012 radian, the correction for the  $\Delta\theta$  reading is:

 $\theta$  (corrected) =  $\Delta \theta$  + cross-term correction

 $= -0.0012 + 2 \times 10^{-6} \times 16 \times 15$ 

- = -0.0012 + 0.00048
- = -0.00072 radian

The largest source of error is the 1% meter itself. This can produce an error of 2% of full scale since the meter is zero centered. Thus the over-all accuracy is about 3% of full scale for most measurements. With careful zeroing, measurements about zero can easily have greater precision, so that the actual ultimate precision is better than 0.003% (0.00003 radian) for the 0.1% full-scale deviation range.

#### 3.14 UNBALANCED LOADING ON TRANSFORMER.

Impedance placed across one side of the transformer to ground has little effect due to the tight coupling of the 1:1 ratio toriodal bridge transformer. This feature has im-

where the error is positive if placed across the unknown half of the bridge winding. The value of r is about 0.9  $\Omega$  and the value of  $\ell$  is about 2.8  $\mu$ H.

Table 3-4 gives equations for calculating  $\Delta Z$  and  $\Delta \theta$  errors for various loads at the various frequencies. The  $\Delta Z$  errors should be multiplied by 100 to give the percent error. The sign of the error is correct if the unknown transformer terminal is loaded.

Example: Shunting the unknown side of the transformer with 100  $\Omega$  at 10 kHz will cause a  $\Delta Z$  error of less than 0.9/100 x 100% = 0.9% and a  $\Delta \theta$  error of less than 17.5/100 x 10<sup>-2</sup> = 0.0017 radian.

### 3.15 MEASUREMENTS OF R, L, OR C DIFFERENCES.

The  $\Delta Z$  meter can be interpreted as a  $\Delta R$ ,  $\Delta L$ , or  $\Delta C$  difference with negligible error if the standard elements are relatively pure. Obviously, if the components are pure, the impedance magnitude is equal to the value of R, L, or C, as the case may be. If the components are not pure, but  $\Delta D$  or  $\Delta Q$  equals zero, no error will result from considering the  $\Delta Z$  indication as an R, L, or C difference, since the complex

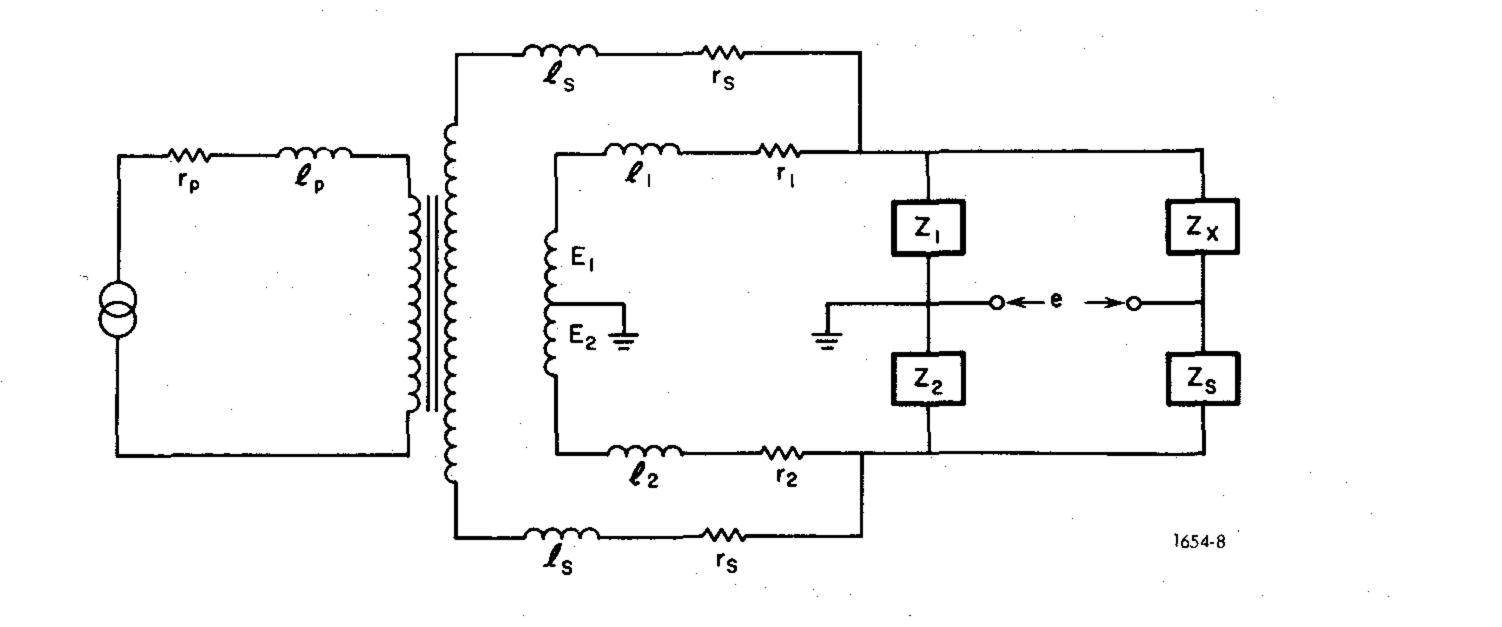


Figure 3-8. Equivalent circuit of a transformer.



**OPERATION 3-7** 

		EQUATIONS FO	TABLE 3-4 OR CALCULATING /	∆Z AND ∆θ ERRO	RS	
	∆Error (Multiply by 100%)			∆θ Error (Radians)		
Type of Load	R (Ω)	• L • <u>(</u> H)	C (μF)	R (Ω)	L (H)	C (μF)
Error Equation	r R	<u><u></u> L</u>	ω² <b>l</b> C	$\frac{\omega l}{R}$	$-\frac{r}{\omega L}$	ωrC
Frequency	<u>0.9</u> R	2.8 L x 10 <sup>-6</sup>	−1.1 C x 10 <sup>-6</sup>	$\frac{1.75}{R} \times 10^{-3}$	$\frac{-1.43}{L} \times 10^{-3}$	6.3 C x 10 <sup>-4</sup>
1 kHz	0.9 R	<u>2.8</u> L × 10 <sup>−6</sup>	—1.1 C x 10 <sup>-6</sup>	$\frac{1.75}{R} \times 10^{-2}$	$\frac{-1.43}{L} \times 10^{-4}$	6.3 C x 10 <sup>-3</sup>
10 kHz	0.9 R	$\frac{2.8}{L} \times 10^{-6}$	$-1.1 \text{ C} \times 10^{-2}$	$\frac{1.75}{R} \times 10^{-1}$	$\frac{-1,43}{L} \times 10^{-5}$	6.3 C x 10 <sup>-2</sup>
100 kHz	0.9 R	$\frac{2.8}{L} \times 10^{-6}$	–1.1 C	<u>1.75</u> R	<u>−1.43</u> _x 10 <sup>-6</sup> L	0.63 C

.

impedance vectors of the two components form similar triangles so that:

.

.

.

.

.

$$\frac{\Delta |Z|}{|Z|} = \frac{\Delta R}{R} = \frac{\Delta X}{X}$$

The above relationship is useful, since a variable element can often be used to null the  $\Delta\theta$  meter and thus determine accurate  $\Delta R$ ,  $\Delta L$ , or  $\Delta C$  readings where large corrections would otherwise be necessary.

The  $\Delta Z$  readings can be corrected to give the R, L, or C differences, if the D or Q of the standard is known and the  $\Delta \theta$  meter indication is used. Note that the corrections below consist of a multiplying factor (percent error) and an additive correction (fixed error), and that the factor is important only as D<sub>s</sub> (Q<sub>s</sub>) is larger than 0.2, where the error is 2% (if  $\Delta D$  or  $\Delta Q = 0.1$ ).

The following equations are given for determining the

2. Equivalent series inductance or inductive reactance.

$$\frac{\Delta X_{L}}{X_{L}} = \frac{\Delta L}{L} = \frac{\Delta |Z|}{|Z|} (1 + D_{s} \Delta \theta) + D_{s} \Delta \theta - \frac{(\Delta \theta)^{2}}{2}$$

3. Equivalent series capacitance or capacitive reactance,

$$\frac{\Delta X_{c}}{X_{c}} = \frac{\Delta C}{C} = \frac{-\Delta Y}{Y} (1 + D_{s} \Delta \theta) + D_{s} \Delta \theta - \frac{(\Delta \theta)^{2}}{2}$$

4. Equivalent parallel conductance or resistance,

$$\frac{\Delta G}{G} = \frac{-\Delta R}{R} = \frac{-\Delta |Z|}{|Z|} (1 - O_{s}\Delta\theta) - O_{s}\Delta\theta - \frac{(\Delta\theta)^{2}}{2}$$

5. Equivalent parallel capacitance or capacitive suscep-

various equivalent series and parallel components of complex impedances. In these expressions, the sign of  $\Delta\theta$  is as indicated on the  $\Delta\theta$  meter and the sign of D<sub>s</sub> or O<sub>s</sub> is positive except for capacitive resistors (refer to paragraph 1,6).

Note: If the standard component is pure ( $D_s = 0$  or  $Q_s = 0$ ), the following expressions are greatly simplified.

1. Equivalent series resistance,

$$\frac{\Delta R}{R} = \frac{\Delta |Z|}{|Z|} (1 - Q_s \Delta \theta) - Q_s \Delta \theta - \frac{(\Delta \theta)^2}{2}$$

Note:  $\Omega_s$  is positive if the resistor is inductive, negative if the resistor is capacitive.

#### tance,

$$\frac{\Delta B_{c}}{B_{c}} = \frac{\Delta C}{C} = \frac{\Delta Y}{|Y|} (1 + D_{s} \Delta \theta) + D_{s} \Delta \theta - \frac{(\Delta \theta)^{2}}{2}$$

 $\Delta \theta$  is negative if the standard is the purer component. 6. Equivalent parallel inductance or inductive susceptance,


$$\frac{\Delta B_{L}}{B_{L}} = \frac{-\Delta L}{L} = \frac{-\Delta |Z|}{|Z|} (1 + D_{s}\Delta\theta) + D_{s}\Delta\theta - \frac{(\Delta\theta)^{2}}{2}$$

Note:  $\Delta \theta$  is negative if the standard is the purer component.

## 3-8 OPERATION

## **TABLE 3-5** INTERPRETATION OF METER SIGNS

	$\Delta Z Meter$			∆ө м	leter
When Measuring	Meter Reads: (With MAG.) LIN. IN)	Meter Reads: (With MAG. LIN. OUT)	+ indication means	Meter Reads	+ indication means:
ΔZ	$\frac{ Z_x  -  Z_s }{ Z_s }$	$\frac{ Z_{x}  -  Z_{s} }{ Z_{x}  +  Z_{s} }$ 2	Unknown has larger impedance	$\theta_{x} - \theta_{s}$	Unknown has larger $\theta$ (measured ccw on Z plane)
ΔY	$\frac{ Y_x  -  Y_s }{ Y_s }$	$\frac{ Y_{x}  -  Y_{s} }{ Y_{s}  +  Y_{x} }$ $2$	Unknown has larger admittance	$(\phi_{x} - \phi_{s})$	Unknown has larger φ or smaller θ

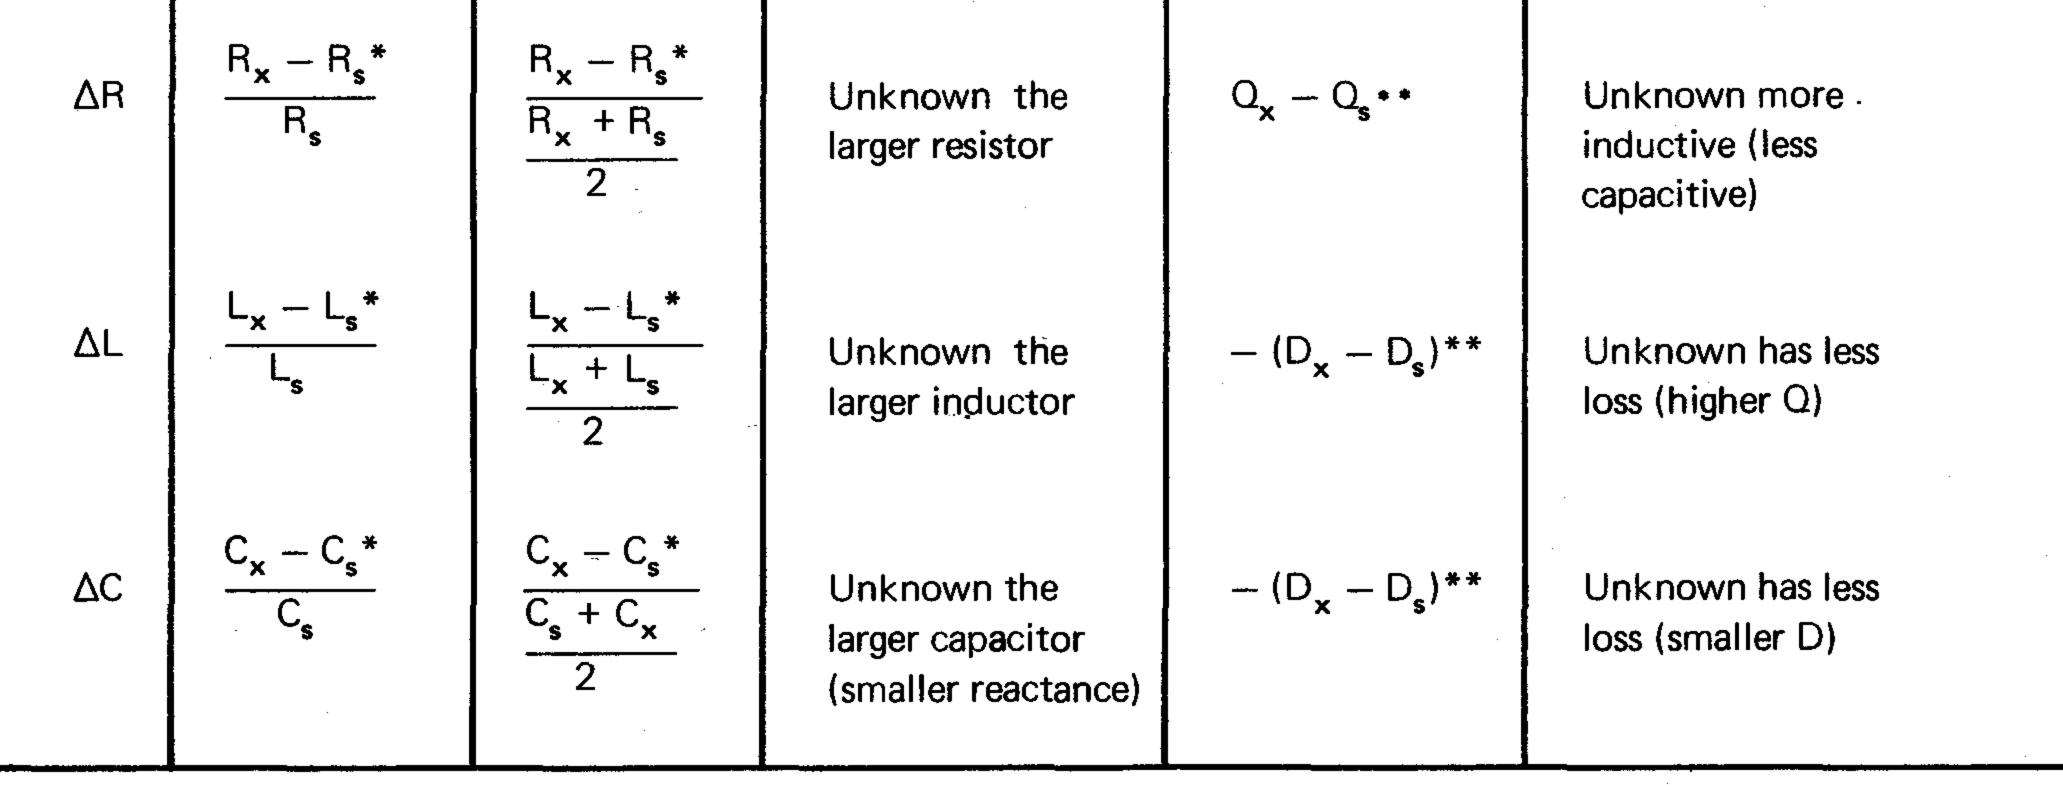

\*Good only for pure elements (refer to paragraph 3.15).

\*\*Good only if both  $D_s$  and  $D_x$  (or  $Q_s$  and  $Q_x$ ) are less than 0.1 (refer to paragraph 3.16).

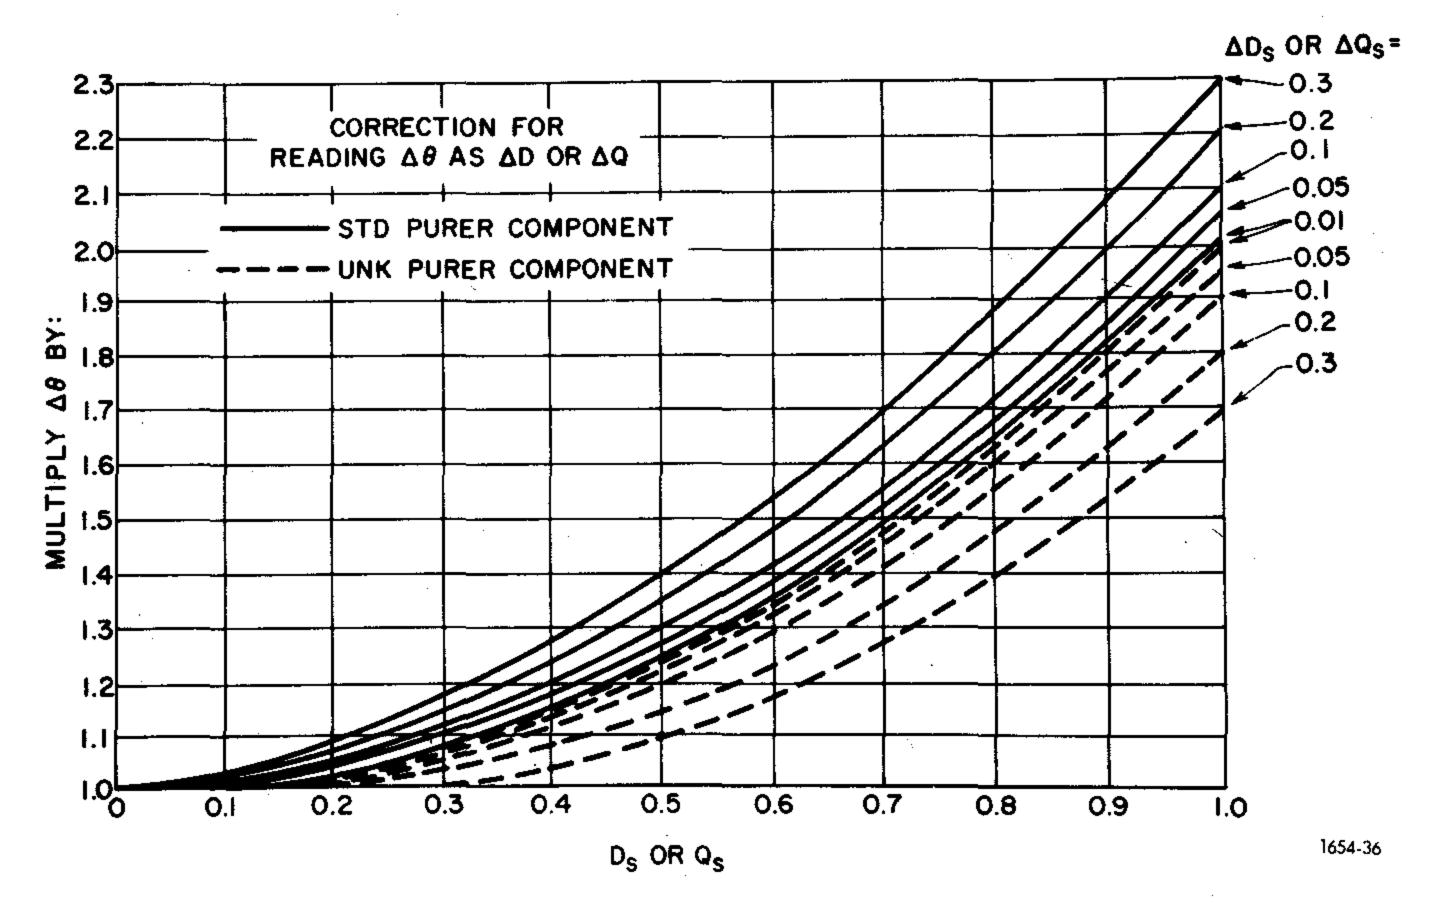


Figure 3-9. Correction factor to obtain D or Q from  $\theta$ .



## **3.16 MEASUREMENT OF** $\triangle$ **D** and $\triangle$ **Q**.

If  $D_s$  and  $D_x$  (or  $Q_s$  and  $Q_x$ ) are both less than 0.1 and  $\Delta Z$  is less than 10%, the  $\Delta \theta$  meter indication may be interpreted directly as  $\Delta D$  or  $\Delta Q$  with negligible error.

The D and Q of the standard and unknown could be greater than 0.1 without exceeding the range of the instrument, which limits  $\theta$  to 0.3 radian. If either or both D's (or Q's) is greater than 0.1, a correction should be applied. This correction is,

 $\Delta D = \Delta \theta (1 + D_s D_x) \text{ or } \Delta Q = \Delta \theta (1 + Q_s Q_x)$ 

or, in terms of  $D_s$  (or  $Q_s$ ) and  $\Delta \theta$ :

.

$$\Delta D = \frac{\Delta \theta (1 + D_s^2)}{1 \pm D_s \Delta \theta} \text{ or } \Delta Q = \frac{\Delta \theta (1 + Q_s^2)}{1 \pm Q_s \Delta \theta}$$

Figure 3-9 shows a plot of the correction factor necessary for a correct determination of  $\Delta D$  or  $\Delta Q$ . Note that there are two values for this function. Use the solid curve if the standard is the purer component, the dash-line curve if the unknown is the purer component.

The correct signs for  $\Delta D$  or  $\Delta Q$  measurements are given in Table 3-5. In the table, all D's and Q's are positive except the Q of a capacitive resistor (see Figure 1-5). The table also gives the signs for  $\Delta R$ ,  $\Delta L$ , and  $\Delta C$  measurements.

· . .

. · · · 

.

. . .

. . . 

. · · ·

· · · · · · · ·

· . .

. · · · · ·

. . . .

. .

.

.

. .

#### **3-10 OPERATION**

.



# **Special Measurements – Section 4**

4.1 REMOTE MEASUREMENTS
4.2 THREE-TERMINAL IMPEDANCE MEASUREMENTS
4.3 MEASUREMENTS ON POTENTIOMETER
4.4 MEASUREMENTS ON SMALL CAPACITORS 1
4.5 MEASUREMENT ON GANGED CAPACITORS
4.6 SMALL DISSIPATION-FACTOR CAPACITORS
4.7 DIELECTRIC SAMPLE MEASUREMENTS
4.8 BALANCED TRANSFORMER WINDINGS
4.9 MEASUREMENTS WITH DC POWER
4.10 OUTPUT FACILITIES
4.11 THREE TERMINAL CAPACITORS
4.12 SEMICONDUCTOR CAPACITANCE AND CONDUCTANCE 4-10


#### 4.1 REMOTE MEASUREMENTS.

For many measurements, one or both of the external impedances to be measured must be at some distance from the instrument. For instance, remote positioning is often required when the unknown must be in a special jig or test chamber. The guard circuit extends the high-impedance range for remote measurements by effectively reducing the stray capacitance to ground that would be added by cable shields.

Two leads are necessary to attach the unknown component to the instrument. The effect of capacitance from the transformer lead to ground is negligible (refer to paragraph 3.14), and this lead, because of its low impedance, is relatively insensitive to pickup, although a shield may be necessary in some cases. The common lead is at high impedance if the unknown impedance is high, and a shield should be used to prevent pickup and to remove the capacitance between the two leads, which would otherwise shunt the unknown. If this shield were grounded, the capacitance from the common lead to ground would increase the input capacitance and greatly reduce the impedance range (refer to paragraph 3.11). Connection of this shield to the guard point and use of the instrument in the GUARDED position effectively reduces the added capacitance by a factor of about 1000, permitting use of a rather long cable with only a slight addition to input capacitance.

## 4.2 THREE-TERMINAL IMPEDANCE MEASUREMENTS. 4.2.1 Null Method.

When it is necessary to measure the impedance or admittance between two terminals, each of which has finite impedance to a third terminal (A, Figure 4-1), it is possible to use the instrument as a null device in order to make the effect of the other two impedances ( $Z_a$  and  $Z_b$ ) negligible. In a conventional bridge, it is possible to remove the effect of one of these impedances by putting it across the source or detector. The other impedance, however, is left across one arm of the bridge where it will usually cause an error. This type of measurement is possible on the 1654 if a variable standard is used (see Figure 4-2).

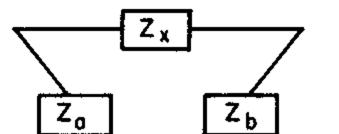

The guard point is the outer conductors of the two common GR874 connectors on the input connections. Thus, shielded leads using GR874 connectors can be plugged directly into the instrument.





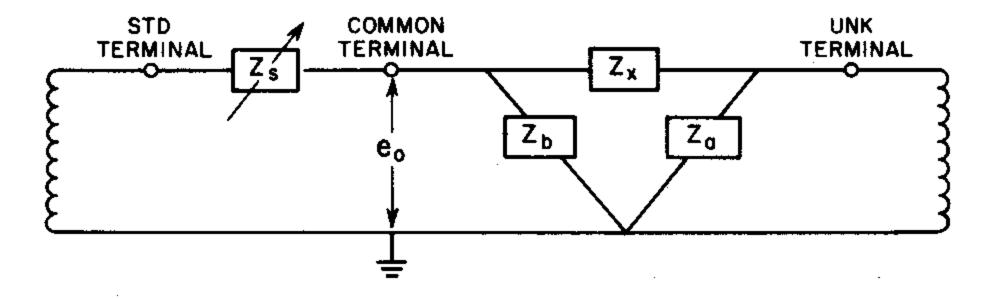


Figure 4-2. Direct impedance measurement using a variable standard.



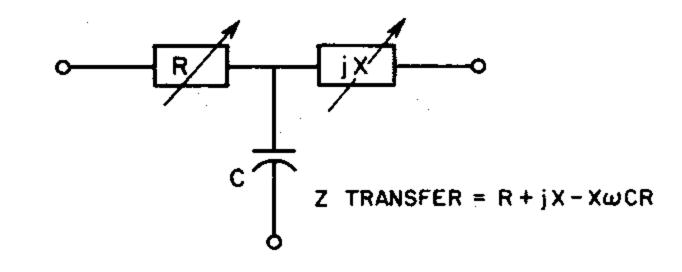


Figure 4-3. Possible error when series-connected variable standards are used.

Because impedance shunting one transformer winding has so little effect (refer to paragraph 3.14), one of the unwanted impedances (Z<sub>a</sub>) may usually be placed across it with negligible error. This puts the other unwanted impedance, Z<sub>b</sub>, across the detector. If the detector is nulled (both meters reading zero) by variation of the standard,  $Z_{b}$ has no effect on the balance conditions, although it does reduce the sensitivity of the detector. The value of the unknown at null is, of course, equal to that of the standard and can be measured in terms of impedance or admittance. In general, the standard should consist of two adjustable components for a balance of both magnitude and phase. These components may be in series or parallel. If series variable components are used to make both the real and imaginary components of the standard adjustable, care should be taken to keep the capacitance from the junction to ground as small as possible, since this capacitance can cause a large error. Figure 4-3 shows an example.

#### K = guard circuit gain $\approx 0.999$ at 1 kHz.

Use of the guard circuit adds a fixed error (in the numerator) that is small if  $Z_o$  is small, but this use reduces the percent error in the denominator. Thus, if  $Z_b$  is much greater than  $Z_s$ , it may be best to ground point A, since the error may be small. In this instance,  $Z_a$  should be the lower of the two stray impedances. The effects of  $Z_b$  on attenuation and phase shift can be calculated as described in paragraph 3.11, since  $Z_b$  just increases the detector input admittance.

If  $Z_s$ ,  $Z_a$ , and  $Z_b$  are of the same order of magnitude (so that  $Z_s/Z_b$  is not small), and they are large compared with  $Z_o$ , it is desirable to use the guard point. This is especially true if the deviations,  $\Delta Z$  and  $\Delta \theta$ , are large so that the fixed error,  $Z_o Z_s/Z_a Z_b$ , is negligible.

This guard method is most useful when small direct capacitors are to be measured and the impedances  $Z_a$  and  $Z_b$  are just stray capacitance.

#### 4.2.2 Guard Point For Three-Terminal Measurements.

If the guard circuit could have zero output impedance and a gain of unity, the third terminal (A, Figure 4-1) could be connected to the guard point, and the effect of  $Z_a$  and  $Z_b$  would be negligible on the measurement, unless  $Z_a$  were so small as to load the transformer (refer to paragraph 3.14). But these ideal conditions are never met; the output impedance is finite and the gain slightly less than one. However, under certain conditions, this use of the guard terminal works well.

If point A is grounded, the reading is:

$$\frac{Z_{x} - Z_{s}}{Z_{s}}$$

## 4.3 MEASUREMENTS ON POTENTIOMETERS.

#### 4.3.1 Ganged Potentiometers Used As Rheostats.

 
If potentiometers are to be checked as two-terminal variable resistors, several different types of indications are possible. The simplest setup is that shown in Figure 4-4, where the indication is:

$$\frac{\mathsf{R}_{\mathsf{x}}-\mathsf{R}_{\mathsf{s}}}{\mathsf{R}_{\mathsf{s}}}$$


This indication will become very large near the low end of the potentiometers and therefore is not a very realistic way to compare or to specify potentiometers. A common way of specifying potentiometers is to allow a fixed error,  $\pm R_A$ , plus a percent error,  $\pm B\%$ . This could also be expressed as  $\pm A\%$  of  $R_{max}$ ,  $\pm B\%$  of R, where:

$$\frac{R_{A}}{R_{max}} \times 100\% = A\%$$

If the standard is a perfect potentiometer, the measurement can be set up so that this combined tolerance limit becomes a fixed meter indication. Figure 4-5 shows the setup.



If the guard circuit is used, the reading is approximately:

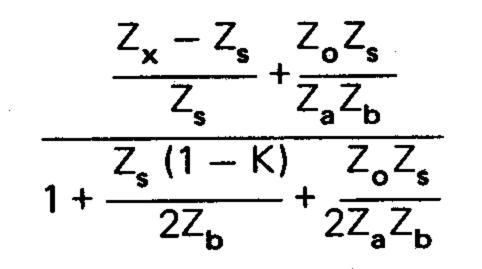

where:  $Z_o = output$  impedance of guard circuit  $\approx 1 \Omega$  in series with  $1 \mu$ F.

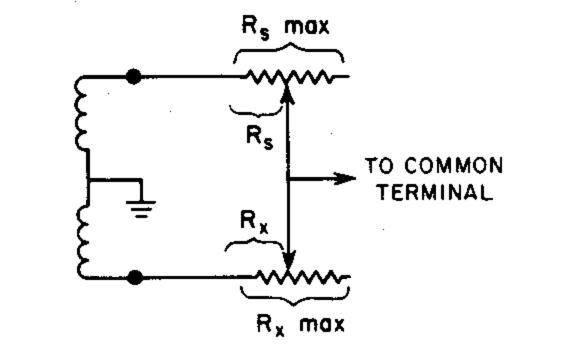


Figure 4-4. Setup for comparison of rheostats.

## **4-2 SPECIAL MEASUREMENTS**

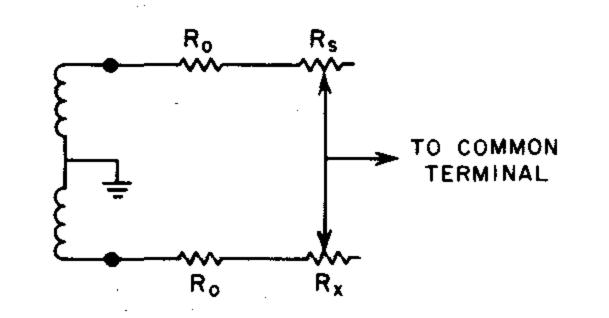


Figure 4-5. Preferred setup for comparison of rheostats.

If  $R_o = \frac{A}{B} R_{max}$ , a  $\Delta Z$  meter indication of B% will be the allowable limit for any value of R.

Example: To compare a 1000- $\Omega$  potentiomerer, whose specifications are ±1% ±2  $\Omega$ , to a "perfect" standard 1000- $\Omega$  potentiometer:

$$R_A = 2 \Omega$$
  $A = \frac{2}{1000} = 0.002 = 0.2\%$   $B = 0.01 = 1\%$ 

The unknown potentiometer can also be compared with a voltage divider if a dial is used on the unknown to set the angle correctly. This is a point-by-point procedure, but could be more precise if the voltage divider were of high accuracy, such as the GR 1455 Decade Voltage Divider.

An electronic adder circuit is particularly useful for this measurement. Such a circuit makes it possible to compare potentiometers of different resistances because the output impedance of the potentiometer will have no effect.

#### 4.3.3 Phase Shift of Potentiometers.

The comparison of phase angle of potentiometers used as two-terminal, variable resistors is a straightforward impedance-difference measurement. The phase-shift difference between two potentiometers can be measured, or a potentiometer can be compared with a fixed resistor. When small phase shifts of large potentiometers are measured, the input capacitance to the 1654 can become large, due to the connections necessary. It is desirable and simple to adjust

$$R_o = \frac{A}{B} R_{max} = \frac{0.002}{0.01} \times 1000 = 200 \Omega$$

The tolerance on the meters is a 1% indication. At the low end of the potentiometer, the 2- $\Omega$  fixed error is important and  $\frac{2\Omega}{R_o} = 1\%$ . At the high end, the allowable error

is  $1\% + 2 \Omega = 12 \Omega$ , which is 1% of the total resistance.

#### 4.3.2 Standard Independent Linearity.

The standard independent linearity of a potentiometer is the tolerance indicating the allowable deviation from linearity expressed as a percent of the maximum value of the potentiometer. This specification is independent of the maximum value of the potentiometer. Thus, if the deviation from linearity at any point is 8%, the resistance at that point is:

$$R = \theta R_{max} + \delta \% R_{max}$$

where  $\theta$  is the normalized rotation. Therefore:

$$\frac{\mathsf{R}}{\mathsf{R}} = \theta + \delta\% = \frac{\frac{\mathsf{e}}{\mathsf{N}}}{\mathsf{R}}$$

the  $\Delta Z$  meter for a null in order to reduce the error in reading  $\Delta \theta$  due to this input capacitance. With a  $\Delta Z$  indication of zero, the input phase-shift error (B) has no effect  $[\Delta \theta_T = \Delta \theta_A (1 + A) + B \Delta Z_A$ , refer to paragraph 3.11].

The measurement of voltage phase shift of a potentiometer is a voltage-transfer-ratio measurement (the setup is shown in Figure 4-7). The unknown potentiometer can be compared with a standard potentiometer of known phase shift, or with a fixed voltage divider of small or known phase shift.

 
If 
$$\frac{E_o}{E_{in}}$$
 of the unknown potentiometer =  $\mu_x = \mu_{rx} + j\mu_{ix}$   
and  $\frac{E_o}{E_{in}}$  of the standard potentiometer =  $\mu_s = \mu_{rs} + j\mu_{is}$ 

the  $\Delta\theta$  meter will read:  $\mu_{ix} - \mu_{is}$ , where  $\mu$  is the opencircuit voltage gain.

If the  $\Delta Z$  meter is nulled and  $\mu_{rs}$  (the real part of the attenuation) is known, then the difference in phase shift is:

$$\Delta \theta = \tan^{-1} \frac{\mu_{ix} - \mu_{is}}{\mu_{rs}} \approx \frac{\mu_{ix} - \mu_{is}}{\mu_{rs}}$$
 if  $\theta$  is small.

If a fixed divider is used,  $\mu_{is}$  can be very small, and  $\mu_{ix}$  read directly. Note that high-precision divider is not necessary. An electronic adder is desirable to reduce possible errors. Care should be taken not to add capacitance on the outputs of the potentiometers.



See Figure 4-6.

This quantity can be measured with the setup of Figure 4-7. If the standard potentiometer is linear, the  $\Delta Z$  meter will read  $\delta$ %.

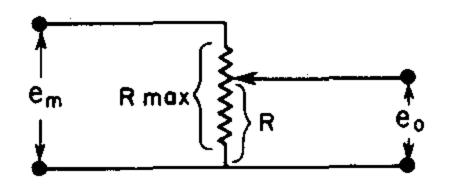


Figure 4-6. Potentiometer used as a divider.

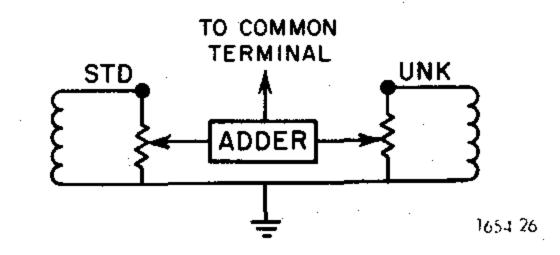


Figure 4-7. Setup for measurement of standard independent linearity or phase shift.

## **SPECIAL MEASUREMENTS 4-3**



## 4.4 MEASUREMENTS ON SMALL CAPACITORS. 4.4.1 General.

The high-impedance limitation resulting from input impedance shunting the common input terminal to ground can usually be avoided by correct choice of test frequency. In the measurement of small capacitors, the phase-shift error B (refer to paragraph 3.11) can be avoided by the use of a high frequency, but the attenuation error, A, always causes difficulty as the compared capacitors approach the value of the input capacitance. This input capacitance also includes any capacitance to ground from the leads connecting the components to the "common" terminals. Therefore these leads should be short and their shields connected to the guard potential, if possible.

Shields are usually necessary to reduce hum pickup that can overload the amplifier and cause an offscale indication. The instrument, as well as nearby equipment and the operator, should be grounded.

#### **4.4.3** Measurement of $\triangle$ C In pF.

When very small capacitors are measured, the indication will be:

$$\frac{2\Delta C}{C_{x} + C_{s} + C_{in}} \approx \frac{2\Delta C}{C_{in}}$$

If  $C_{in}$  is known, the indication will be a factor times  $\Delta C_{in}$ This gives the difference in terms of the capacitance difference in pF, rather than in percent. If capacitance is added to C<sub>in</sub> this type of indication will be available at higher capacitance levels. With no added capacitance, C<sub>in</sub> is about 1 pF, which would result in a  $\Delta Z$  reading of 0.02% to indicate a  $\Delta C$  of 0.0001 pF. Since this sensitivity is not often required, it is desirable to increase Cin with known capacitance so that Cin is more accurately known; the above equation is more nearly correct and hum pickup is reduced.

The following paragraphs describe different methods that can be used for these low-capacitance measurements.

#### 4.4.2 Correction For Input Capacitance Effects.

The indicated percent capacitance difference can be multiplied by


$$\frac{C_{x} + C_{s} + C_{in}}{C_{x} + C_{s}} \approx \frac{2C_{s} + C_{in}}{2C_{s}} = 1 + \frac{C_{in}}{2C_{s}}$$

 
to determine the correct  $\Delta C$ %. The main difficulty is in determining C<sub>in</sub> accurately enough to obtain the required precision. In the GUARDED position, this input capacitance is about 1 pF when measured at the common input terminal to the instrument. If any leads are tied to these terminals, the capacitance is increased.


One way of measuring input capacitance is shown in Figure 4-8. An error signal is produced by large capacitors  $C_1$  and  $C_2$  (Figure 4-8a), where  $C_2 > 20C_1$ . A known small capacitor,  $C_3$ , is then put on the input lead (Figure 4-8b). C<sub>3</sub> The ratio of the two indications is

> $C_3 + C_{in}$ Ci

Another useful method for measuring small capacitance involves the use of an adjustable capacitor, C<sub>a</sub>, connected from the common terminals to ground (see Figure 4-9), so that:

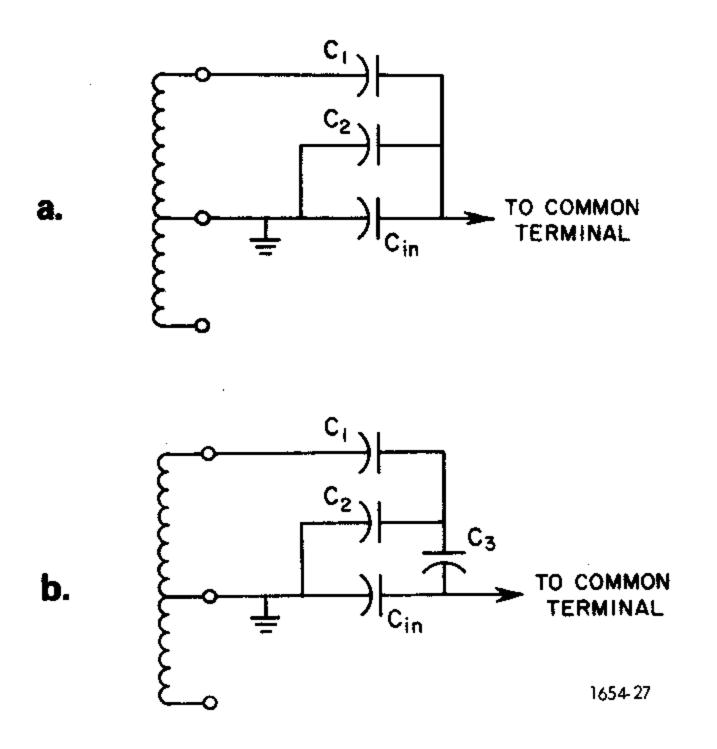



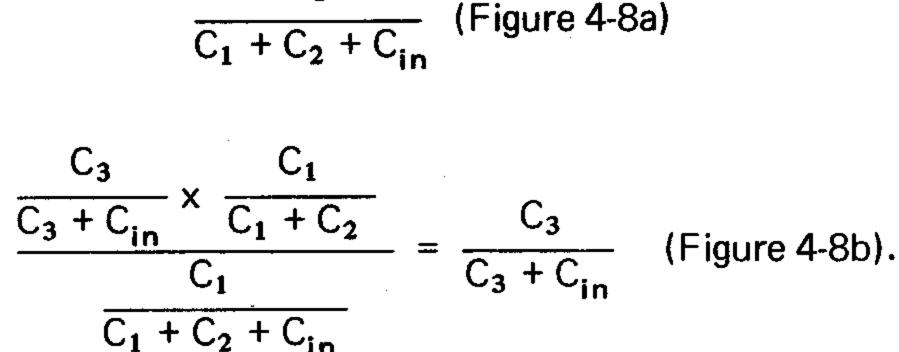

Another way of measuring input capacitance is to compare two known capacitors and calculate Cin:

The advantage of this method is that the connections for calibrating and the desired measurements can be identical in order to keep C<sub>in</sub> constant.

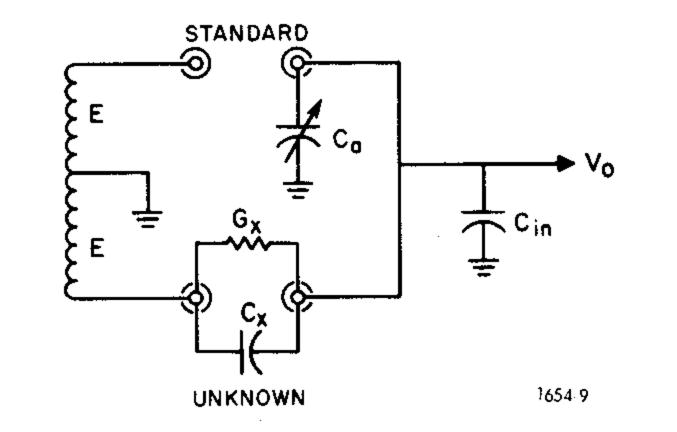


Figure 4-9. Measurement of small capacitance using an adjustable capacitor connected from the common (standard) terminal to ground.

## **4-4 SPECIAL MEASUREMENTS**

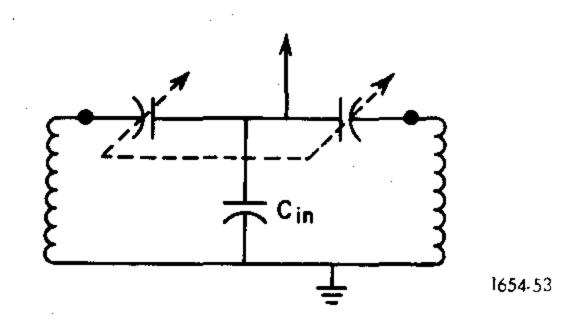


Figure 4-10. Comparison of ganged capacitors.

$$\frac{V_o}{E} = 2 \left[ \frac{C_x}{C_x + C_a + C_{in}} \right] 100\%$$

where E = bridge transformer voltage

 $V_{o} = bridge-output voltage proportional to C_{x}$  $C_{in} \approx 1 \text{ pF}$ , with the INPUT switch in the GUARDED position

$$C_a \ge 10 C_x$$

$$\frac{1}{100} \times 100 \text{ pF} + 2 \text{ pF} = 3 \text{ pF}.$$

$$\Delta C_{\max}$$

$$\frac{\Delta C_{\max}}{\frac{C_x + C_s + C_{in}}{2}} = \frac{3}{\frac{100 + 100 + 400}{2}} = \frac{3}{300} = 1\%$$

At 1000 pF; the maximum allowable difference is:

$$\frac{1}{100}$$
 x 1000 pF + 2 pF = 12 pF.

$$\Delta Z = \frac{\Delta C_{max}}{\frac{C_{x} + C_{s} + C_{in}}{2}} = \frac{12}{1200} = 1\%$$

v, then:  $\frac{1}{E}$  $= \frac{1}{C_a + C_{in}}$ 

Example: assuming  $C_x \leq 10$  pF, calibrate by connecting a known 10 pF capacitor to the UNKNOWN terminals and adjust C<sub>a</sub> ≈200 pF to obtain a reading of 10.00 on the MAGNITUDE DIFFERENCE meter. Subsequent unknown capacitors will give readings directly in pF. The  $\Delta\theta$  reading  $2G_x$ will indicate  $\omega C_{a}$ 


#### 4.5 MEASUREMENTS ON GANGED CAPACITORS.

Measurements on ganged capacitors are straightforward in principle, but such difficulties as pickup and input capacitance require special care. The simple connection would give an indication of  $\Delta C$  in percent, although a correction for C<sub>in</sub> may be necessary if the minimum value of C is small. Capacitor specifications are often given as ±C<sub>a</sub> pF ±B%, which is analogous to the potentiometer specification in paragraph 4.3. This complex tolerance can be made to give a constant meter indication by increasing the input capacitance with added fixed capacitors. This setup is shown in Figure 4-10. The tolerance limit will be an indication of B% regardless of capacitor setting if:

#### 4.6 SMALL DISSIPATION-FACTOR CAPACITORS.


When the dissipation factor of small capacitors is measured, a large  $\Delta Z$  reading can result in an error caused by input-capacitance phase shift, as well as other errors (refer to paragraph 3.11). If the  $\Delta Z$  meter is nulled, these difficulties are removed. If the capacitor is very small, there is also an attenuation error (A) requiring correction. One setup that has been used to measure very small values of D is shown in Figure 4-11.

In the setup shown, the component to be tested is plugged into the unknown terminals. The variable capacitor is balanced for a null on the  $\Delta Z$  meter. The unknown quantity is read directly on the variable capacitor and the dissipation factor is read on the  $\Delta \theta$  meter.

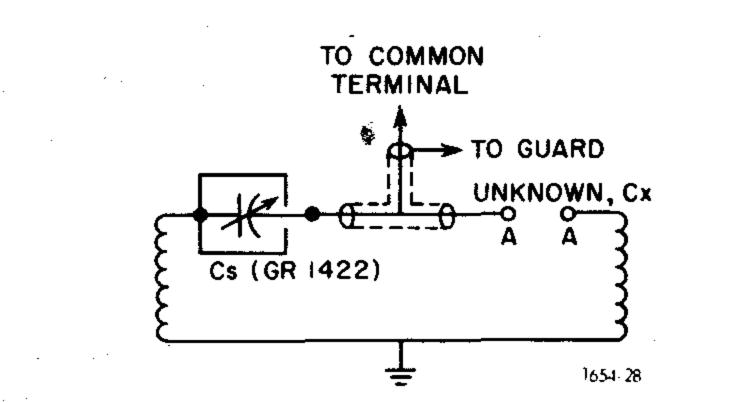

#### Figure 4-11. Measurement of small dissipation factors.

 2C



Example: Two 1000-pF ganged capacitors should track to  $\pm 2 \text{ pF} \pm 1\%$ .

$$C_A = 2 pF$$
 B = 1%  
 $C_{in} = \frac{2C_A(100)}{B} = \frac{2(2 pF)(100)}{1\%} = 400 pF$ 

A reading of 1% will show the tolerance limit. At 100 pF, the maximum allowable difference is:

## **4.7 DIELECTRIC SAMPLE MEASUREMENTS.**

## 4.7.1 General.

The high sensitivity of the 1654 makes it useful for measurements on dielectric samples. The direct indication of D on the  $\Delta\theta$  meter can greatly speed up dissipationfactor measurements that ordinarily require a precise D balance, and the  $\Delta Z$  sensitivity and sign indication speed up the capacitance balance necessary for measurement of dielectric constant.

## **SPECIAL MEASUREMENTS 4-5**



e en en en en en

For precise measurement of both of these quantities on solid dielectric samples, the GR 1690 Dielectric Sample Holder is recommended. D measurements are possible without such a holder, simply make a capacitor out of the sample by applying aluminum foil to each side and compare it with a standard capacitor to determine the value of D. However, for precise D values, stray losses and stray capacitances must be controlled; a difficult task without a precision sample holder. A recommended setup for both K and D measurements is shown in Figure 4.12.

The measurement procedure is similar to that described in the 1690-A Dielectric Sample Holder instruction book. It is repeated below, using the same terminology except that the D indication becomes a  $\Delta\theta$  reading. The 1690-A instruction book should be studied carefully for familiarization with the measurements.

#### 4.7.2 Procedure.


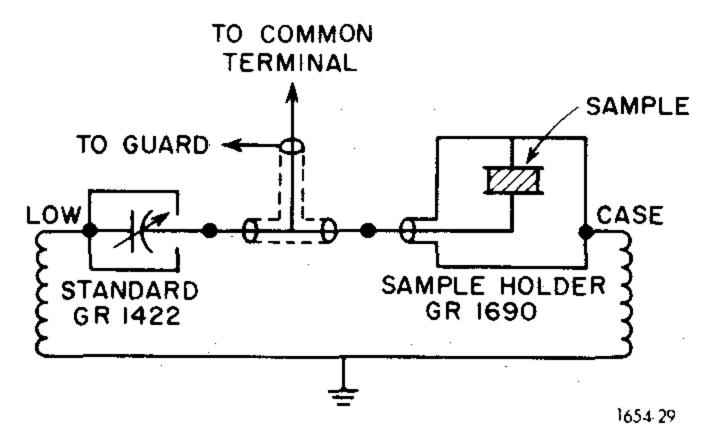


Figure 4-12. Measurement of dielectric samples using the 1690 Dielectric Sample Holder.

 

there is a small error if D is not zero. However, the error is less than 0.01% if D is less than 0.01. A second source of error is the factor B, which results in a  $\Delta Z$  error and

a. Set up the equipment as shown in Figure 4.12. Use the GUARDED position.

b. Insert the sample in the holder and screw the top electrode down until it is firmly in contact, as indicated by the release of the drive mechanism.

c. Balance C<sub>s</sub>, until the  $\Delta Z$  meter reads zero, and record the reading of C<sub>s</sub> as C<sub>1</sub>. Record the  $\Delta\theta$  meter indication  $(\Delta \theta_1)$  and the spacing of the electrodes  $(t_1)$ .

d. Remove the sample from the holder. Rebalance the  $\Delta Z$  meter for zero reading by readjusting the micrometer capacitor (electrodes). Do not disturb the value of  $C_s$ .

e. Record the new spacing  $(t_2)$  and the new reading on the  $\Delta \theta$  meter ( $\Delta \theta_2$ ).

#### 4.7.3 Calculation.

The calculation of K and D is the same as that given in the 1690-A instruction book, except that  $\Delta \theta_1$  and  $\Delta \theta_2$ replace  $D_1$  and  $D_2$ .

#### 4.7.4 Precautions.

The input impedance of the 1654 comparator can cause errors, as described in paragraph 3.11. However, if  $\Delta Z$  is balanced to zero, the error due to Rin is greatly reduced. At low frequencies, the  $\Delta Z$  balance must be very precise since

therefore an error in the indication  $C_1$  when  $\Delta Z$  is set to zero. The reading C<sub>1</sub> is in error by  $B\Delta\theta$  times 100%. Since  $\Delta \theta_1$  is approximately D<sub>x</sub>, this error depends on C<sub>x</sub>, D<sub>x</sub>, and the frequency, and is usually negligible at 1 kHz or higher.

Measurements at 100 Hz are difficult because of the phase shift errors due to B, and also the presence of hum, which makes precise meter indications difficult.

#### **4.8 BALANCED TRANSFORMER WINDINGS.**

The instrument compares two impedances, but if these two components are coils wound on the same core and connected properly, the  $\Delta Z$  meter will read approximately  $\Delta N_{N} \times 100\%$  when  $\Delta N$  is the turns difference and N is the

average number of turns  $\left(\frac{N_x + N_s}{2}\right)$ . The accuracy with

which this quantity is indicated depends upon the Q of the inductors and the coefficient of coupling. However, it is usually sufficient to indicate an unbalance as long as the Q's of the two windings are about the same. Turns may then be added to bring the windings into balance. The actual indications are given below for the setup of Figure 4-13.

the factor B (refer to paragraph 3.11) is large. The factor A will cause an error if the capacitance of the unknown is small, in which event, the calculated D, should be multi-

plied by  $1 + A = 1 + \frac{C_{in}}{2C_{v}}$  for the correct value. Here  $C_{in}$  is

the input capacitance of the bridge (refer to paragraph 4.4.2). This error is kept to a minimum by the use of shields tied to the guard terminal.

A small error in determining  $C_x$  is possible, due to the effect of the D on the  $\Delta Z$  balance. There are two sources of error here. First, because the magnitude |Z| is larger than the reactance


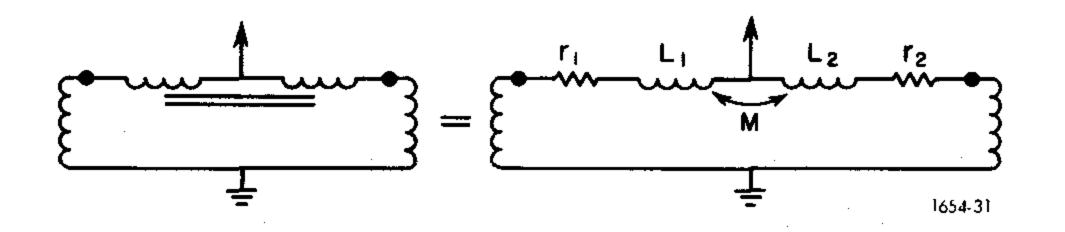


Figure 4-13. Measurements of balanced transformer windings.

## **4-6 SPECIAL MEASUREMENTS**



# $\Delta Z \text{ reads } 2 \frac{\frac{L_1 - L_2}{L_1 + L_2 + 2M} + \frac{r_1^2 - r_2^2}{\omega^2 (L_1 + L_2 + 2M)^2}}{1 + \frac{(r_1 + r_2)^2}{\omega^2 (L_1 + L_2 + 2M)^2}}$

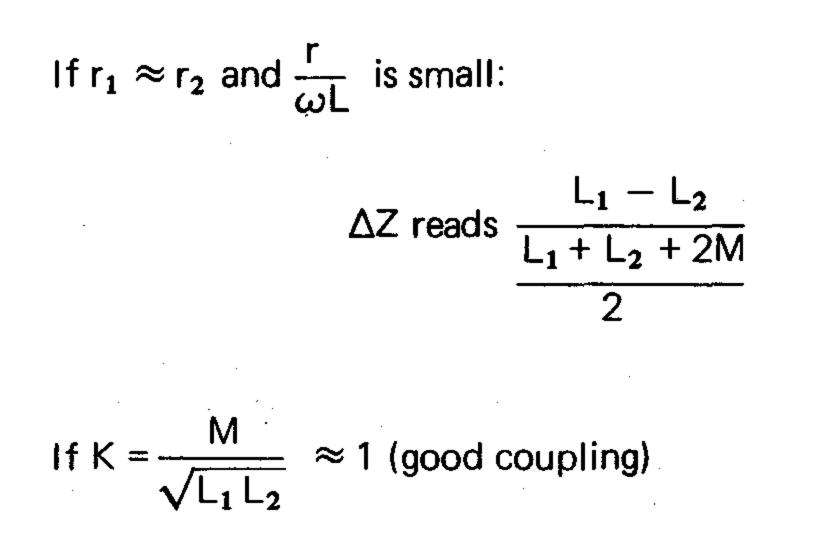


fore, the power supply must be electronically regulated to prevent excessive surges of current and the output terminals must be free of any capacitive filter components.


IMPEDANCE. The impedance of the power supply must be much smaller than the impedance of the unknown. The output impedance of the power supply is in series with the unknown, except when both the standard and the unknown capacitors are biased.

REFERENCE. The power supply must have grounding or floating capabilities. This requirement will depend on the bias setup used.

#### 4.9.3 Biasing Standard And Unknown Capacitors.

The measurement setup for using external bias  $(E_{dc})$  applied to both the standard and the unknown capacitor is shown in Figure 4-14.

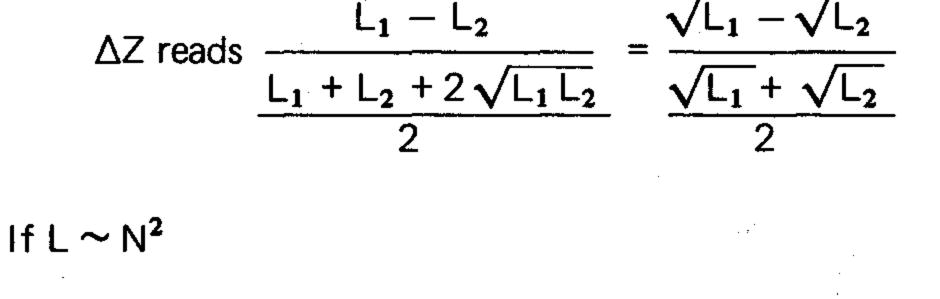

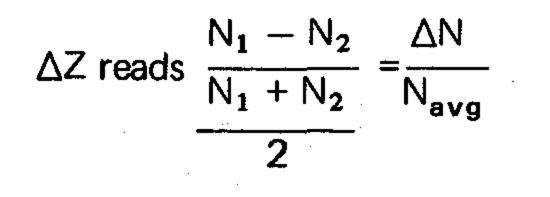

#### 4.9 MEASUREMENTS WITH DC POWER. 4.9.1 General.

This instrument is not particularly suited for the comparison of components with applied dc voltage or current. However, since this type of measurement must often be made, the following paragraphs describe possible test setups and the difficulties involved.

The errors caused by the components added to apply the direct current should be independent of the value of the dc, so that the readings taken with the applied source set at zero could be considered initial balances and subtracted from the test readings.

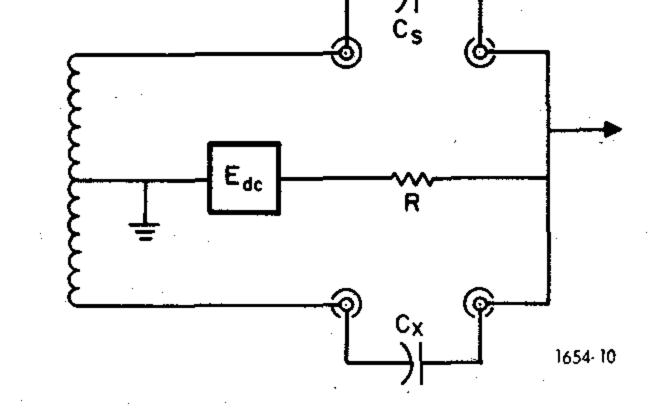


Figure 4-14. External bias (E<sub>dc</sub>) applied to standard and unknown capacitors.

The resistor, R, shunts the input circuit and can cause a  $\Delta\theta$  error, the same error caused by the input resistance (refer to paragraph 3.11), except that the error factor becomes  $\frac{1}{2\omega C_s R}$  However, if the capacitors have low leakage, R can be very large and the  $\Delta\theta$  error can be negligible. The maximum voltage that is applied to the common terminals is 400 V.

#### 4.9.4 Biasing Unknown Capacitor.

The measurement setup for using external bias  $(E_{dc})$  applied only to the unknown capacitor is shown in Figure 4-15.

## 4.9.2. Dc Power Requirements.

The dc power supply used in the measurement setups in Figures 4-14 thru 4-19 should meet the following requirements:

VOLTAGE. 0 to 400 V, dc.

CURRENT. The maximum instantaneous current must be limited to 100 mA to prevent the bridge from being severely damaged if the unknown is shorted. Many available power supplies use a capacitor across the output terminals to reduce the output impedance; power supplies of this type should not be used because the capacitor can cause instantaneous surges of current in excess of 100 mA. There-

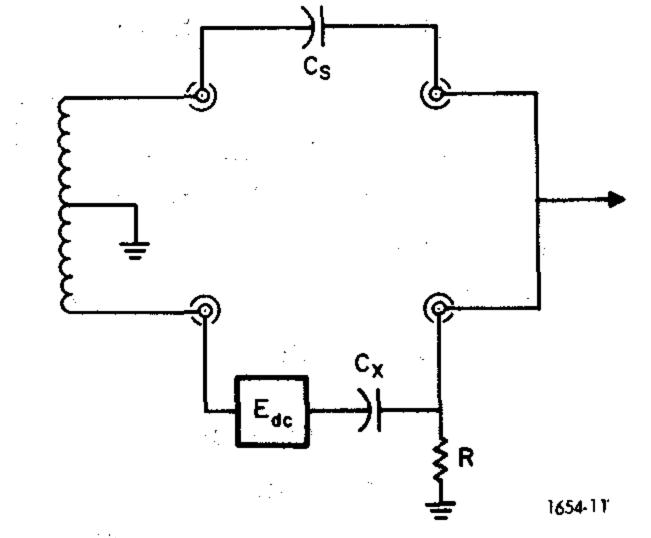


Figure 4-15. External bias (E<sub>dc</sub>) applied to unknown capacitor only.

## **SPECIAL MEASUREMENTS 4-7**




As in the setup shown in Figure 4-14, the resistor, R, shunts the input current and can cause a  $\Delta\theta$  error. If the capacitor has low leakage, R can be very large and the  $\Delta\theta$  error will be negligible.


Impedance of the bias supply should be very small compared to the impedance of the unknown.

#### 4.9.5 Biasing Standard And Unknown Resistors.

· · · ·

The measurement setup for applying bias voltage to both the standard and the unknown resistors is shown in Figure 4-16.

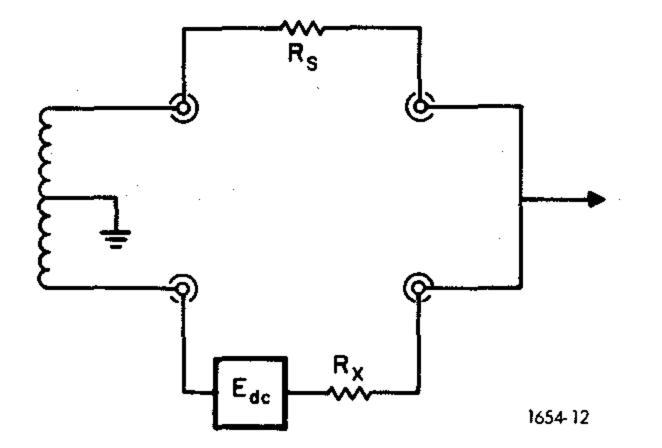

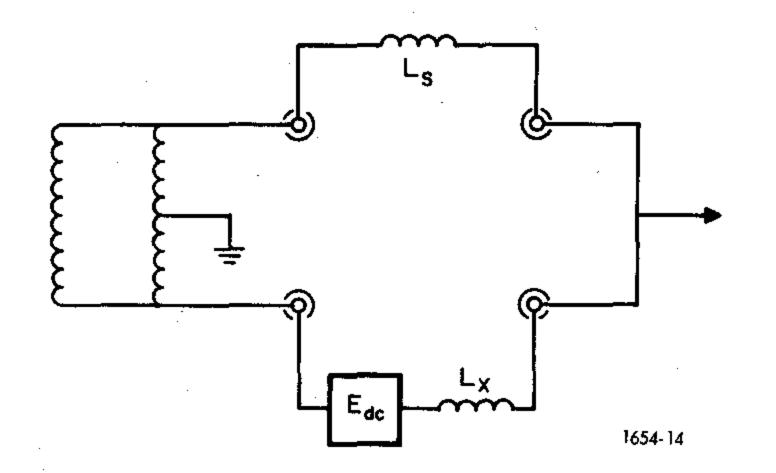

# Figure 4-18. External bias (E<sub>dc</sub>) applied to standard and unknown inductors.

The current through the standard and the unknown also flows through the driver-transformer secondary winding, as well as the bridge ratio transformer, and it should be limited to 100 mA. This current can cause a small error at 100 Hz if small  $\Delta\theta$  values are measured when large  $\Delta Z$ values exist. This error is a result of distortion in the


transformers.

Figure 4-16. External bias (E<sub>dc</sub>) applied to standard and unknown resistors.

The applied voltage is divided between  $R_s$  and  $R_x$  so that the actual voltage across each component should be measured if the component values differ by an appreciable amount. The maximum current through the standard and unknown resistors should be less than 100 mA.

#### 4.9.6. Biasing Unknown Resistor.

See Figure 4-17 for the measurement setup used for applying bias voltage to the unknown resistor only.

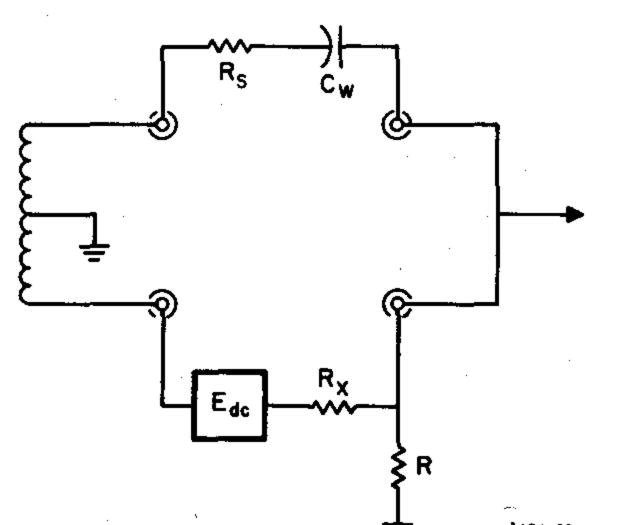

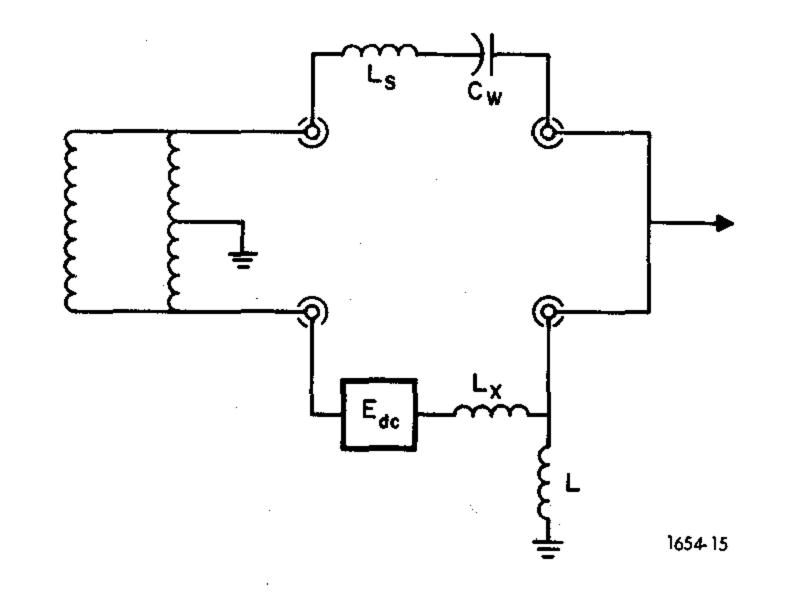


Figure 4-19. External bias (E<sub>dc</sub>) applied to unknown inductor only.

#### 4.9.8 Biasing Unknown Inductor.

See Figure 4-19 for the measurement setup used for applying bias voltage to the unknown inductor only.

The dc path across the detector input will cause some error unless L is very large. A large capacitor, Cw, is also recommended.

1654 - 13

Figure 4-17. External bias (E<sub>dc</sub>) applied to unknown resistor only.

The resistor, R, causes a voltage division that results in a lower voltage across the unknown, but the resultant error is easy to correct. The MAGNITUDE DIFFERENCE reading can be multiplied by  $1 + R_s/2R$  to make the correction. The capacitor,  $C_w$ , should be as large as possible.

## 4.9.7 Biasing Standard And Unknown Inductors.

The measurement setup for application of the bias voltage to both the standard and the unknown inductors is shown in Figure 4-18.

## 4.10 OUTPUT FACILITIES.

Analog output voltages proportional to meter deflections are available at the rear of the instrument (refer to Table 1-2 and Figure 1-3). The output of the 1654 can be used for digital readout, dc recording, and manual and automatic sorting (see Figure 4-20).

## 4.10.1 Digital Readout.

Although accuracy to 30 ppm is adequate for most uses, there are always applications where increased sensitivity is desired. Higher resolution of better than 10 ppm can be obtained when the output is measured by a digital voltmeter. The DVM used to measure the ANALOG VOLT-

## **4-8 SPECIAL MEASUREMENTS**

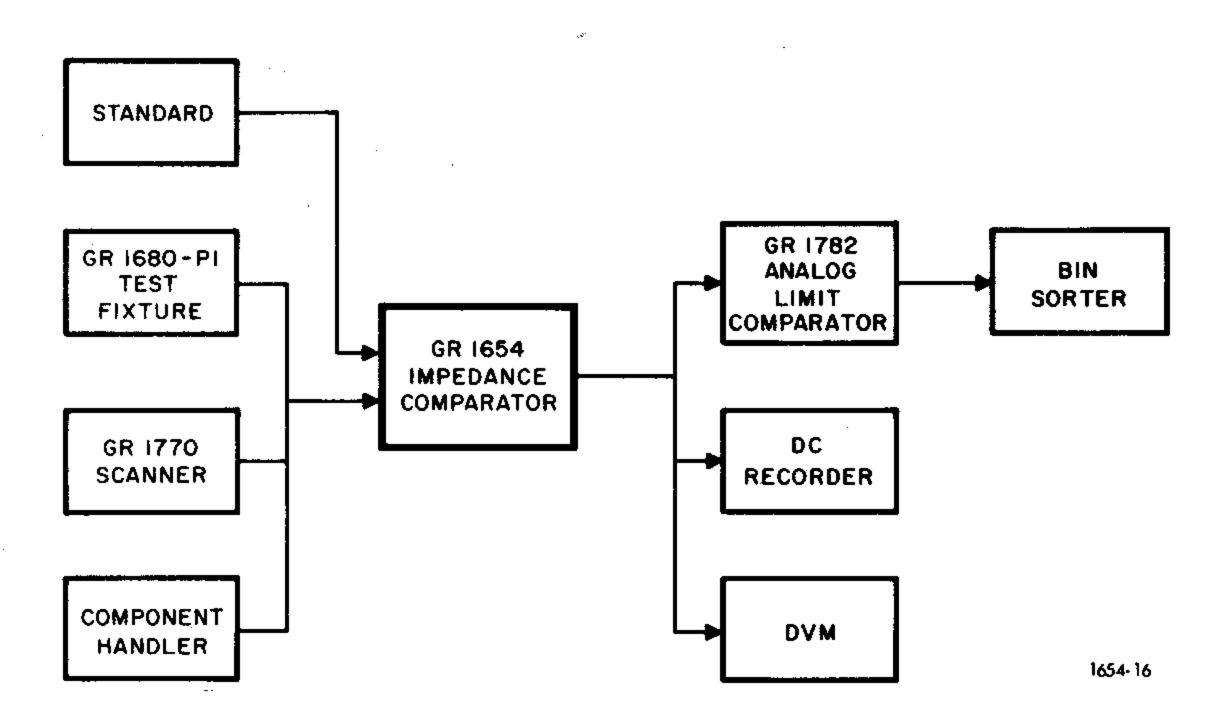


Figure 4-20. Typical instruments and devices for an automatic component-measurement system.

AGE OUTPUT should have an input impedance larger than 10 M $\Omega$  and full-scale ranges of 3.00 V and 10.00 V. For example, for a magnitude difference of 1%, the DVM will indicate 10.00 V with a resolution of 10 ppm.

The schematic diagram of the 1782 Analog Limit Comparator is shown in Figure 4-21. The method of comparison is shown in Figure 4-22.

## 4.10.2 Analog Recording.


In applications, such as temperature-coefficient measurements, a permanent record of the test data is desirable. In such measurements, the analog output voltages of 3-V and 10-V full scale, behind a 2-k $\Omega$  source impedance, can be used to drive dc recorders, such as the GR 1522.

#### 4.10.3 High-Speed Sorting.

The 1654 can be used to advantage in manual, semiautomatic, or fully-automatic selection and sorting applications.

For manual sorting, the large panel meters reduce errors and fatigue. For faster and relatively error-free sorting, use the analog output voltages available on the rear panel. The 1782 Analog Limit comparator is used to compare these voltages with preset upper and lower limits. For manual sorting, GO or NO GO lights indicate if the component is within acceptable limits. For automatic sorting, relay contacts are available to operate automatic sorting and classifying mechanisms. A rate of up to four tests per second can be obtained from this system.

For each independent limit, the input voltage, E, is compared with preset voltage, E<sub>2</sub>. The unbalance voltage, E<sub>a</sub> (if any), is amplified by an operational amplifier with sufficient positive feedback to cause the amplifier to switch off and on. Its output drives the NO GO lamp drivers. If the

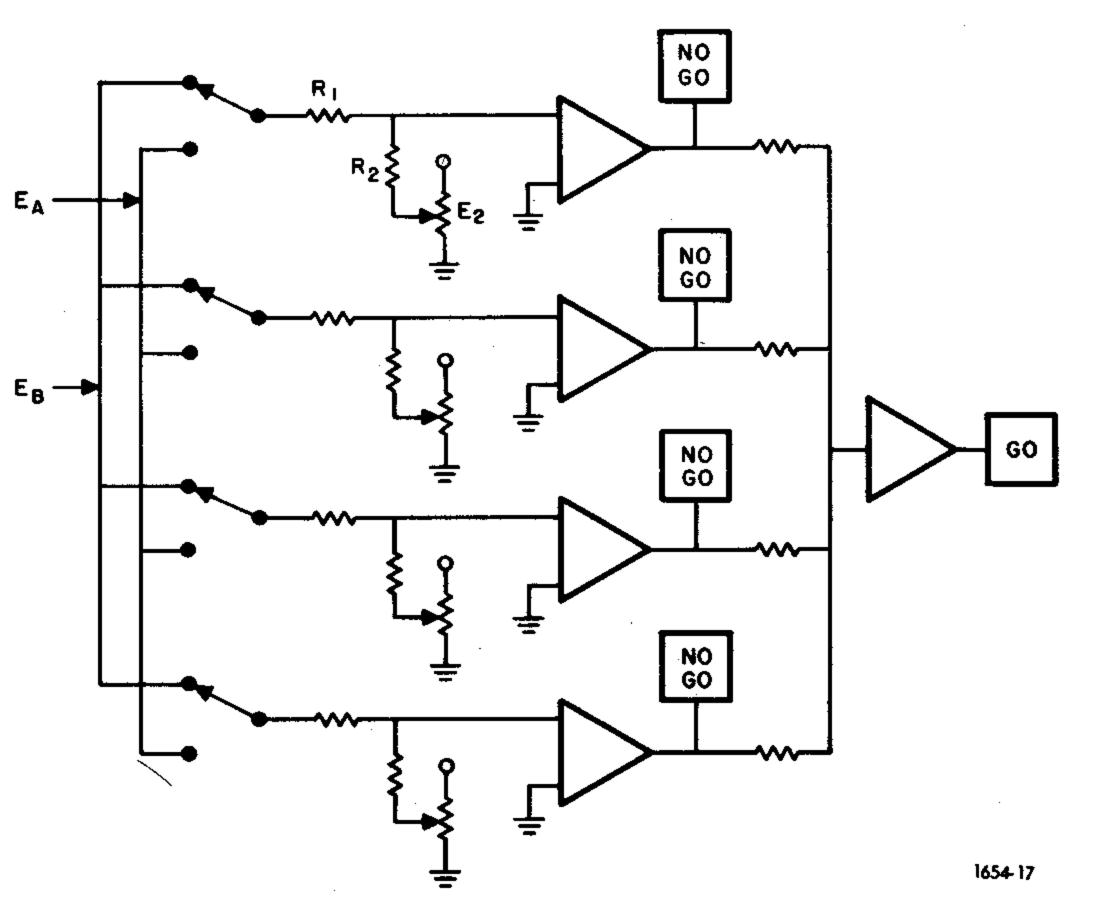

The 1782 can accept up to two inputs simultaneously in the form of analog voltages from 0 to ±10 V. For example, one input is the magnitude difference and the other the phase-angle difference. The source resistance of the input should be less than 100  $\Omega$ .

Decision outputs are provided by front-panel lamps with optional corresponding internal SPDT relays. For visual indication, one NO GO lamp is used for each of the four limits and a single GO lamp to indicate that measurement is within all limits. In addition, the analog-input voltages are available at the analog voltage-output connector to drive additional analog limit comparators if required. Two cascaded 1782's will give four sets of limits, etc.

Figure 4-21. Schematic diagram of 1782 Analog Limit Comparator.

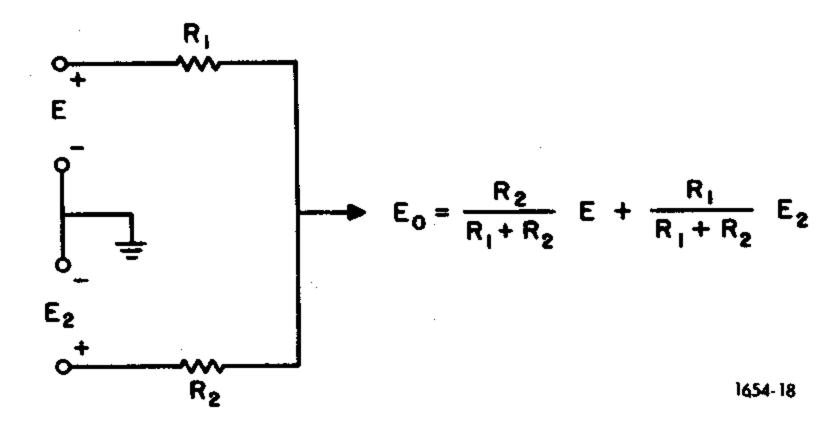


Figure 4-22. Comparison of input signal (E) with preset voltage  $(E_2)$  in 1782.

## **SPECIAL MEASUREMENTS 4-9**



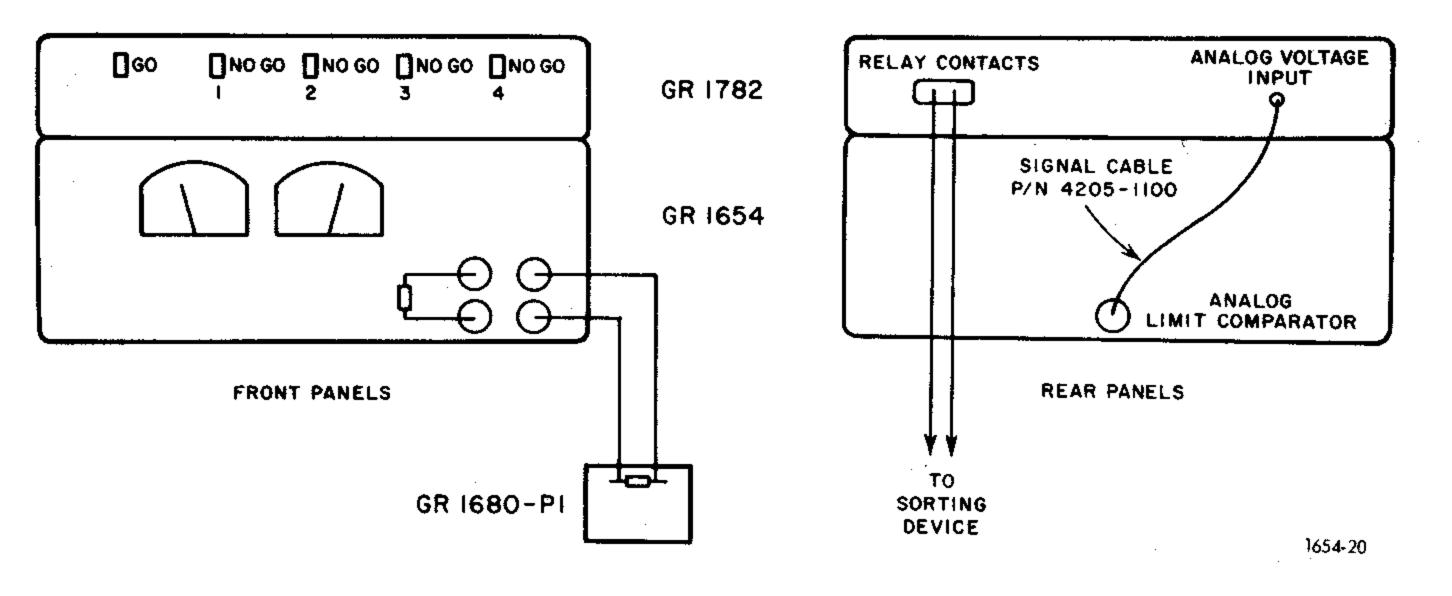


Figure 4-23. Typical test setup for high-speed selection and sorting of R, L, and C components.

comparison is out of tolerance, the NO GO lamps will be ON. Otherwise, a GO indication is given if the comparison is within all preset limits. A typical 1654/1782 sorting system is shown in Figure 4-23.

1654 detector, causing a large attenuation in the signal. If R<sub>in</sub> is small compared to the impedance of the diode, then the 1654 will read:

## 4.11 THREE-TERMINAL CAPACITORS.

The shield of a three-terminal capacitor, such as the GR 1422-CB, can be connected either to guard (refer to paragraph 3.7) or to ground. Both connections cause an error when small capacitors are measured and the error resulting from each connection should be evaluated to see which is smaller.

If the shield is guarded, there is a fixed error of  $\frac{C_a C_b}{C_s C_o} \times C_s C_s$ 

100% where  $C_o$  (the output capacitance of the guard) is 1  $\mu$ F and  $C_a$ ,  $C_b$ , and  $C_s$  are as shown in Figure 4-24. This error *is not* a percent of the reading, but rather a constanterror term that is present no matter what the capacitance difference.

If the shield is tied to ground, the capacitance,  $C_b$ , is added to the detector input capacitance,  $C_{in}$ , thus increasing the error. The resulting magnitude error, when capacitors are measured, is approximately  $\frac{C_{in} + C_b}{C_x + C_s} \times 100\%$ .

This is a percent of the reading and is therefore negligible, if only 1% or less.


In either arrangement, the shield of the lead connecting the capacitor to the common terminal should be tied to  $\Delta Z$  meter reading  $\approx 2 \text{ GR}_{in}$ 

 $\Delta\theta$  meter reading  $\approx 2 \omega CR_{in}$ 

where G and C are the equivalent parallel conductance and capacitance of the diode or transistor being tested.

For example, if  $R_{in} = 500 \Omega$ , the  $\Delta Z$  meter will read 10  $\mu V$  full scale on the 1% range and the  $\Delta \theta$  meter will read 15.9 pF full scale on the 0.1 radian range at 100 kHz.

If impedance is connected between the standard terminal and the common terminal, the meters will read the difference in capacitance and conductance. A variable capacitance is shown, which is useful in cancelling out the capacitance of the leads and any test fixture used.

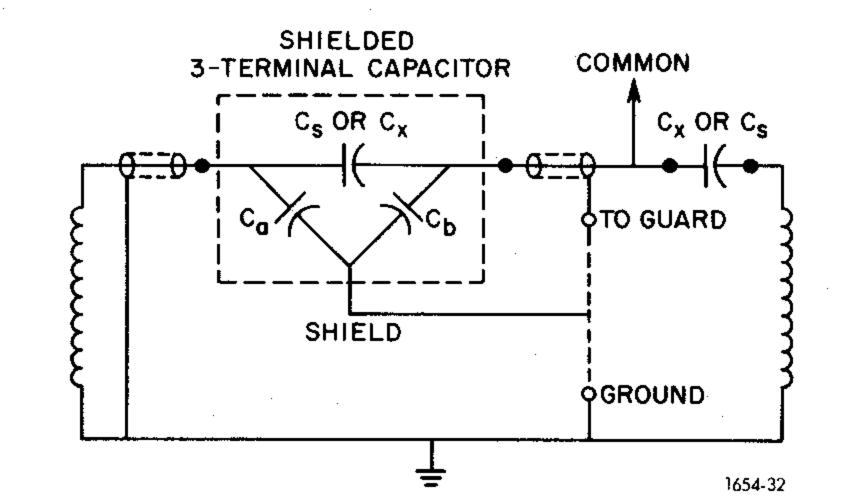


guard and the shield of the other lead (to the STANDARD or UNKNOWN terminal) should be grounded, if shielded wire is used. Note that these shields are not joined. Also, if the capacitor shield is guarded, it must be insulated from ground.

## 4.12 SEMICONDUCTOR CAPACITANCE AND CONDUCTANCE.

The 1654 can be used for production checking of small capacitance and conductance values of back-biased diodes and transistor collector junctions. The basic circuit is shown in Figure 4-25. The resistor, R<sub>in</sub>, shunts the input of the

# Figure 4-24. Measurement of shielded, three-terminal capacitors.

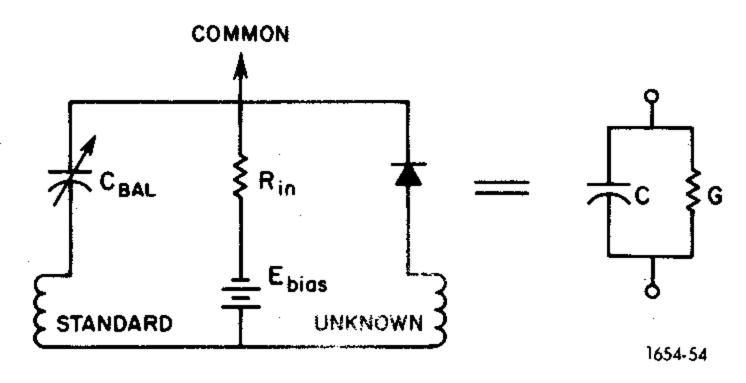

## Figure 4-25. Measurement of back-biased diode and transistor capacitance and conductance.

## **4-10 SPECIAL MEASUREMENTS**

# **Theory–Section 5**

5.1 GENERAL	
5.2 OSCILLATOR/POWER AMPLIFIER	₹
5.3 BRIDGE CIRCUIT	
5.4 UNBALANCED-AMPLIFIER	
5.5 DETECTOR CIRCUIT	
5.6 DC AMPLIFIER BOARD	
5.7 OFF-SCALE AND START	
5.8 POWER SUPPLY	

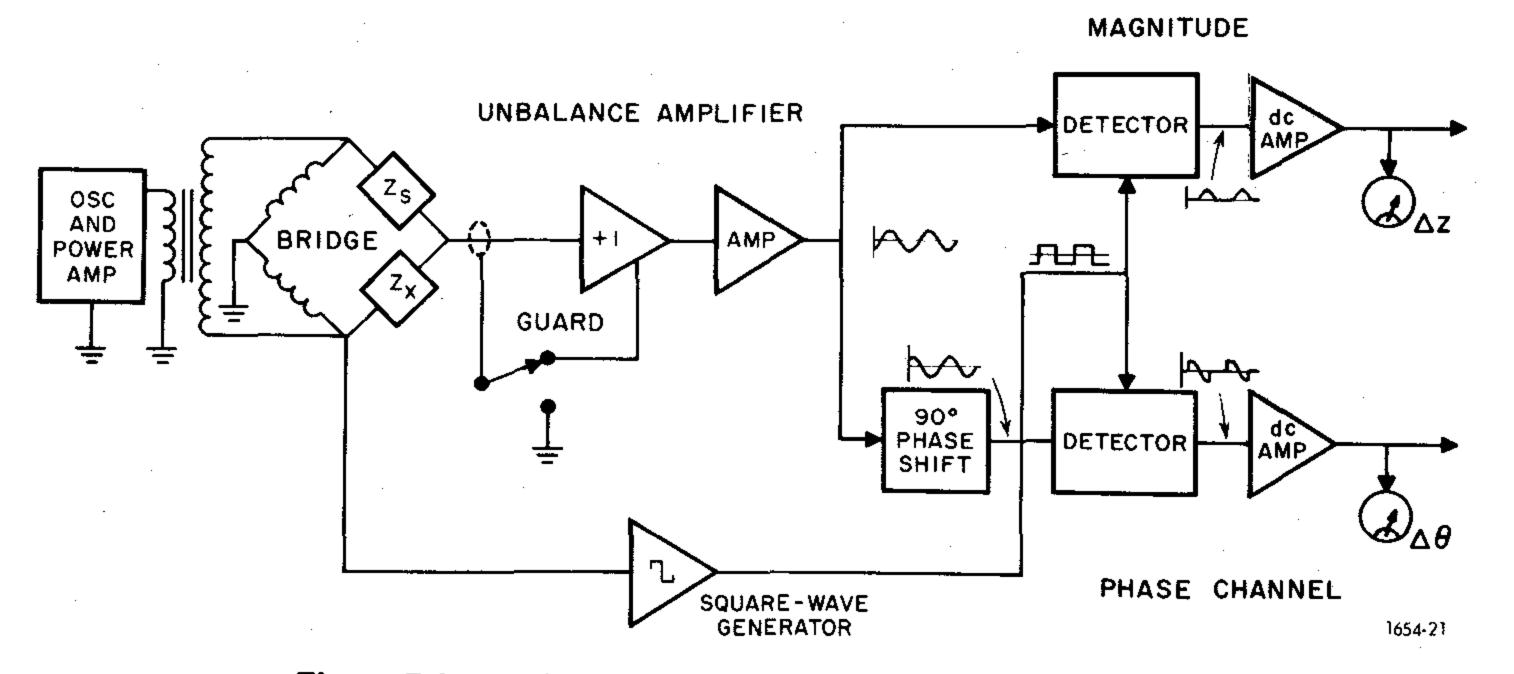


Figure 5-1. Block diagram of 1654 Impedance Comparator.

### **5.1 GENERAL.**

The block diagram (see Figure 5-1) of the 1654 Impedance Comparator indicates the various operations necessary to produce a measurement signal and provide two meter indications, as well as the analog output voltage available at the rear of the instrument.

An internal RC oscillator generates the power frequencies of 100 Hz, 1 kHz, 10 kHz, and 100 kHz. Its output is fed to a power amplifier that drives the bridge transformer. The bridge circuit consists of the two windings of a tightly coupled 1:1-ratio torodial transformer with the standard and unknown impedances serving as the two remaining bridge arms effectively reduce cable capacitance by a factor of about 1000. This allows measurement of test components located as far as 30 ft. away with negligible error.

After further amplification, the unbalance signal is fed directly to the phase-sensitive detector in the magnitude channel. The phase detector is essentially a switch that is synchronous with the frequency of oscillation. Exact switching is controlled by a square wave that is referenced to the zero phase signal of the bridge.

The rectified voltage is that component of the error voltage that is in phase with the controlling square-wave voltage. The detected output is fed to a low-drift dc operational amplifier that provides the required analog output voltage and the magnitude-difference meter reading. For the phase channel, the circuitry is of identical design except that the error voltage is first applied through a 90° phase shift circuit before it reaches the phase-sensitive detector. This brings the frequency of oscillation into phase with the test component, due to the phase difference. In this channel, the indication is the phase-angle difference between the test component and the standard.

bridge arms.

The unbalance voltage of the bridge, a measure of the magnitude difference and phase-angle difference between the standard and unknown, is applied to a high input-impedance amplifier so that no loading will occur when measuring high-impedance components.

In the case of high-impedance measurements, where shielded cable is used to prevent pickup, the cable capacitance to ground will cause phase shift and attenuation of the unbalance signal. The amplifier also provides a lowimpedance guard voltage that can be used to drive the amplifier input shield at approximately the same potential as the input, to minimize cable capacitance. The guard can

The following paragraphs present a circuit analysis and accompanying elementary schematics of the various circuit components described in paragraph 5.1. Refer also to the complete schematic diagrams in Section 7.

**THEORY 5-1** 



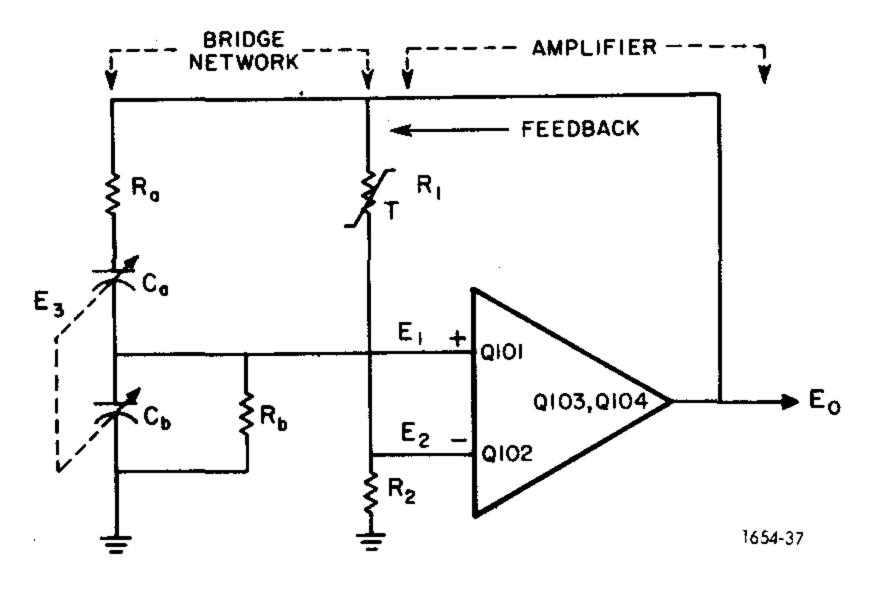


Figure 5-2. Diagram of RC Oscillator in the oscillator/ power amplifier circuit.

## 5.2 OSCILLATOR/POWER AMPLIFIER.

### 5.2.1 Oscillator.

See Figure 5-2 for a simplified block diagram of the oscillator circuit. The signal source for the measurement bridge is a Wienbridge-type RC oscillator that utilizes a thermistor (R1) for amplitude control. The oscillator circuit board is located in the OSC-PA compartment in the right rear side of the instrument. See Figure 5-3 for a more detailed layout of the bridge network.

Another divider in the bridge network ( $R_1$  and  $R_2$ ) determines the gain of the amplifier. The ratio of the output of this divider applied to Q102 ( $E_2$ ) to the voltage applied to the input of the other divider ( $E_3$ ), i.e., its transfer function, is:

$$\frac{E_2}{E_3} = \frac{R_2}{R_1 + R_2} = \frac{1}{3}$$

This divider automatically preserves the amplifier gain at 3, thus holding the circuit's loop gain at 1 and maintaining stable oscillations of the circuit at a frequency of  $\omega_o$ . Thermistor, R<sub>1</sub>, maintains a constant output amplitude.

The FREQUENCY control (S905), on the front panel, determines the operating frequency,  $\omega_o$ . This control selects the capacitance values for C<sub>a</sub> and C<sub>b</sub> (see Figure 5-2 and 5-3). Each frequency can be varied slightly by internal adjustments R111, R112, R113, and R114.

Thermistors R132 and R134 compensate for the temperature coefficients of  $C_a$  and  $C_b$ .

### 5.2.2 Bridge Network.

A divider in the bridge network (Ra, Ca, Rb, and Cb, Figure 5-2) determines the operating frequency:

$$\omega_{o} = \frac{1}{\sqrt{R_{a}C_{a}R_{b}C_{b}}}$$

The ratio of the output of this divider applied to Q101 ( $E_1$ ) to the voltage applied to the input of the divider ( $E_3$ ), i.e. the transfer function, is:

$$\frac{E_1}{E_3} = \frac{1}{\frac{\omega}{\omega_0} - \frac{\omega_0}{\omega_0}} = \frac{1}{3} \text{ at the operating frequency.}$$

5.2.3 Oscillator Amplifier.

See Figure 7-4 for a schematic diagram of the oscillator amplifier. This is a four-transistor operational amplifier with Q101 and Q102 forming a differential pair whose output is taken from the collector of Q101 and fed to the base of Q103. The output of Q103 is applied to the base of Q104 (emitter follower) whose output is used as feedback to sustain oscillations in the bridge network and to drive the power amplifier which, in turn, drives the bridge circuit. At the base of Q103, R104 and C101 are utilized to maintain high-frequency stability.

### 5.2.4 Power Amplifier.

Figure 7-4 shows a schematic diagram of the poweramplifier circuit. The CALIBRATE control (R902) on the front panel is used to set the oscillator voltage level that is applied to the power amplifier. The power amplifier pro-

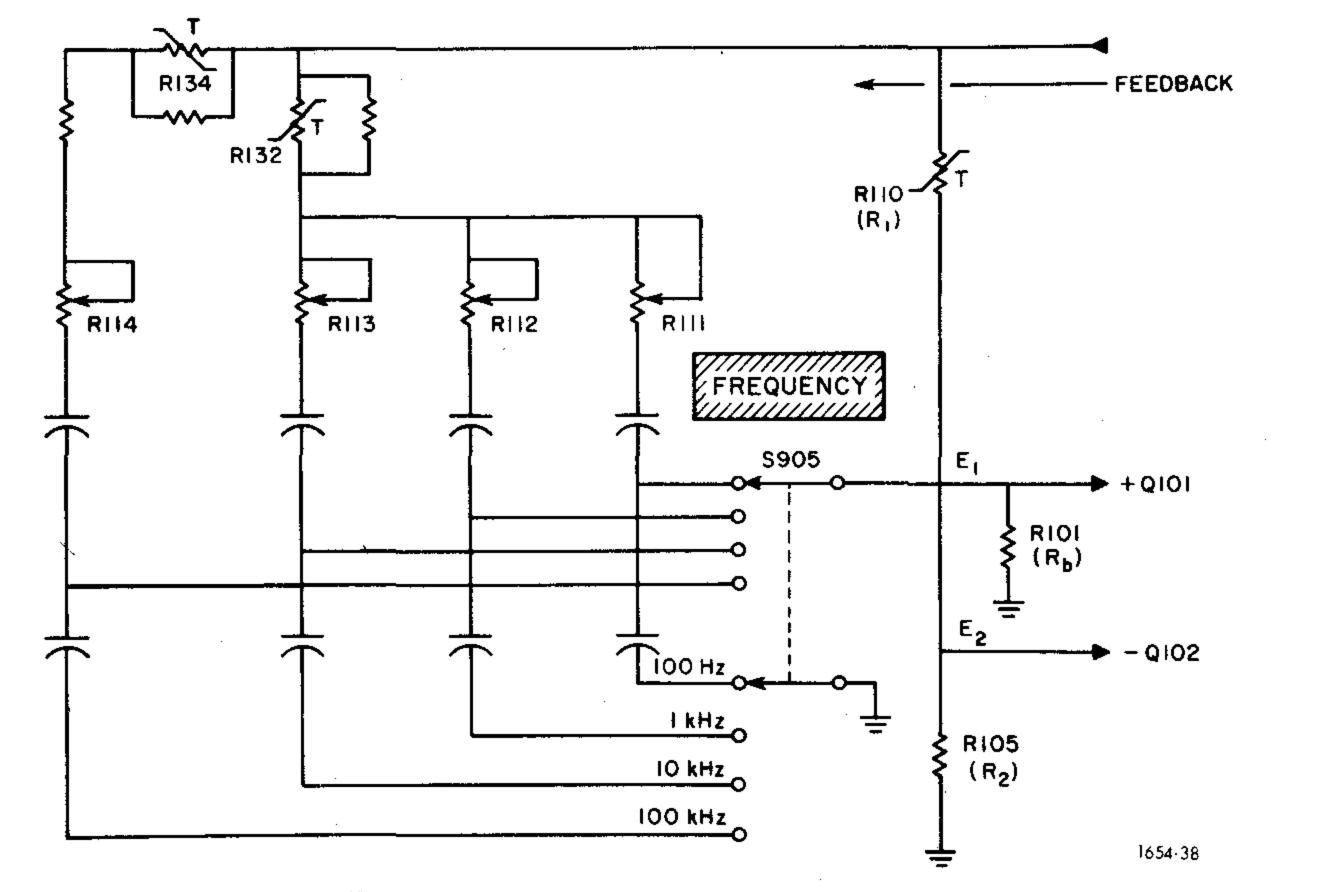


Figure 5-3. Bridge network schematic.

**5-2 THEORY** 



vides the necessary high-current signal to drive the bridge transformers.

The signal from R902 is applied to the base of Q105, the input amplifier. The emitter of Q105 is connected to the output circuit at the common-emitter junction of Q107 and Q108, thus setting the bias of Q105. Transistor Q105 detects any difference voltage between the input and output, amplifies this difference voltage, and applies it to the base of Q106, which drives the push-pull output stage (Q107 and Q108).

Capacitor C110 maintains high-frequency stability of the circuit, and C111 provides high-impedance drive for the output stage. Diodes CR101 and CR102 eliminate cross-over distortion of the push-pull output stage. Diodes CR103 through CR105 are used for output-circuit protection.

when the magnitude difference is measured on the 0.1% range, the error is <0.25% x 0.1%, or 2.5 ppm.

Within the range of the bridge,  $(\theta_x - \theta_s) \leq 0.3$  and  $\Delta Z \leq 30\%$ , the worst error is 2.2% of the actual magnitude difference.

Since it is generally desirable to measure the magnitude difference as a percent of the standard rather than the average, an additional approximation is necessary; if  $(|Z_x| - |Z_s|)$  is  $\leq 3\%$ , then:

$$\frac{|Z_{\mathbf{x}}| - |Z_{\mathbf{s}}|}{\frac{|Z_{\mathbf{x}}| + |Z_{\mathbf{s}}|}{2}} \approx \frac{|Z_{\mathbf{x}}| - |Z_{\mathbf{s}}|}{|Z_{\mathbf{s}}|}$$

which is the result desired. The error resulting from this approximation is negligible, except in the 10% and 30% ranges where the scale becomes nonlinear. Rather than complicate the meter reading by using two more scales, the magnitude channel has been linearized to ensure accurate readings without correction for deviations up to 30%. The imaginary part of the bridge unbalance voltage is:

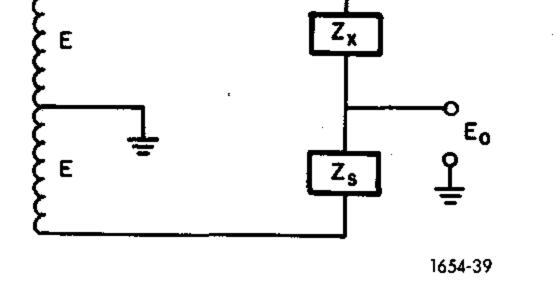


Figure 5-4. Basic bridge circuit.

### 5.3 BRIDGE CIRCUIT.

### 5.3.1 Bridge Equations.

The basic bridge circuit is shown in Figure 5-4. If the voltages (E) across the inductively coupled ratio arms are equal, the output voltage ( $E_o$ ) is:

$$\frac{E_o}{E} = \frac{Z_x - Z_s}{Z_x + Z_s}$$

The real part is:

$$R_{e}\left(\frac{E_{o}}{E}\right) = \frac{|Z_{x}| - |Z_{s}|}{|Z_{x}| + |Z_{s}|}$$

$$R_{e}\left(\frac{E_{o}}{E}\right) = \frac{\cos\left(\theta_{x} - \theta_{s}\right) - 1}{1 + \frac{\cos\left(\theta_{x} - \theta_{s}\right) - 1}{|Z|||Z||}}$$

$$I_{m}\left(\frac{E_{o}}{E}\right) = \frac{\sin\left(\theta_{x} - \theta_{s}\right)}{\cos\left(\theta_{x} - \theta_{s}\right) + \frac{|Z_{x}|}{2|Z_{s}|} + \frac{|Z_{s}|}{2|Z_{x}|}}$$

If  $\Delta Z \leq 10\%$  and  $\Delta \theta \leq 0.1$  radian, this expression is reduced to:

 
$$I_{m}\left(\frac{E_{o}}{E}\right) = \frac{1}{2} \left(\theta_{x} - \theta_{s}\right)$$

with an error of 0.25%, which is a percent of the meter reading, and therefore, negligible.

In the worst case, for  $\Delta Z = 30\%$  and  $\Delta \theta \le 0.3$  radian, the error is 0.6% of the phase-angle difference.

### 5.3.2 Bridge Transformers.

The bridge transformers consist of a driver transformer that provides test voltages of 0.3 V, 1 V, and 3 V to the bridge and a tightly-coupled 1:1-ratio toroidal transformer. A diagram of the driver transformer is shown in Figure 5-5.



If  $\theta_x - \theta_s$  is small, cos  $(\theta_x - \theta_s)$  is close to unity and this equation can be reduced to:

$$R_{e}\left(\frac{E_{o}}{E}\right) \approx \frac{|Z_{x}| - |Z_{s}|}{|Z_{x}| + |Z_{s}|}$$

For  $(\theta_x - \theta_s) \leq 0.1$  and  $\Delta Z \leq 10\%$ , this approximation is extremely reliable and will produce a maximum error of 0.25%. This error is 0.25% of the actual magnitude difference and is insignificant on all ranges. For example,

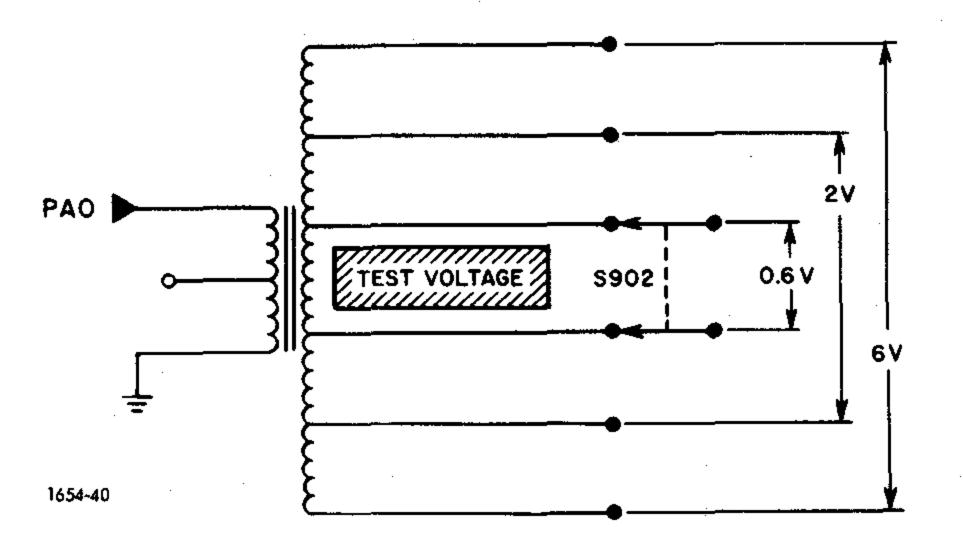


Figure 5-5. Bridge driver transformer.

**THEORY 5-3** 



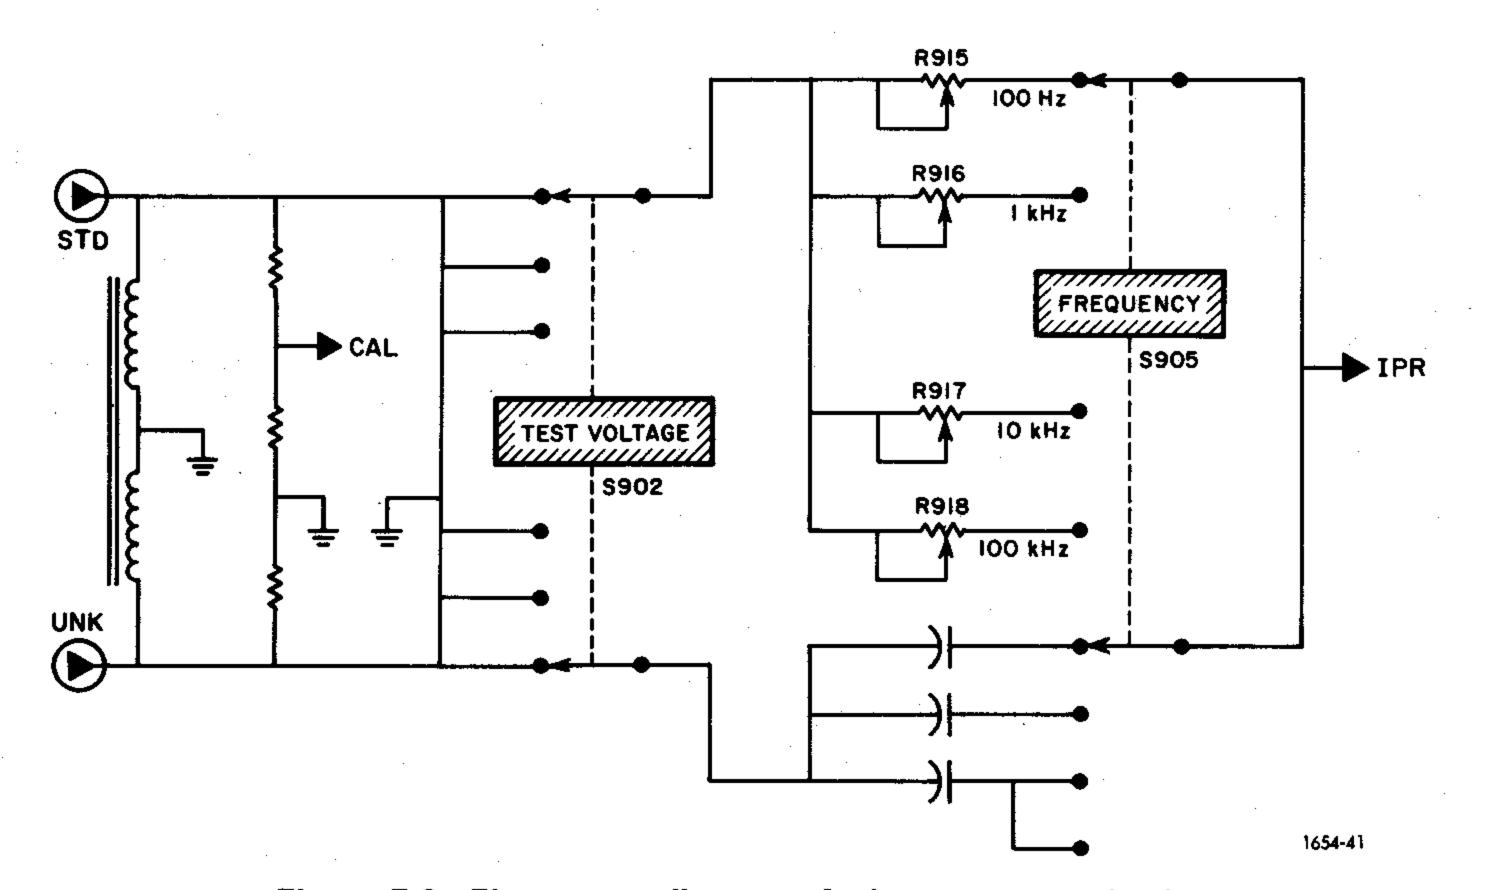


Figure 5-6. Elementary diagram of phase-converter circuit.

The TEST VOLTAGE switch (S902) on the front panel selects the test voltages that determine the measurement range. For test voltages of 0.3 V, 1 V, and 3 V, the maximum deviation ranges are  $\pm 30\%$ ,  $\pm 10\%$ , and  $\pm 3\%$ , respectively.

A tap on the primary winding provides a 2-V test voltage for up to ±10% deviation. This test voltage is useful for checking certain types of capacitors to military specifications, such as MIL-C-11015C.

The 1:1-ratio toroidal transformer is wound on a highpermeability, wound-ribbon core. The two windings are made by twisting two identical wires together, and then winding the twisted pair. This method approaches the ideal, where the windings occupy the same volume so that the flux linkage is identical, thus producing unity coupling and equal output voltages.

### 5.3.3 Z Phase Converter and CAL 1% Voltage.

The Z phase-converter circuit and CAL 1% voltage are shown in Figure 5-6. The unbalance voltage from the bridge is fed through a series of amplifier stages before it is applied to the phase-sensitive detectors (see Figure 5-1); at this point, phase errors can be expected. The reference voltage (IPR) derived from the bridge voltage is used to control the phase detectors and is brought into phase with the magnitude portion of the unbalance voltage by adjusting trimmers R915 through R918, associated with each frequency. The junction of R924 and R925 provides a 1% unbalance calibration voltage that is inserted into the unbalance amplifier when the INPUT switch (S906) is set to CAL 1%.

### 5.4.1 Amplifier.

An elementary schematic of the high-input-impedance amplifier circuit is shown in Figure 5-7.

The wide-band amplifier features high input impedance, unity gain, and several outputs. High input impedance is achieved by using a field-effect transistor, Q301, in a sourcefollower configuration. Input capacitance is reduced to a minimum through bootstrapping techniques, with capacitors C304, C305, and C306.

The error signal from the bridge circuit is applied to the gate of Q301. The output of Q301 drives two unity-gain amplifiers, the signal amplifier and the guard amplifier. The signal amplifier is made up of Q304 and Q305. The output of Q304 is used to drive Q305, whose output is used to:

1. provide an error signal for further amplification,

2. provide the necessary feedback for Q301 to increase input impedance,

3. drive the overload amplifier which drives the logic circuits,

4. provide feedback to the emitter of Q304, thus obtaining constant unity gain.

### 5.4.2 Guard.

The guard amplifier is made up of Q302 and Q303, see

### 5.4 UNBALANCE-AMPLIFIER.

The unbalance-amplifier circuit board, as viewed from the front of the instrument, is the first board in the center compartment. The circuit consists of a high-input-impedance amplifier, a guard circuit, two high-level signal amplifiers, and a 90°-phase-shift stage. Figure 7-6. The output of Q302 drives Q303. The output of Q303 provides input guard and drives the input shield to minimize cable capacitance if shielded cables are used to connect test components to the instrument.

## 5.4.3 High-Level Signal Amplifiers.

Two operational amplifiers (see Figure 7-6) further amplify the error signal for use by the phase-sensitive detectors.

The first stage accepts the error signal, OVS, from the output of the unity-gain amplifier. This amplifier consists of four transistor stages, Q306 through Q309. Due to its high open-loop gain, the closed-loop gain of this amplifier is



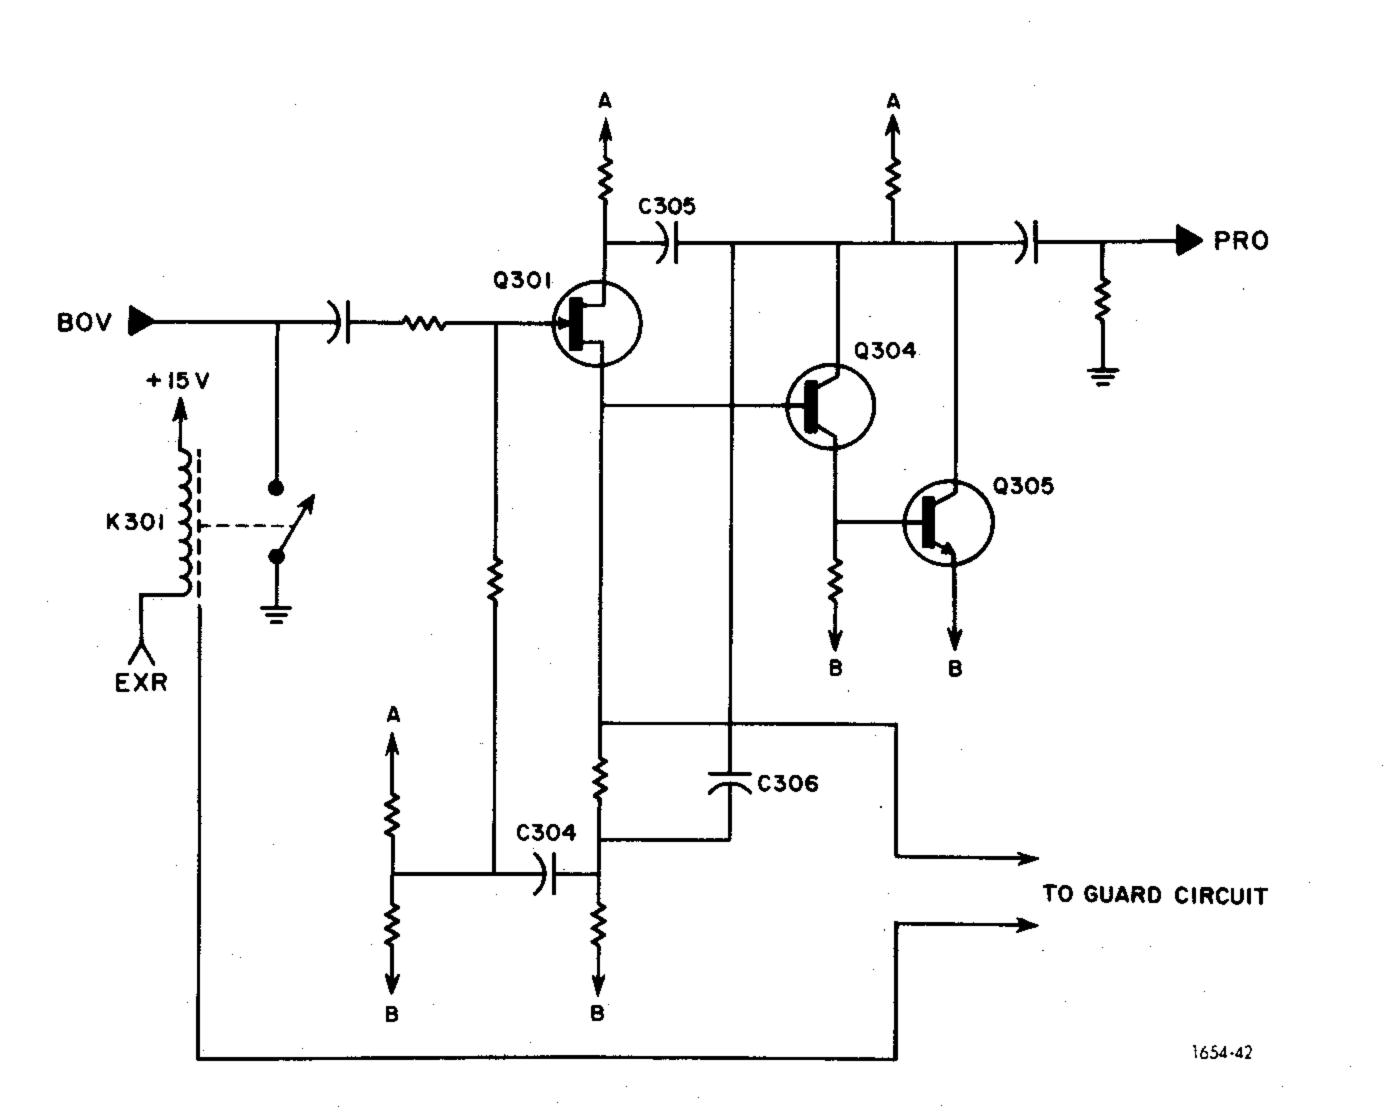


Figure 5-7. High-impedance amplifier used in the unbalance-amplifier circuit.

very nearly equal to  $1 + \frac{R326}{R324}$ . Capacitor C321 ensures high-frequency stability. Resistor R318 provides an indication of off-scale direction when K302 is energized during overload conditions.

The second stage is another operational amplifier consisting of three transistor stages, Q310 through Q312. This amplifier provides voltage amplification with an overall gain that is approximately equal to the ratio of R332 to R331. The output signal, FOA, is fed directly to the phase sensitive detector in the magnitude channel and to the 90% phase-shift circuit in the phase-angle difference channel. Capacitor C313 is switched into the circuit at 100 Hz to minimize phase shift through the amplifiers.

### 5.4.4 90° Phase Shift.

An operational amplifier consisting of four transistor stages, Q313 through Q316, is used in conjunction with the RC phase-shift circuits to provide a 90° phase shift versus frequency while maintaining unity gain over the whole frequency range (see Figure 5-8).

The open-loop gain of the operational amplifier is very large. The input/output transfer function can be written as:

	1 - RCS	$1 - j\omega RC$
E <sub>1</sub>	$\left(1 + RCS\right)^{=}$	$1 + j\omega RC$

where  $S=j\omega$ 

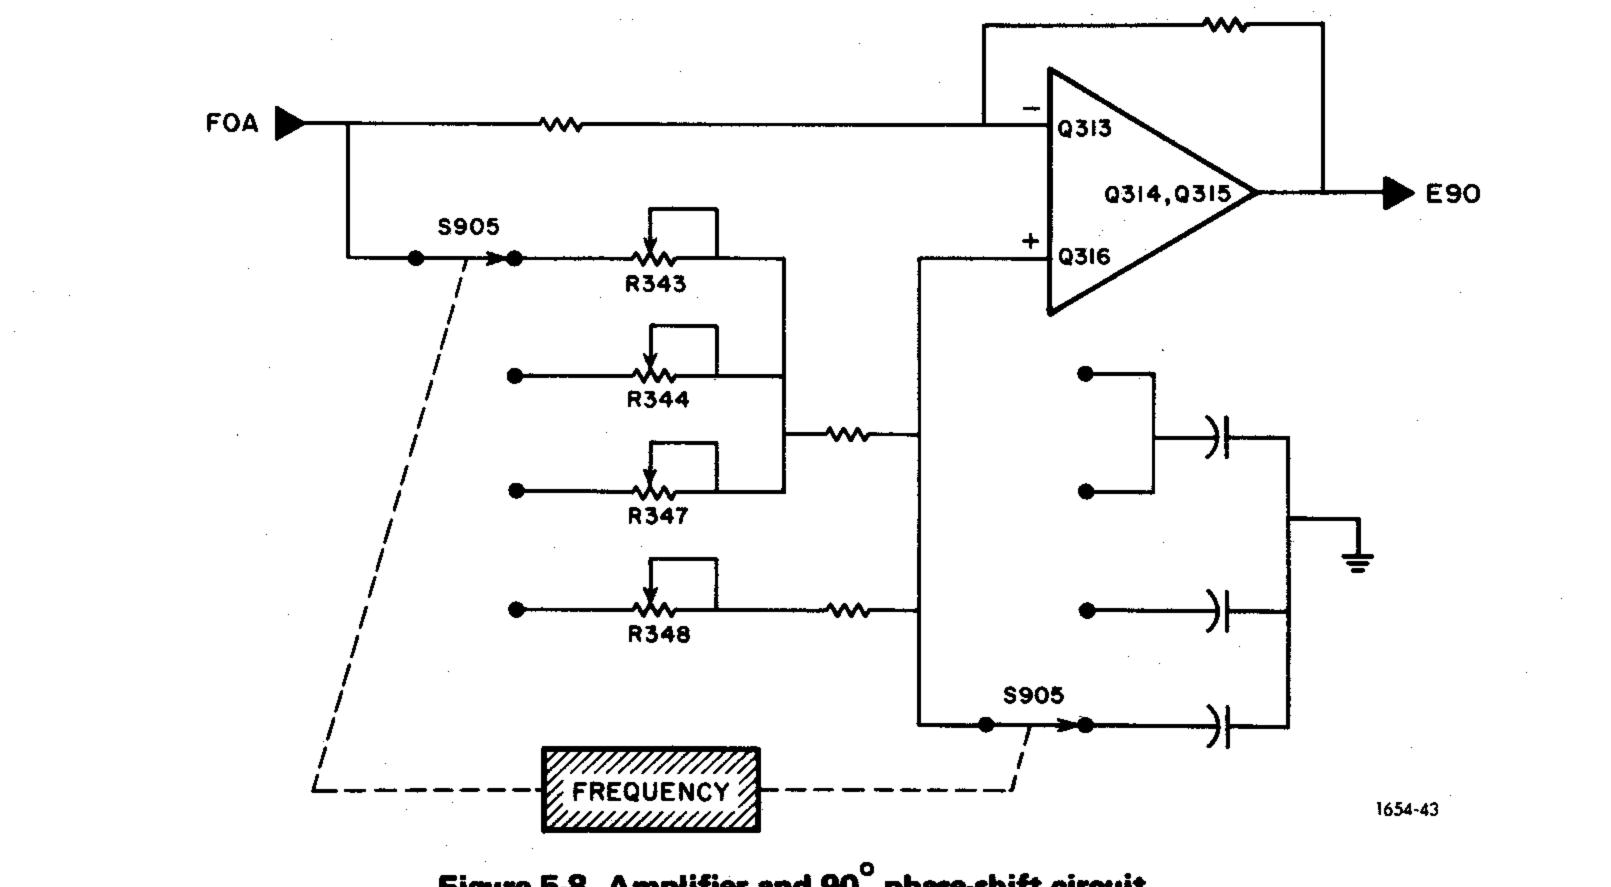


Figure 5-8. Amplifier and 90° phase-shift circuit.





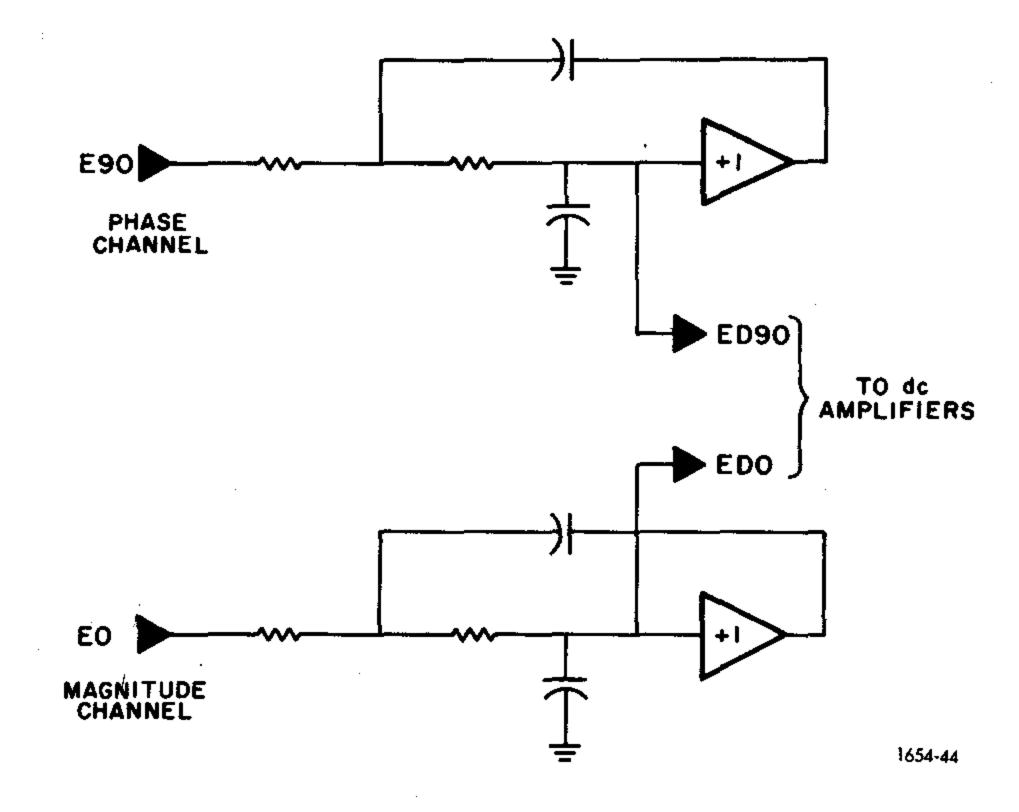


Figure 5-9. Block diagram of detector circuits.

The same principles apply equally as well to the phase channel because both channels are identical in design. See Figure 5-9 for a block diagram of the detector circuit.

### 5.5.2 Phase Detectors.

The phase detector is essentially a switch that opens and closes in coincidence with the oscillation frequency. Exact switching is controlled by a square wave that is referenced to the zero-phase signal of the bridge.

See Figure 5-10. The unbalance signal, EO, is fed to the analog switches Q405 and Q406. Transistor Q405 prevents excessive current from being injected into the signal path. When the drive voltage is sufficiently negative, both Q405 and Q406 are cut off. Two reverse-current components, from the gate-source junction of Q405 and Q406, flow back into the signal source. Only the gate-driven reverse current of Q406 flows into the output signal path.

When the drive voltage is positive, diodes CR404 and CR405 are reverse biased and the gate-source junction of

This is the transfer function of an all-pass, phase-shift network whose phase varies from 0° to + 180°. For the values chosen,  $\omega$ RC=1, the error signal at the output of the amplifier is shifted in phase by 90°. This output is applied to the phase-sensitive detector in the phase-angle difference channel.

Potentiometers R343, R344, R347, and R348 are used for phase adjustment corresponding to the frequency selected by switch, S905.

### **5.5 DETECTOR CIRCUIT.**

### 5.5.1 General.

The detector circuit board is the second board in the center compartment of the instrument. It contains two phase detectors and two active filters (one for each channel), with additional circuitry required to generate the reference square wave.

The principles of phase detection are described in the following paragraphs for the magnitude (in-phase) channel.

Q405 becomes zero; therefore, Q405 will have a low value of "on" resistance. Transistor Q406 is turned on by Q405. The "on" channel is isolated from the driving circuit by the two diodes, CR404 and CR405. Capacitors C410 and C411 improve the turn-on of Q405. Capacitor C411 is a zero adjustment for 100-kHz operation, it adjusts the leakage currents injected into the signal path from Q405 and Q406 to nearly the same level at 100 kHz as at the other frequencies.

The resultant signal, EDOD, is similar to the waveform shown in Figure 5-11 when the unbalance signal, EO, is magnitude only.

For the phase channel, the circuit is essentially the same, except that the error voltage is first applied through a 90° phase-shift network before it reaches the phase detector. The detected waveform, ED90D, is shown in Figure 5-12.

### 5.5.3 Active Filters.

The detected output signal, EDOD, is applied to an active low-pass RC filter to obtain sharp cut-off characteristics at low frequency. See Figure 7-8.

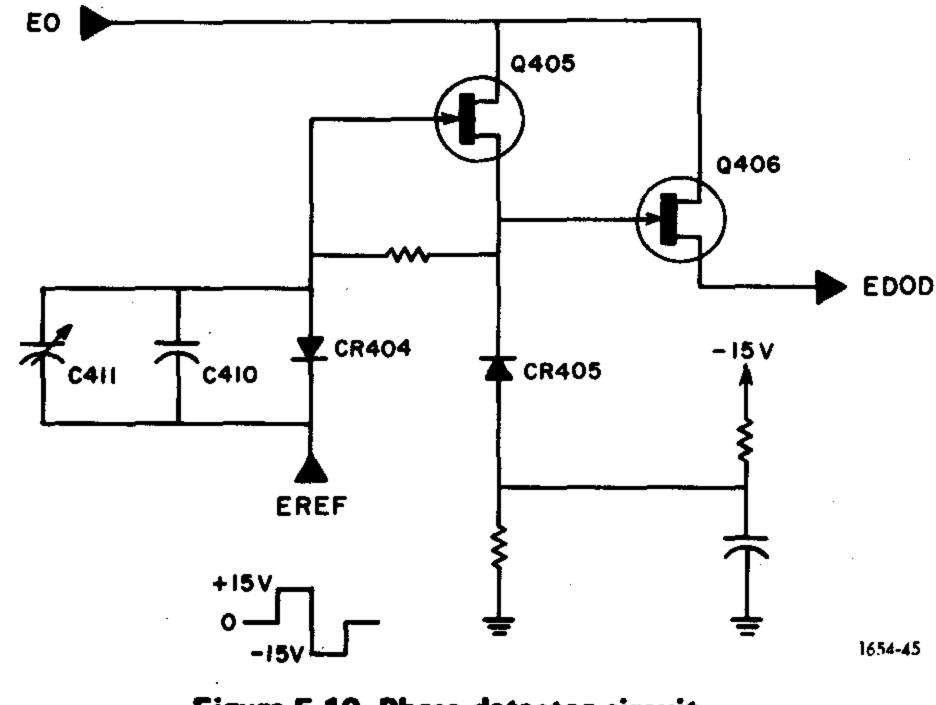


Figure 5-10. Phase-detector circuit.

EO EDOD EREF

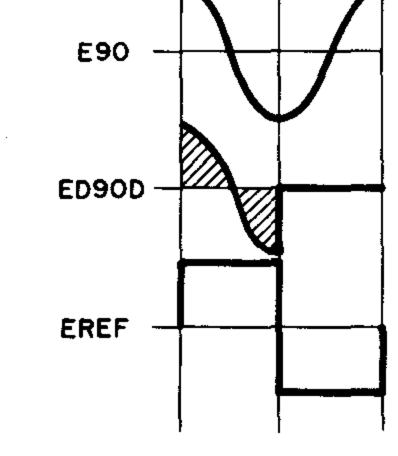




Figure 5-11. Detector waveforms in the MAGNITUDE channel.

Figure 5-12. Detector waveforms in the PHASE channel.

### 5-6 THEORY

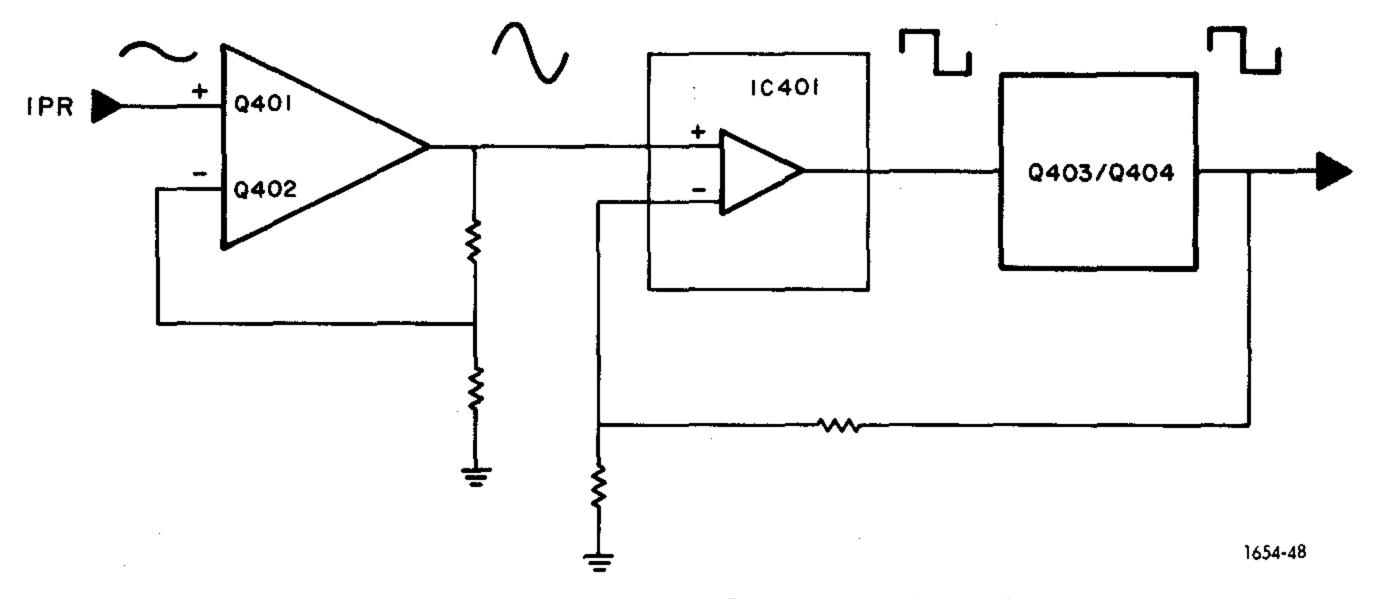


Figure 5-13. Square-wave, reference-signal circuit.

The filter has a second-order Chebyshev response with a cut-off frequency of approximately 10 Hz. Capacitor C424 is switched into the circuit for 100-Hz operation to obtain better filtering, but at a sacrifice of speed of response.

Transistors Q407 and Q408, with high input and low

then fed to an integrated-circuit level comparator that has high sensitivity and low hysteresis. The square-wave output of the level comparator is applied to high-level switches Q403 and Q404, and the resultant output is used to drive the phase detectors.

output impedances, provide the ideal unity-gain active elements for the filter.

To eliminate dc drift at the output of the amplifier, the unbalance dc signal, EDO, is taken from the input of Q407 rather than the low-impedance output of the unity-gain amplifier. This drift cannot be distinguished from the error signal when it is fed to the input of the dc amplifier.

### 5.5.4 Reference Signal.

The square-wave signal that is used to switch the phase detectors is obtained from a reference voltage, IPR, that is taken from one corner of the bridge. The IPR signal is amplified by a high input-impedance amplifier consisting of Q401 and Q402 (see Figure 5-13). The amplified signal is


### 5.6 DC AMPLIFIER BOARD.

### 5.6.1 General.

The dc-amplifier board is located in the center compartment, the fourth board from the front. The amplifiers for both channels are identical, except for the magnitude linearizer circuit that is added to the magnitude channel to compensate for the usual nonlinearity of the bridge output voltage.

### 5.6.2 DC Amplifier.

The detected unbalance signal, EDO, is amplified by an operational amplifier that consists of an integrated circuit (IC601) that drives a push-pull output stage, Q601 and

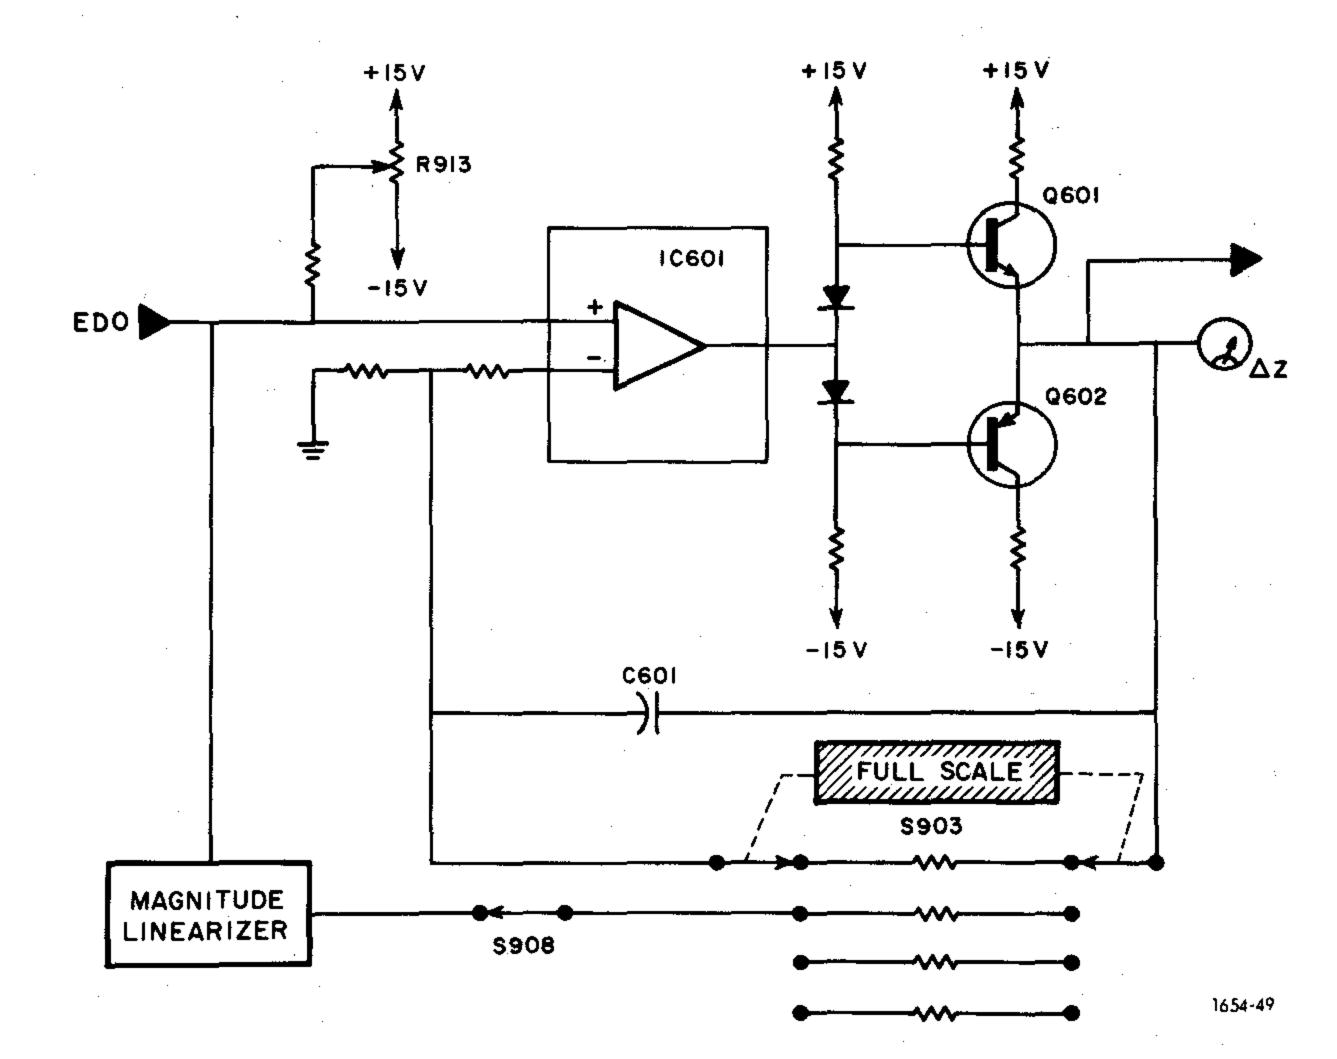

. ·

Figure 5-14. DC amplifier with magnitude linearizer.

**THEORY 5-7** 



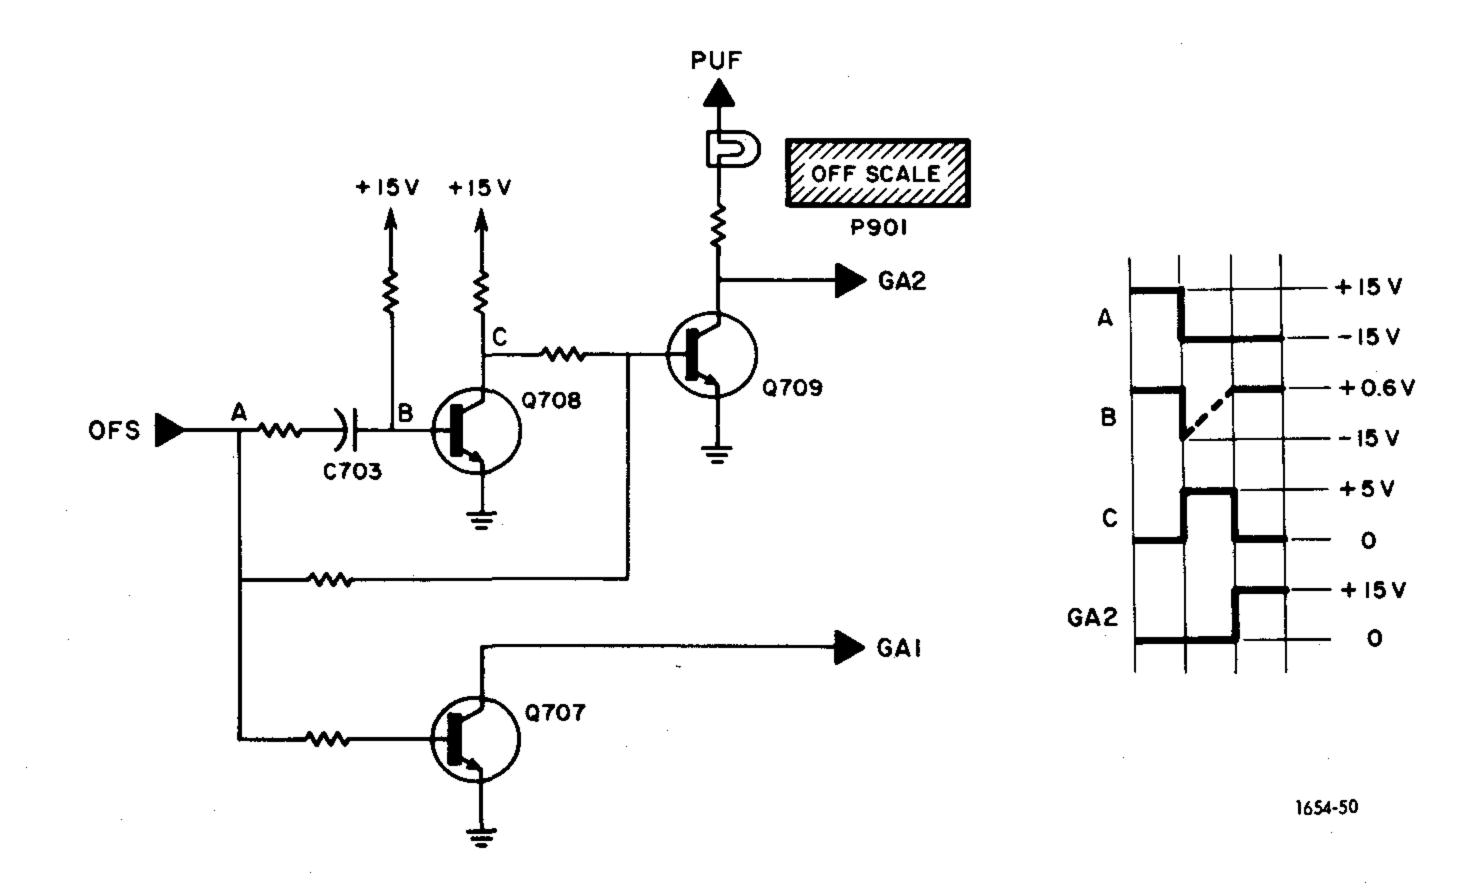


Figure 5-15. OFF SCALE and gate drivers.

Q602 (see Figure 5-14). The output of the amplifier provides the signal for panel-meter indication and the analog output voltage (available at the rear panel) that is proportional to the unbalance signal. The amplifier output also provides strong negative feedback to stabilize gain.

Full-scale switching is achieved by S903. Potentiometer R913 is the ZERO control (on the front panel) that nulls any input offset voltage when the INPUT switch is at the ZERO position. Capacitor C601 is used for high-frequency stability.

### 5.7 OFF-SCALE AND START.

### 5.7.1 General.

The OFF SCALE and START circuits are on the last board in the center compartment. The off-scale circuit provides a signal for OFF SCALE indication when the bridge-deviation voltage exceeds the range of the instrument. It also provides two gating signals that disable the external analog-limit comparator during the non-measurement part of the cycle. Self start (when the test component is connected) or external start (by contact closure) is selected via a rear-panel switch.

provided to make the amplifier unstable and drive the output stage of Q704 fully on. The hysteresis is controlled by varying the amount of positive feedback, as determined by R710 and R711.

In normal operation, Q704 is off. Diodes CR701 and CR702 limit the OVS (overload) signal applied to Q701. Diode CR705 limits the negative dc voltage applied to the input of Q702. The output of Q704 is used to control the drivers for the OFF SCALE lamp and gating circuits.

### 5.7.3 EXT Start.

See Figure 7-14. When the START switch, S907, is set to the EXT position, the measuring time is determined by the time the contacts of J908 remain closed. External contact closure causes Q705 to be cut off, which de-energizes the input relay (K301, Figure 5-7) on the unbalance amplifier board, thus allowing indication of the deviation voltage.

The positive voltage at the collector of Q705 also causes Q706 to be cut off. The negative EXT signal disables the drive circuits for the OFF SCALE condition.

### 5.7.4 Off-Scale And Gate Drivers.

See Figure 5-15. During overload, the input signal, OFS,

### 5.7.2. Overload Amplifiers.

The overload signal, OVS, is amplified by Q701 and its output voltage is rectified by a voltage doubler consisting of C701, CR703, CR704, and C702 (see Figure 7-14).

The peak rectifier, CR704 and C702, draws negligible current from the diode clamper, CR703 and C701. Capacitor C701 charges to the peak voltage, E, and the voltage across CR703 is  $E_s + e_s$  ( $e_s = instantaneous voltage$ ). This is peak voltage to the peak rectifier, which charges C702 to the peak voltage, 2 E<sub>s</sub>.

The negative dc output of the voltage doubler is then amplified by an operational amplifier that is made up of Q702, Q703, and Q704. Sufficient positive feedback is

is at +15 V and both Q707 and Q709 are turned on. At the same time, the OFF SCALE lamp, P901, is energized. Both GA1 and GA2 are at ground potential and are used to turn off the limit comparator during this measurement interval. GA1 is also used to drive the overload relay (K302, Figure 7-6). The relay switch connects the input of the signal amplifier to ground, thus preventing overdrive of the signal channels.

From overload to measuring condition, the input signal, OFS, changes polarity from +15 V to -15 V. Transistor Q707 is cut off and the gate signal, GA1, is not used. This de-energizes the overload relay, K302, thus allowing the unbalance signal to pass through the signal amplifiers.

**5-8 THEORY** 

Transistor Q709 is also cut off after a delay of 200 ms; the delay is effected by the delay generator, Q708.


The delay generator, generates a positive-going output pulse of a fixed duration from an input pulse of a longer duration, as shown in the waveforms in Figure 5-15. The input pulse, A, is coupled by the capacitor C703 to point B and Q708 is turned off. Then, C703 starts to charge to +15 V. When the charge reaches +0.6 V at point B, Q708 starts to conduct and its output at C drops to about ground potential. This causes Q709 to cut off and both the gate signal, GA2, and the OFF SCALE lamp are turned off.

### 5.8 POWER SUPPLY.

### 5.8.1 General.

The power supply is located at the left-rear section of the instrument. The power supply circuit provides two regulated voltages, +15 V and -15 V, and the unregulated ±15 V for the lamp indicators and overload relays.

regulator, Q505. The collector of Q505 provides the regulated -15 V output to the other circuits in the instrument. This output voltage is also divided by R518, R519, and R520, and it is applied to a set of amplifiers, Q506, Q507, and Q508 that control the conduction of the series regulator in order to maintain a constant –15 V output.

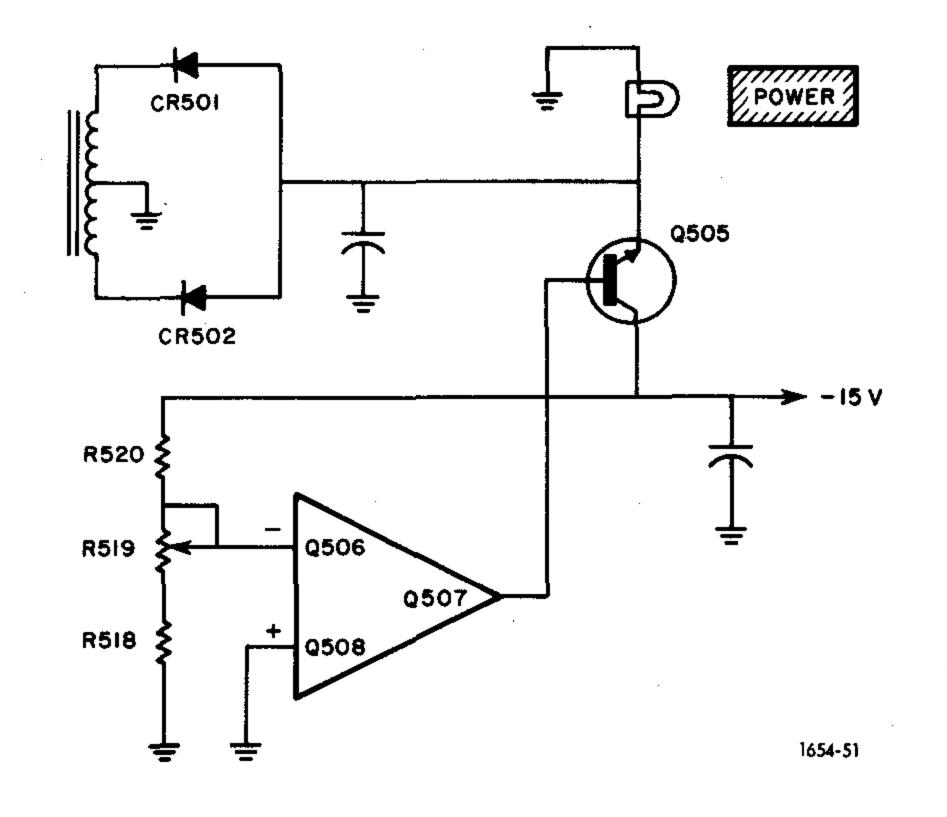

### 5.8.2 Operation.

Since the operation of the + supply and - supply are similar, the following analysis will cover the -15 V supply only (see Figure 5-16).

A full-wave rectifier, CR501 and CR502, is utilized to supply an unregulated dc voltage to the emitter of the series

.

. .

.

.





.

File Courtesy of GRWiki.org

.

.

**THEORY 5-9** 

# Service and Maintenance–Section 6

 6.1 SERVICE
 6-1

 6.2 MINIMUM PERFORMANCE STANDARDS
 6-1

 6.3 CALIBRATION AND CHECKOUT
 6-4

 6.4 TROUBLE ANALYSIS
 6-9

 6.5 KNOB REMOVAL
 6-9

 6.6 KNOB INSTALLATION
 6-9

### 6.1 SERVICE.

The two-year warranty attests the quality of materials and workmanship in our products. When difficulties do occur, our service engineers will assist in any way possible. If the difficulty cannot be eliminated by use of the following service instructions, please write or phone our Service Department giving full information of the trouble and of steps taken to remedy it. Be sure to mention the type and serial number of the instrument.

7

Before returning an instrument to General Radio for service, please contact our Service Department or nearest District Office, requesting a "Returned Material Tag." Use of this tag will ensure proper handling and identification. For instruments not covered by the warranty, a purchase order should be forwarded to avoid unnecessary delay.

### **6.2 MINIMUM PERFORMANCE STANDARDS.**

The following procedure is recommended for incoming inspection or periodic operational testing. The equipment required for minimum performance tests and calibration procedure is listed in Table 6-1. b. Set the power-line input switch on the rear panel to correspond with the power source used and connect the instrument to an appropriate power line.

### NOTE

If unfamiliar with the controls and connectors on the 1654 Impedance Comparator, refer to Tables 1-1 and 1-2.

### 6.2.2 Test Procedure.

FREQUENCIES. Connect a counter between the center conductor of either the UNKNOWN or STANDARD lower connector (8 or 12, Figure 1-2) and the ground jack (10, Figure 1-2). Measure the four test frequencies (100 Hz, 1 kHz, 10 kHz, and 100 kHz) to be within  $\pm$ 1%.

TEST VOLTAGES. Calibrate the instrument (refer to paragraph 3.5). Connect a digital voltmeter as described in the preceding paragraph and measure the approximate values of the three specified test voltages.

Refer to paragraph 6.3 for a complete calibration procedure, and paragraph 6.4 for trouble analysis should a failure occur.

## 6.2.1 Preliminary Setup.

Perform the following steps before proceeding with the performance tests:

a. With no power applied, place the 1654 comparator on a flat horizontal surface and check the zero settings on both meters. Adjust mechanical zero, if necessary. The screwdriver adjustment for mechanical zero is located in the center of the lower panel on both meters. ELECTRICAL ZERO. Check electrical zero on both meters by setting the front and rear-panel controls:

FREQUENCY to 1 kHz INPUT to ZERO TEST VOLTAGE to 3V PHASE/FULL SCALE to .001 MAGNITUDE/FULL SCALE to 0.1 START (rear panel ) to SELF

a. Adjust the ZERO screwdriver adjustments to zero both meters. (These adjustments are located on the front panel close to the lower panels of both meters.)

SERVICE 6-1

	TABLE 6-1 TEST EQUIPMENT	
Туре	Requirements	Model Recommended
Digital voltmeter	Range: ac, 0-3 V dc, ±0-15 V Accuracy: ac, ±0.5% of reading dc, ±0.1% of full scale	GR 1820 Digital Voltmeter with 1820-P1 or -P2 plug-in.
Frequency counter	Range: 100 Hz - 100 kHz Accuracy: ±1%	GR 1191 Counter
Decade Resistor	Range: 700 Ω - 1300 Ω in 10 Ω steps Accuracy: ±0.05%	GR 1434-N Decade Resistor
Test Resistors	100 Ω (0.1%), film (2) 1 kΩ (1%), film 1 kΩ (0.01%), wire-wound	
Test Capacitors	0.001 µF (0.05%) 0.01 µF (0.05%)	GR 1409-F (P/N 1409-9706) GR 1409-L
	0.1 μF (0.05%)	(P/N 1409-9712) GR 1409-T
	1.0 μF (0.05%)	(P/N 1409-9720) GR 1409-Y (P/N 1409-9725)
Adaptors (2)	GR874 to binding post	GR874-MB Coupling Probe

b. Set the FREQUENCY control to 10 kHz and check that both meters indicate zero within  $\pm$ <sup>3</sup>/<sub>4</sub> of a division on the top scale.

c. Repeat the procedure described in step b, with the FREQUENCY control set at 100 Hz and 100 kHz.

MAGNITUDE/FULL SCALE CAL. Set the front and rearpanel controls: b. Adjust the CALIBRATE control on the front panel for a +10.00 –V reading on the DVM. The MAGNITUDE DIFFERENCE meter should indicate +10.0.

PHASE ANGLE/FULL SCALE CAL. Set the front-panel controls:

MEASUREMENT to RESISTANCE/INDUCTANCE FREQUENCY to 1 kHz TEST VOLTAGE to 1 V MAGNITUDE/FULL SCALE to 1 INPUT to CAL 1% START (rear panel) to SELF LINEARIZER (rear panel) to IN

a. Connect a digital voltmeter to the ANALOG VOLT-AGE OUTPUT connector (S0910, pin B) at the rear panel. TEST VOLTAGE to 1 V PHASE ANGLE/FULL SCALE to 0.1 INPUT to GUARDED MEASUREMENT to RESISTANCE/INDUCTANCE

a. Connect a 100- $\Omega$  (0.1%) film resistor across the STANDARD terminals.

b. Connect a 100-Ω (0.1%) film resistor in parallel with a 0.1 μF (0.05)% capacitor across the UNKNOWN terminals.
c. Connect a digital voltmeter to the ANALOG VOLT-AGE OUTPUT connector (S0910, pin A) at the rear panel.
d. Adjust the CALIBRATE control on the front panel

6-2 SERVICE



## **TABLE 6-2** MAGNITUDE CAL. WITH LARGE $\theta$

Frequency	Capacitor (UNK Terminals)	Approximate θ Meter Indication	Z Meter Indication
100 Hz	1.0 μF ±0.05%	0.063	-0.197 + (error)%
10 kHz	0.01 µF ±0.05%	0.061	0.197 + (error)%
100 kHz	0.001 µF ±0.05%	0.060	-0.197 + (error)%

for a -6.00-V reading on the DVM. The PHASE ANGLE DIFFERENCE meter should indicate -6.0.

.

MEASUREMENT to RESISTANCE/INDUCTANCE FREQUENCY to 1 kHz TEST VOLTAGE to 1 V INPUT to CAL 1% LINEARIZER (rear panel) to IN PHASE ANGLE/FULL SCALE to 0.1 MAGNITUDE/FULL SCALE to 1

.

e. Set the MEASUREMENT control to CAPACITANCE. The PHASE ANGLE DIFFERENCE meter should indicate +6.0 ±0.3.

f. Set the MEASUREMENT control to RESISTANCE/ INDUCTANCE.

MAGNITUDE CAL. WITH LARGE  $\theta$ . Connect 100- $\Omega$  (0.1%) film resistors across the STANDARD terminals and across the UNKNOWN terminals. Set the front and rear-panel controls:


a. Calibrate the magnitude for 1% full scale (refer to paragraph 3.5).

b. Set the INPUT control to GUARDED and the MAG-NITUDE/FULL SCALE control to 0.3.

TABLE 6-3 MAGNITUDE LINEARIZER CHECK.			
Test Voltage Setting	Magnitude/F.S. Setting	Decade Resistor Setting	Magnitude Difference Meter Reading
0.3 V	10	1100 Ω	+ (9.7 - 10.3)
0.3 V	30	1300 Ω	+ (2.91 – 3.09)
0.3 V	30	700 Ω	- (2.91 - 3.09)

0.3 V	30	700 Ω	- (2.91 - 3.09)
0.3 V	10	900 Ω	— (9.7  — 10.3)

Set TEST VOLTAGE control to 1 V and recalibrate (step a).

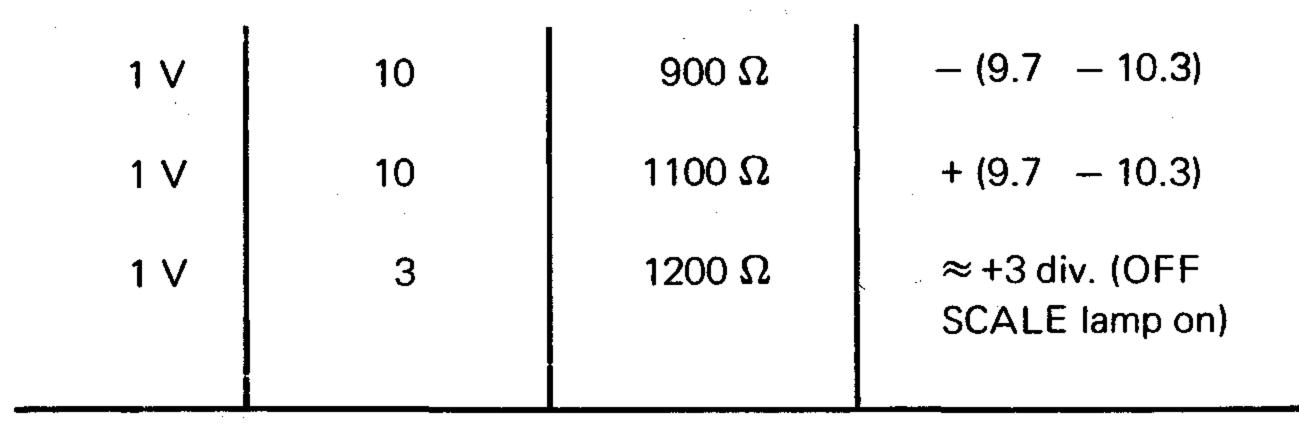

SERVICE 6-3



c. Note the magnitude error (difference between the two 100- $\Omega$  resistors) indicated on the DVM.

d. Connect a 0.1  $\mu$ F (0.05%) capacitor, in parallel with the resistor, across the unknown terminals.

e. The MAGNITUDE DIFFERENCE METER should indicate -0.19% + error noted in step d. The PHASE ANGLE DIFFERENCE meter should indicate  $\approx -0.063$ .

f. The MAGNITUDE DIFFERENCE METER should indicate -0.197% + error noted in step d. The PHASE ANGLE DIFFERENCE meter should indicate  $\approx -0.063$ .

Repeat the above procedure, using the FREQUENCY control settings and capacitors listed in Table 6-2. Be sure to repeat step a above, with each change in frequency. PHASE ANGLE CAL. WITH LARGE Z. Set the front-panel controls:

FREQUENCY to 1 kHz **MEASUREMENT to RESISTANCE/INDUCTANCE** TEST VOLTAGE to 1V MAGNITUDE/FULL SCALE to 1 PHASE ANGLE/FULL SCALE TO .003 INPUT to CAL 1%

### 6.3 CALIBRATION AND CHECKOUT.

To calibrate the 1654, using external controls only, refer to paragraph 3.5. This is the normal operating calibration that is recommended when the test frequency is changed and when impedance measurement are to be made at the extremes of the normal measurement ranges.

The procedure for complete calibration of the instrument after major repairs or adjustments have been made, is given in the following paragraphs.

### 6.3.1 Equipment Required.

The calibration procedure is similar to the minimum performance tests (refer to paragraph 6.2) and the equipment required for both procedures is listed in Table 6-1. The equipment specifications given in Table 6-1 are minimum requirements and equivalent models may be substituted for the equipment recommended.

### 6.3.2 Calibration Procedure.

a. Calibrate for 1% full scale (refer to paragraph 3.5).

b. Connect a 100- $\Omega$  (0.1%) film resistor across the STANDARD terminals.

c. Connect a 100- $\Omega$  (0.1%) film resistor, in parallel with a 1-k $\Omega$  (1%) film resistor across the UNKNOWN terminals.

d. Set the MAGNITUDE/FULL SCALE control to 10% and the INPUT control to GUARDED.

e. The change in the PHASE ANGLE DIFFERENCE meter reading should be less than 1.5 divisions (on top scale) as the MEASUREMENT control is switched alternately to both positions. The MAGNITUDE meter reading should be  $\approx 9.1\%$ .

Repeat the above procedure, using the 100 Hz, 10 kHz, and 100 kHz FREQUENCY control settings. Be sure to repeat step a, with each change in frequency. LINEARIZER. Set the front-panel controls:

FREQUENCY to 1 kHz **MEASUREMENT to RESISTANCE/INDUCTANCE** 

Remove the instrument cabinet (refer to paragraph) 2.3.2) and proceed with the following calibration and checkout procedure.

MECHANICAL ZERO. With no power applied and with the instrument in its normal horizontal operating position, adjust mechanical zero on both meters. The screwdriver adjustment for mechanical zero is located in the center of the lower panel on both meters.

±15-V SUPPLY. Connect the instrument to power line (all plug-in etched boards must be installed) and measure the voltage at AT505/506 (see Figure 2-8) on the power-supply etched board. If necessary, adjust R519 (see Figure 6-1) to obtain a voltage reading of -15.0 V.

Measure the voltage at AT501/502 (see Figure 2-8). The voltage reading should be +15±0.4 V. If necessary, readjust R501 to split the error as evenly as possible between the +15- and -15-V supplies.

OSCILLATOR FREQUENCIES. Connect the counter between terminal #11 on transformer T901 and the instrument chassis. Table 6-4 lists the adjustments and frequency limits for the four oscillator frequencies. Measure the frequency with the counter and make the necessary adjust-

## INPUT to CAL 1% TEST VOLTAGE to 0.3 MAGNITUDE/FULL SCALE to 1

- a. Calibrate for 1% full scale (refer to paragraph 3.5).
- b. Set the INPUT control to GUARDED.

c. Connect a 1-k $\Omega$  (0.01%) resistor to the STANDARD terminals.

d. Connect a decade resistor to the UNKNOWN terminals.

e. Make the measurements indicated in Table 6-3, and observe the measurement limits on the MAGNITUDE DIFFERENCE meter.

### ments as indicated in the table.

## Table 6-4 **OPERATING-FREQUENCY ADJUSTMENTS**

Operating Frequency	Ádjustment (See Figure 6-2)	Frequency Limit
100 Hz	R111	±1%
1 kHz	R112	±1%
10 kHz	R113	±1%
100 kHz	R114	±1%

## 6-4 SERVICE

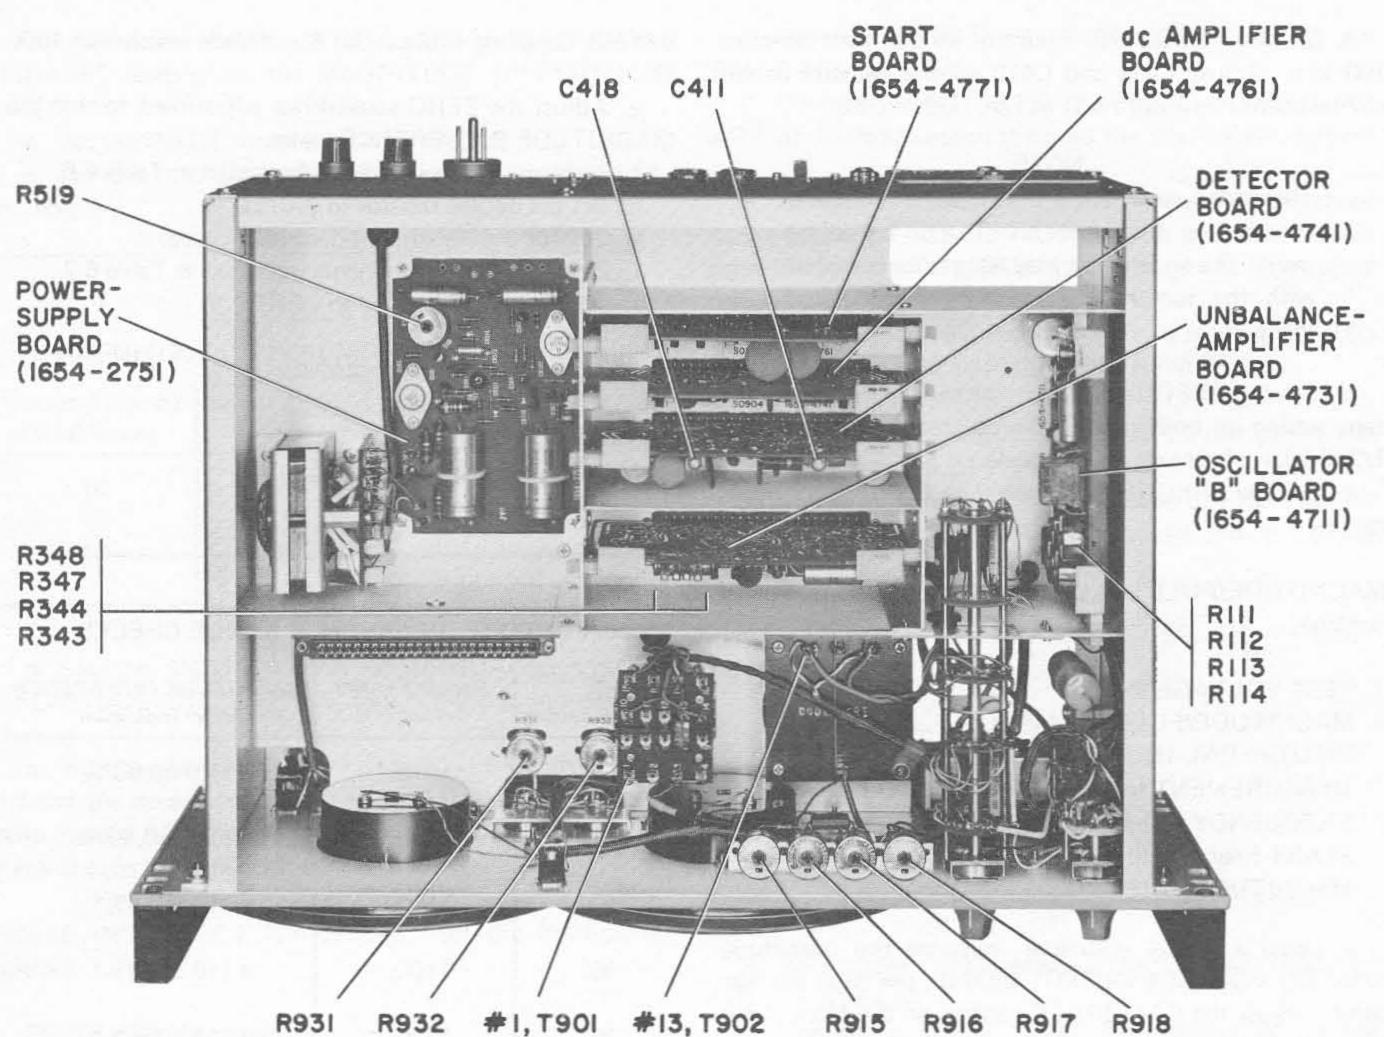


Figure 6-1. Top interior of 1654 Impedance Comparator.

TEST VOLTAGE. Using the digital voltmeter, measure the ac voltage at terminal #13 on transformer T902 (see Figure 6-1). This measurement should be made for each test voltage, as indicated in Table 6-5.

Before making each measurement listed in the table, the instrument should be calibrated (CAL 1%) as follows:

a. Set the MAGNITUDE/FULL SCALE control to 1 and the INPUT control to CAL 1%.

	ole 6-5
TEST V	OLTAGES
Test Voltage Control Setting	Approximate DVM Reading (T902, #13)
0.3 V	0.30 V rms
1 V	0.95 V rms
3 V	3.00 V rms

b. Adjust the CALIBRATE control to obtain a 1% (fullscale) reading on the MAGNITUDE DIFFERENCE meter. (Ignore the PHASE ANGLE DIFFERENCE meter reading).

ELECTRICAL ZERO. To set electrical zero on the front panel meters.

Set the front-panel controls.

FREQUENCY to 1 kHz INPUT to ZERO TEST VOLTAGE to 3 V PHASE/FULL SCALE to .001 MAGNITUDE/FULL SCALE to 0.1

a. Adjust the ZERO screwdriver adjustment (R913) on the front panel to zero the MAGNITUDE DIFFERENCE meter.

b. Repeat the adjustment (step b) using the ZERO adjustment (R914) to zero the PHASE ANGLE DIF-FERENCE meter.



c. Set the FREQUENCY control on the front panel to 100 kHz. Adjust C411 and C418 on the detector-circuit etched board (see Figure 6-1) to zero both meters.

### NOTE

The added capacitance of the adjustment tool used in step d will have an effect on the adjustment. The adjustment may have to be repeated, with the tool removed between each adjustment.

d. Set the FREQUENCY control to 10 kHz. Check the zero setting on both meters, the pointer should be within 1/2 division of zero on the top scale.

e. Set the FREQUENCY control to 100 Hz and repeat step d.

874-MB Coupling Probes. Set the decade resistor to 1000 Ω.

e. Adjust the ZERO screwdriver adjustment to zero the MAGNITUDE DIFFERENCE meter.

f. Perform the measurements indicated in Table 6-6.

- g. Set the decade resistor to  $9 \times 0 \Omega$ .
- h. Repeat the adjustment described in step e.
- i. Perform the measurements indicated in Table 6-7.
- j. Set the INPUT control to ZERO.
- k. Repeat step e.
- I. Set the front-panel controls:

**TEST VOLTAGE to 1 V** MAGNITUDE/FULL SCALE to 1 **INPUT to CAL 1%** 

### MAGNITUDE/FULL SCALE CAL. Set front and rear-panel controls.

## Table 6-6 MAGNITUDE-DIFFERENCE RANGE CHECKS

TEST VOLTAGE to 0.3 V **MAGNITUDE/FULL SCALE to 1** INPUT to CAL 1% **MEASUREMENT to RESISTANCE/INDUCTANCE** FREQUENCY to 1 kHz START (rear panel) to SELF MAGNITUDE LINEARIZER (rear panel) to IN

a. Using a digital voltmeter, measure the magnitude ANALOG VOLTAGE OUTPUT (SO910, pin B) at the rear panel. Adjust the CALIBRATE control on the front panel for a +10.0 V output.

b. Adjust R932 (see Figure 6-1) for a reading of +10.0 on the MAGNITUDE DIFFERENCE meter.

c. Check the ANALOG LIMIT COMPARATOR output (SO909, pin B) at the rear panel. The output should be +10.0 V.

MAGNITUDE-DIFFERENCE RANGES. Set front and rearpanel controls.

FREQUENCY to 1 kHz MEASUREMENT to RESISTANCE/INDUCTANCE TEST VOLTAGE to 0.3 V

MAGNITUDE /FULL SCALE Setting	Decade Resistor Setting (Ω)	MAGNITUDE DIFFERENCE Meter Indication
1	1010	+ (1.0 ±0.03)%
3	1010	+ (1.0 ± 0.09)%
10	1100	+ (10 ±0.3)%*
30	1100	+ (10 ±0.9)%*
30	1200	+ (20 ±0.9)%*
30	1300	+ (30 ±0.9)%*

\*+ Linearizer check.

### Table 6-7

### MAGNITUDE-DIFFERENCE RANGE CHECKS

MAGNITUDE /FULL SCALE Setting	Decade Resistor Setting (Ω)	MAGNITUDE DIFFERENCE Meter Indication
1	990	- (1.0 ±0.03)%
3	990	- (1.0 ±0.09)%
10	900	— (10 ±0.3)%*
. 30	900	- (10 ±0.9)%*
30	800	(20 ±0.9)%*
30	700	(30 ±0.9)%*

MAGNITUDE/FULL SCALE to 1
INPUT to CAL 1%
MAGNITUDE LINEARIZER (rear panel) to IN

a. Adjust the CALIBRATE control to obtain a 1% (fullscale reading on the MAGNITUDE DIFFERENCE meter.

b. Set the INPUT control to GUARDED.

c. Connect a 1-k $\Omega$  (0.01%) wire-wound resistor across the STANDARD terminals. Use GR 874-MB Coupling Probes to adapt the comparator terminals for this connection.

d. Connect the 700- $\Omega$  to 1300- $\Omega$  decade resistor (1434-N) across the UNKNOWN terminals, using GR

\* - Linearizer check.

## 6-6 SERVICE

m. Adjust the CALIBRATE control to obtain a 1% (full-scale) reading on the MAGNITUDE DIFFERENCE meter.

n. Set the INPUT control to GUARDED.

o. Perform the LINEARIZER measurements indicated in Table 6-8.

Table 6-8         MAGNITUDE-DIFFERENCE RANGE CHECKS			
MAGNITUDE/FULL SCALE Setting	Decade Resistor Setting (Ω)	MAGNITUDE DIFFERENCE Meter Indication	
10	900	— (10 ±0.3)%	
10	1100	+ (10 ±0.3)%	

a. Connect a 100- $\Omega$  (0.1%) film resistor across the STANDARD terminals.

b. Connect a 100- $\Omega$  (0.1%) film resistor in parallel with a 0.1  $\mu$ F (0.05%) capacitor across the UNKNOWN terminals.

c. Using the digital voltmeter, measure the phase ANALOG VOLTAGE OUTPUT (SO910, pin A) at the rear panel. Adjust the CALIBRATE control on the front panel for a -6.00-V reading on the DVM.

d. Adjust R931 (see Figure 6-1) for a reading of -0.06 radian on the PHASE ANGLE DIFFERENCE meter.

e. Using the DVM, observe the ANALOG LIMIT COM-PARATOR output (SO909, pin A) at the rear panel. The output should be -6.00 V.

f. Set the MEASUREMENT control to CAPACITANCE. The PHASE ANGLE DIFFERENCE meter should indicate a +(0.060 ±0.003) radian reading.

p. Set the INPUT control to UNGUARDED ( the MAGNITUDE DIFFERENCE meter reading should not change).

q. With the MAGNITUDE/FULL SCALE control set at 0.3 and the decade resistor set at 1200  $\Omega$ , the OFF SCALE lamp should 9/0 W and the MAGNITUDE DIFFERENCE meter should indicate  $\approx$  +3 divisions.

PHASE-ANGLE/FULL-SCALE CAL. Set the front-panel control.

FREQUENCY to 1 kHz TEST VOLTAGE to 1 V MAGNITUDE/FULL SCALE to 10 PHASE ANGLE/FULL-SCALE to 0.1 **INPUT to GUARDED MEASUREMENT to RESISTANCE/INDUCTANCE** 

PHASE-ANGLE DIFFERENCE RANGES. Set the frontpanel controls.

FREQUENCY to 1 kHz TEST VOLTAGE to 1 V MAGNITUDE/FULL SCALE to 10 PHASE ANGLE/FULL SCALE to 0.1 INPUT to GUARDED. **MEASUREMENT to RESISTANCE/INDUCTANCE** 

a. Repeat step c in the previous check, PHASE-ANGLE/ FULL-SCALE CAL.

b. Connect a 100- $\Omega$  (0.1%) film resistor across the STANDARD terminals.

c. Connect a 100- $\Omega$  (0.1%) film resistor in parallel with a capacitor across the UNKNOWN terminals. Refer to Table 6-9 for the capacitor values required.

d. Perform the measurements indicated in Table 6-9.

	Table ( PHASE-ANGLE-DIFFERE		ECKS	
1654 C θ FULL SCALE	ontrol Settings MEASUREMENT	C Used at UNKNOWN	PHASE ANGLE Meter Indication	
.03	CAPACITANCE	0.01 µF	+ (0.006 ±0.0009)	
.03	RESISTANCE/INDUCTANCE	0.01 µF	- (0.006 ±0.0009)	
.01	RESISTANCE/INDUCTANCE	0.01 µF	- (0.006 ±0.0003)	
.01	CAPACITANCE	0.01 <b>µ</b> F	+ (0.006 ±0.0003)	
.003	CAPACITANCE	0.001 µF	+ (0.0006 ±0.00009)	
.003	RESISTANCE/INDUCTANCE	0.001 µF	- (0.0006 ±0.00009	



## SERVICE 6-7

Table 6-10 Z CAL WITH LARGE PHASE ERROR					
Frequency	C used at UNKNOWN	Potentiometer Adjustment (see Figure 6-1)	Approximate θ Meter Indication		
100 Hz	1.0 μF ±0.05%	R915	0.063 rad.		
10 kHz	0.01 µF ±0.05%	R917	0.061 rad.		
100 kHz	0.001 µF ±0.05%	R918	0.060 rad.		

Z CAL WITH LARGE PHASE ERROR. Connect a 100- $\Omega$  (0.1%) film resistors (one each) across the STANDARD

.

.

FREQUENCY to 1 kHz MEASUREMENT to RESISTANCE/INDUCTANCE

.

terminals and across the UNKNOWN terminals. Set the front and rear-panel controls.

MEASUREMENT to RESISTANCE/INDUCTANCE FREQUENCY to 1 kHz TEST VOLTAGE to 1 V INPUT to CAL 1% PHASE/FULL SCALE to 0.1 MAGNITUDE/FULL SCALE to 1 MAGNITUDE LINEARIZER (rear panel) to IN

a. Connect the digital voltmeter to the ANALOG VOLTAGE OUTPUT (SO910, pin B) at the rear panel.

b. Calibrate the magnitude for 1% full scale (refer to CAL 1% procedure under TEST VOLTAGE). This calibration should produce a +10.00-V reading on the digital voltmeter.

c. Set INPUT control to GUARDED and MAGNI-TUDE/FULL SCALE control to 0.3.

d. Note the magnitude error (difference between the two 100- $\Omega$  resistors) indicated on the digital voltmeter.

e. Connect a 0.1  $\mu$ F (0.05%) capacitor, in parallel with the resistor, across the UNKNOWN terminals.

f. Adjust R916 (see Figure 6-1) for a MAGNITUDE

TEST VOLTAGE to 1 V MAGNITUDE/FULL SCALE to 1 PHASE ANGLE/FULL SCALE to .003 INPUT to CAL 1%

a. Calibrate for 1% full scale (refer to CAL 1% procedure under TEST VOLTAGE).

b. Connect a 100- $\Omega$  (0.1%) film resistor across the STANDARD terminals. Connect a 100- $\Omega$  (0.1%) film resistor in parallel with a 1-k $\Omega$  (1%) film resistor across the UNKNOWN terminals.

c. Set MAGNITUDE/FULL SCALE control to 10 and INPUT control to GUARDED.

d. Adjust R344 (see Figure 6-1) for no change in the PHASE ANGLE DIFFERENCE meter reading as the MEASUREMENT control is switched alternately to both positions.

e. Repeat the above procedure using the FREQUENCY control settings listed in Table 6-11. Be sure to calibrate (CAL 1%) before making each potentiometer adjustment.

OFF-SCALE LAMP and CONTROL-SIGNAL OUTPUT. Set front-panel controls.

DIFFERENCE meter reading of  $-0.197 \pm$  (error noted in step d). The PHASE ANGLE DIFFERENCE meter should indicate  $\approx -0.063$  radian.

g. Set MEASUREMENT control to CAPACITANCE. Both meters should indicate the same values as noted in step f, but + (positive).

h. Repeat the above procedure, using the FREQUENCY control settings and capacitors listed in Table 6-10. Be sure to calibrate (CAL 1%) before making each potentiometer adjustments.

CAL WITH LARGE MAGNITUDE ERROR. Set the frontpanel controls.

# Table 6-11 $\theta$ CAL WITH LARGE MAGNITUDE ERROR

Frequency	Potentiometer Adjustment (see Figure 6-1)	Approximate θ Meter Indication
100 Hz	R343	0
10 kHz	R347	0
100 kHz	R348	≈ –3 div.

## 6-8 SERVICE

## MEASUREMENT to RESISTANCE/INDUCTANCE INPUT to GUARDED FREQUENCY to 1 kHz TEST VOLTAGE to 1 V MAGNITUDE/FULL SCALE to 10

a. Connect a 100- $\Omega$  (0.1%) film resistor across the STANDARD terminals. Connect a 100- $\Omega$  (0.1%) film resistor in parallel with a 1-k $\Omega$  (1%) film resistor across the **UNKNOWN terminals.** 

b. The MAGNITUDE DIFFERENCE meter should indicate  $\approx -9.1$ .

c. Set the START control (rear panel) to EXT. The OFF SCALE lamp should light and the MAGNITUDE DIFFERENCE meter should indicate  $\approx 0$ .

d. Note the action of the OFF SCALE lamp with each setting of the INPUT control:

through unbalance amplifier (Figure 7-6), detectors (Figure 7-8) and dc amplifiers (Figure 7-12).

c. If CAL indication satisfactory, trace unbalance signal, BOU, through unbalance amplifier (Figure 7-6).

d. If the OFF SCALE lamp fails to light for a large magnitude difference, check relay K301 and control signal EXR & OVS (Figure 7-6).

e. If the OFF SCALE lamp is on but there is no meter indication, check to see if the START switch (rear panel) is set at SELF.

### 6.5 KNOB REMOVAL.

If it should be necessary to remove the knob on a front-panel control, either to replace one that has been damaged or to replace the associated control, proceed as follows:

a. Grasp the knob firmly with the fingers and pull the knob straight away from the panel.

UNGUARDED - lamp on ZERO - lamp off CAL 1% - lamp off

Return the INPUT control to the GUARDED position.

e. Ground the START jack (rear panel). The OFF SCALE lamp should go out and the meter should again indicate the reading noted in step b.

f. Remove the ground from the START jack and set the START switch to SELF.

g. Ground GA1 output (ANALOG LIMIT COM-PARATOR socket, rear panel, pin D). The MAGNITUDE DIFFERENCE meter should indicate a  $\approx$  0 reading and the OFF SCALE lamp should be off.

h. Ground GA2 output (ANALOG LIMIT COM-PARATOR socket, rear panel, pin C). The OFF SCALE lamp should light.

Remove all ground connections described in the above procedure.

### 6.4 TROUBLE ANALYSIS.

The calibration and checkout procedure in paragraph 6.3 will either correct or localize most minor problems. If a problem still exists, the following procedure should locate the difficulty:

b. Observe the position of the setscrew in the bushing, with respect to any panel marking (or at the full ccw position of a continuous control).

c. Release the setscrew and pull the bushing off the shaft.

### NOTE

To separate the bushing from the knob, if for any reason they should be combined off the instrument, drive a machine tap a turn or two into the bushing for a sufficient grip for easy separation.

### 6.6 KNOB INSTALLATION.

To install a knob assembly on the control shaft:

a. Mount the bushing on the shaft, using a small slotted piece of wrapping paper as a shim, for adequate panel clearance.

b. Orient the setscrew on the bushing with respect to the panel-marking index and lock the setscrews.

### NOTE

Make sure that the end of the shaft does not

### NOTE

The schematic diagrams in Section 7 contain the test voltages and waveforms necessary to trouble-shoot the circuits.

a. Set the INPUT control to ZERO. If the meter zeros are off scale, check out the oscillator output and power supplies (see Figures 7-4 and 7-10).

b. If ZERO positions are satisfactory, set INPUT to CAL 1%. If no CAL signal indicated, trace CAL signal

protrude through the bushing or the knob won't seat properly.

c. Place the knob on the bushing with the retention spring opposite the setscrew.

d. Push the knob in until it bottoms and pull it slightly to check that the retention spring is seated in the groove in the bushing.

### NOTE

If the retention spring in the knob comes loose, reinstall it in the interior notch with the small slit, in the outer wall.

SERVICE 6-9

# **Parts Lists and Diagrams – Section 7**

CONTENTS

Page

Federal Manufacturers Code

.

.

....

.

.

.

7-2

Mechanical Replacement Parts, Front-Panel Mechanical Replacement Parts, Rear-Panel

.

7-3 7-3

•

Schematic	Etched-Board Assembly P/N	Reference No. Series
Oscillator and Bridge	1654-4711	100, 900
Unbalance Amplifier	1654-4731	300
Detector Circuit	1654-4741	400

Power Supply	1654-2751	500
DC Amplifier	1654-4761	600
Start Circuit	1654-4771	700

.

.

### PARTS LISTS AND DIAGRAMS 7-1

.



### FEDERAL MANUFACTURER'S CODE

. . .

. . .

### From Federal Supply Code for Manufacturers Cataloging Handbooks H4-1 (Name to Code) and H4-2 (Code to Name) as supplemented through August, 1968.

.

Code	Manufacturer	Code	Manufacturer	Code	Manufacturer
00192	Jones Mfg. Co, Chicago, Illinois	49671	RCA, New York, N.Y. 10020	80431	Air Filter Corp, Milwaukee, Wisc. 53218
00194	Welsco Electronics Corp, L.A., Calif.	49956	Raytheon Mfg Co, Waltham, Mass. 02154	80583	Hammarlund Co, Inc, New York, N.Y.
00434	Schweber Electronics, Westburg, L.I., N.Y.	53021	Sangamo Electric Co, Springfield, III. 62705	80740	Beckman Instruments, Inc, Fullerton, Calif.
00656	Aerovox Corp, New Bedford, Mass.	54294	Shallcross Mfg Co, Selma, N.C.	81030	International Insturment, Orange, Conn.
01009	Aiden Products Co, Brockton, Mass.	54715	Shure Brothers, Inc. Evanston, III.	81073	Grayhill Inc, LaGrange, III. 60525
01121	Allen-Bradley, Co, Milwaukee, Wisc.	56289	Sprague Electric Co, N. Adams, Mass.	81143	Isolantite Mfg Corp, Stirling, N.J. 07980
01295	Texas Instruments, Inc. Dallas, Texas	59730	Thomas and Betts Co, Elizabeth, N.J. 07207	81349	Military Specifications
02114	Ferroxcube Corp, Saugerties, N.Y. 12477	<b>59</b> 875	TRW Inc, (Accessories Div), Cleveland, Ohio	81350	Joint Army-Navy Specifications
02606	Fenwal Lab Inc, Morton Grove, III.	60399	Torrington Mfg Co, Torrington, Conn.	81751	Columbus Electronics Corp, Yonkers, N.Y.
02660	Amphenol Electron Corp, Broadview, III.	61637	Union Carbide Corp, New York, N.Y. 10017	81831	Filtron Co, Flushing, L.I., N.Y. 11354
02768	Fastex, Des Plaines, III. 60016	61864	United-Carr Fastener Corp, Boston, Mass.	81840	Ledex Inc, Dayton, Ohio 45402
03503	G.E. Semicon Prod, Syracuse, N.Y. 13201	63060	Victoreen Instrument Co, Inc, Cleveland, O.	81860	Barry-Wright Corp, Watertown, Mass.
03636	Grayburne, Yonkers, N.Y. 10701	63743	Ward Leonard Electric Co, Mt. Vernon, N.Y.	82219	Sylvania Elec Prod, Emporium, Penn.
03888	Pyrofilm Resistor Co, Cedar Knolls, N.J.	65083	Westinghouse (Lamp Div), Bloomfield, N.J.	82273	Indiana Pattern & Model Works, LaPort, Ind.
03911	Clairex Corp, New York, N.Y. 10001	65092	Weston Instruments, Newark, N.J.	82389	Switchcraft Inc, Chicago, III. 60630
04009	Arrow-Hart & Hegeman, Hartford, Conn.	70485	Atlantic-India Rubber, Chicago, Ill. 60607	82647	Metals & Controls Inc, Attleboro, Mass.
	06106	70563	Amperite Co. Union City, N.J. 07087	82807	Milwaukaa Resistor Co. Milwaukaa Wisc

06106 04713 Motorola, Phoenix, Ariz. 85008 Engr'd Electronics, Santa Ana, Calif. 92702 05170 05624 Barber-Colman Co, Rockford, III. 61101 05820 Wakefield Eng, Inc, Wakefield, Mass. 01880 07126 Digitron Co, Pasadena, Calif. Eagle Signal (E.W. Bliss Co), Baraboo, Wisc. 07127 07261 Avnet Corp, Culver City, Calif. 90230 07263 Fairchild Camera, Mountain View, Calif. 07387 Birtcher Corp, No. Los Angeles, Calif. 07595 Amer Semicond, Arlington Hts, III. 60004 07828 Bodine Corp, Bridgeport, Conn. 06605 07829 Bodine Electric Co, Chicago, III. 60618 07910 Cont Device Corp, Hawthorne, Calif. 07983 State Labs Inc, N.Y., N.Y. 10003 07999 Borg Inst., Delavan, Wisc. 53115 08730 Vemaline Prod Co, Franklin Lakes, N.J. 09213 G.E. Semiconductor, Buffalo, N.Y. 09408 Star-Tronics Inc, Georgetown, Mass. 01830 09823 Burgess Battery Co, Freeport, III. 09922 Burndy Corp, Norwalk, Conn. 06852 11236 C.T.S. of Berne, Inc, Berne, Ind. 46711 11599 Chandler Evans Corp, W. Hartford, Conn. 12040 National Semiconductor, Danbury, Conn. 12498 Crystalonics, Cambridge, Mass. 02140 12672 RCA, Woodbridge, N.J. 12697 Clarostat Mfg Co, Inc, Dover, N.H. 03820 12954 Dickson Electronics, Scottsdale, Ariz. 13327 Solitron Devices, Tappan, N.Y. 10983 14433 ITT Semicondictors, W.Palm Beach, Fia. 14655 Cornell-Dubilier Electric Co, Newark, N.J. 14674 Corning Glass Works, Corning, N.Y. 14936 General Instrument Corp, Hicksville, N.Y. 15238 ITT, Semiconductor Div, Lawrence, Mass. 15605 Cutlet-Hammer Inc, Milwaukee, Wisc. 53233 16037 Spruce Pine Mica Co, Spruce Pine, N.C. 17771 Singer Co, Diehl Div, Somerville, N.J. 19396 Illinois Tool Works, Pakton Div, Chicago, III. 19644 LRC Electronics, Horseheads, N.Y. 19701 Electra Mfg Co, independence, Kansas 67301 21335 Fafnir Bearing Co, New Briton, Conn. 22753 UID Electronics Corp, Hollywood, Fla. 23342 Avnet Electronics Corp, Franklin Park, Ill. 24446 G.E., Schenectady, N.Y. 12305 24454 G.E., Electronics Comp, Syracuse, N.Y.

Amperite Co, Union City, N.J. 07087 10003 70903 Beiden Mfg Co, Chicago, III. 60644 71126 Bronson, Homer D, Co, Beacon Falls, Conn. 71294 Canfield, H.O. Co, Clifton Forge, Va. 24422 Bussman (McGraw Edison), St. Louis, Mo. 71400 ITT Cannon Elec, L.A., Calif. 90031 71468 71590 Centralab, Inc, Milwaukee, Wisc, 53212 Continental Carbon Co, Inc, New York, N.Y. 71666 71707 Coto Coil Co Inc, Providence, R.I. 71744 Chicago Miniature Lamp Works, Chicago, III. 71785 Cinch Mfg Co, Chicago, III. 60624 71823 Darnell Corp, Ltd, Downey, Calif, 90241 72136 Electro Motive Mfg Co, Wilmington, Conn. 72259 Nytronics Inc, Berkeley Heights, N.J. 07922 72619 Dialight Co, Brooklyn, N.Y. 11237 72699 General Instr Corp, Newark, N.J. 07104 72765 Drake Mfg Co, Chicago, Ill. 60656 72825 Hugh H. Eby Inc, Philadelphia, Penn. 19144 72962 Elastic Stop Nut Corp, Union, N.J. 07083 72982 Erie Technological Products Inc, Erie, Penn. 73138 Beckman Inc, Fullerton, Calif. 92634 Amperex Electronics Co, Hicksville, N.Y. 73445 73559 Carling Electric Co, W.Hartford, Conn. 73690 Elco Resistor Co, New York, N.Y. 73899 JFD Electronics Corp, Brooklyn, N.Y. 74193 Heinemann Electric Co, Trenton, N.J. 74861 Industrial Condenser Corp, Chicago, III. 74970 E.F. Johnson Co, Waseca, Minn. 56093 75042 IRC Inc, Philadelphia, Penn. 19108 Kulka Electric Corp, Mt. Vernon, N.Y. 75382 75491 Lafayette Industrial Electronics, Jamica, N.Y. 75608 Linden and Co, Providence, R.I. 75915 Littelfuse, Inc, Des Plaines, III. 60016 76005 Lord Mfg Co, Erle, Penn. 16512 76149 Mailory Electric Corp, Detroit, Mich. 48204 76487 James Millen Mfg Co, Malden, Mass. 02148 Mueller Electric Co, Cleveland, Ohio 44114 76545 76684 National Tube Co, Pittsburg, Penn. 76854 Oak Mfg Co, Crystal Lake, Iil. 77147 Patton MacGuyer Co, Providence, R.I. 77166 Pass-Seymour, Syracuse, N.Y. 77263 Pierce Roberts Rubber Co, Trenton, N.J. 77339 Positive Lockwasher Co, Newark, N.J. Ray-O-Vac Co, Madison, Wisc. 77642 TRW, Electronic Comp, Camden, N.J. 08103 77630

Milwaukee Resistor Co, Milwaukee, Wisc. 82807 Meissner Mfg, (Maguire Ind) Mt. Carmel, III. 83033 83058 Carr Fastener Co, Cambridge, Mass. 83186 Victory Engineering, Springfield, N.J. 07081 83361 Bearing Specialty Co, San Francisco, Calif. 83587 Solar Electric Corp, Warren, Penn. 83740 Union Carbide Corp, New York, N.Y. 10017 83781 National Electronics Inc, Geneva, III. TRW Capacitor Div, Ogallala, Nebr. 84411 84835 Lehigh Metal Prods, Cambridge, Mass. 02140 84971 TA Mfg Corp, Los Angeles, Calif. 86577 Precision Metal Prods, Stoneham, Mass. 02180 86684 RCA (Elect. Comp & Dev), Harrison, N.J. 86687 REC Corp, New Rochelle, N.Y. 10801 86800 Cont Electronics Corp, Brooklyn, N.Y. 11222 88140 Cutler-Hammer Inc, Lincoln, 11. 88219 Gould Nat. Batteries Inc, Trenton, N.J. 88419 Cornell-Dubilier, Fuguay-Varina, N.C. 88627 K & G Mfg Co, New York, N.Y. 89482 Holtzer-Cabot Corp, Boston, Mass. 89665 United Transformer Co, Chicago, III. 90201 Mailory Capacitor Co, Indianapolis, Ind. 90750 Westinghouse Electric Corp, Boston, Mass. 90952 Hardware Products Co, Reading, Penn, 19602 91032 Continental Wire Corp, York, Penn. 17405 91146 ITT (Cannon Electric Inc), Salem, Mass. 91293 Johanson Mfg Co, Boonton, N.J. 07005 91506 Augat Inc, Attleboro, Mass. 02703 91598 Chandler Co, Wethersfield, Conn. 06109 91637 Dale Electronics Inc, Columbus, Nebr. 91662 Elco Corp, Willow Grove, Penn. 91719 General Instruments, Inc, Dallas, Texas 91929 Honeyweil Inc, Freeport, III. 92519 Electra Insul Corp, Woodside, L.I., N.Y. 92678 E.G.&G., Boston, Mass. 93332 Sylvania Elect Prods, Inc, Woburn, Mass. 93916 Cramer Products Co, New York, N.Y. 10013 94144 Raytheon Co, Components Div, Quincy, Mass. 94154 Tung Sol Electric Inc, Newark, N.J. 95076 Garde Mfg Co, Cumberland, R.I. Quality Components Inc, St. Mary's, Penn. 95121 Alco Electronics Mfg Co, Lawrence, Mass. 95146 95238 Continental Connector Corp, Woodside, N.Y. 95275 Vitramon, Inc, Bridgeport, Conn. 95354 Methode Mfg Co, Chicago, Ill.

24455	G.E. (Lamp Div), Nela Park, Cleveland, Onic
24655	General Radio Co, W. Concord, Mass. 01781
26806	American Zettlet inc, Costa Mesa, Calif.
28520	Hayman Mfg Co, Kenilworth, N.J.
28959	Hoffman Electronics Corp, El Monte, Calif.
30874	I.B.M, Armonk, New York
32001	Jensen Mfg. Co, Chicago, III. 60638
33173	G.E. Comp, Owensboro, Ky. 42301
35929	Constanta Co, Mont. 19, Que.
37942	P.R. Mallory & Co Inc, indianapolis, Ind.
38443	Marlin-Rockwell Corp, Jamestown, N.Y.
40931	Honeywell Inc, Minneapolis, Minn. 55408
42190	Muter Co, Chicago, III. 60638
42498	National Co, Inc, Melrose, Mass. 02176
43991	Norma-Hoffman, Stanford, Conn. 06904

77638	General Instruments Corp, Brooklyn, N.Y.
78189	Shakeproof (III. Tool Works), Elgin, III. 60120
78277	Sigma instruments inc, S.Braintree, Mass.
78488	Stackpole Carbon Co, St. Marys, Penn.
78553	Tinnerman Products, Inc, Cleveland, Ohio
79089	RCA, Rec Tube & Semicond, Harrison, N.J.
79725	Wiremold Co, Hartford, Conn. 06110
79963	Zierick Mfg Co, New Rochelle, N.Y.
80030	Prestole Fastener, Toledo, Ohio
80048	Vickers Inc, St. Louis, Mo.
80131	Electronic Industries Assoc, Washington, D.C.
80183	Sprague Products Co, No. Adams, Mass.
80211	Motorola Inc, Franklin Park, III. 60131
80258	Standard Oil Co, Lafeyette, Ind.
80294	Bourns Inc, Riverside, Calif. 92506

5412	General Electric Co, Schenectady, N.Y.
5794	Anaconda Amer Brass Co, Torrington, Conn.
6095	Hi-Q Div. of Aerovox Corp, Orlean, N.Y.
6214	Texas Instruments Inc, Dallas, Texas 75209
6256	Thordarson-Meissner, Mt. Carmel, III.
6341	Microwave Associates Inc, Burlington, Mass.
6791	Amphenol Corp, Jonesville, Wisc, 53545
6906	Military Standards
8291	Sealectro Corp, Mamaroneck, N.Y. 10544
8474	Compar Inc, Burlingame, Callf.
8821 <sup>.</sup>	North Hills Electronics Inc, Glen Cove, N.Y.
9180	Transitron Electronics Corp, Melrose, Mass.
9313	Varian, Palo Alto, Cailf. 94303
9378	Atlee Corp, Winchester, Mass. 01890
9800	Delevan Electronics Corp. E. Aurora, N.Y.

9/68

### 7-2 PARTS LISTS AND DIAGRAMS

Figure 7-1 Reference	Description	GR Part Number	Fed. Mfg. Code	Mfg. Part No.	Fed. Stock No.
FRONT PA	NEL		iner i fan in fan it ditter		
1	Handle	5360-2017	24655	5360-2017	·
2, 3	Meter Cover, ME6-701, light gray	5720-6713	91929	ME-6	
4	Knob, Calibrate, includes retainer (P/N 5220-5402)	5520-5320	24655	5520-5320	
5, 6, 7	Knob, Frequency, Measurement,	5500-5321	24655	5500-5321	
15, 16, 17					
	Test Voltage, Full			Đi	•
	Scale (for $\Delta O$ ), includes retainer (P/N 5220-5402				
8, 9, 13, 1	4 Jack, Standard, Unknown, GR874	0874-4504	24655	0874-4504	
10, 11, 12	Jack, Guard, Ground, Guard	4150-3200	24655	4150-3200	
18	Switch, Toggle, Power/Off	7910-1300	04009	83053-SA	5930-909-3510
19	Nut, Dress, 15/32-32, 7/16	5800-0800	24655	5800-0800	5310-344-3634
REAR PAN	EL				
1	Fuse Holder (2), Fuse-Mounting Device	5650-0100	71400	нкр-н	5920-284-7144
2	Power Plug, PL501	4240-0600	24655	4240-0600	5935-816-0254
3,4	Slide Switch, Line-Voltage (S502) and Magnitude Linearizer (S908)	7910-0831	42190	4603	ž.
5 6	Socket, Analog Limit Comparator, (SO909)	4230-5406	02660	126-198	
6	Socket, Analog Voltage Output (SO910)	4230-5405	126-198		
7	Slide Switch, Start (S904)	7910-0774	76854	#78	
8	Jack, Start (J908)	4260-1030	82389	#111	
9	Nut, dress, 3/8-32, 7/16	5800-0805	24655	5800-0805	

### **MECHANICAL PARTS LIST**

32

お

196

290 C

125

0

14

1654-8210 24655 1654-8210

14

**5**61

81 (C)

4.7

÷.

13

12

201

3

.

1.4

52

File Courtesy of GRWiki.org

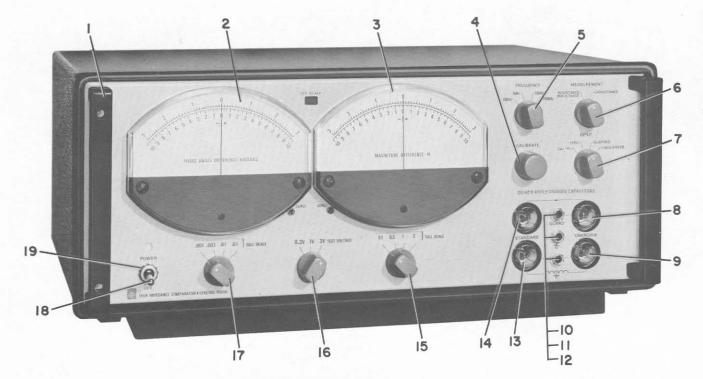


Figure 7-1. Front-panel mechanical parts on the 1654 (refer to parts list).

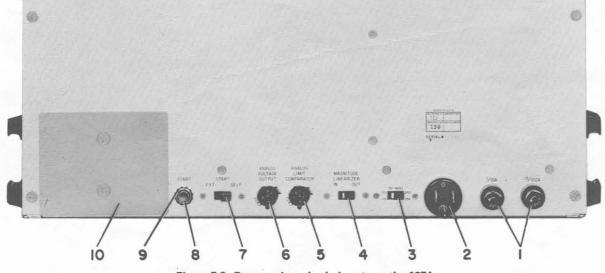


Figure 7-2. Rear-panel mechanical parts on the 1654 (refer to parts list).

Ref. No.	Description	GR Part No.	Fed. Mjg Code	y. Mfg. Part No.	Fed.Stock No.
CAPACI	TORS	<u></u>	<u> </u>	· · · · · · · · · · · · · · · · · · ·	<u>, , , , , , , , , , , , , , , , , </u>
C101	Ceramic 680 pF +80-20% 500 V	4404-1689	72982	831, 680 pF +80-20%	
C102	Electrolytic 15 µF +150-10% 15 V	4450-3700	37942	TT, 15 μF 15 V	
C103	Electrolytic 15 $\mu$ F +150 - 10 $\%$ 15 V	4450-3700		TT, 15 μF 15 V	
C104	Plastic .1 µF ±2% 100 V	4860-8251		- 1	
C105	Mica .01 µF ±1% 500 V	4750-0100		1464, .01 μF	5910-087-7593
C106	Mica .001 $\mu$ F ±2% 300 V	4690-4200			5910-669-3241
C107	Mica .00105 $\mu$ F ±2% 100 V	4700-0688		22A, .00105 µF ±2%	
C108	Electrolytic 15 $\mu$ F +150-10% 15 V	4450-3700		TT, 15 $\mu$ F 15 V	
C109	Electrolytic 15 $\mu$ F +150 -10% 15 V	4450-3700		TT, 15 μF 15 V	
C110	Mica 30 pF $\pm 10\%$ 500 V	4620-0650		CM15, 30 pF ±10%	
C111	Electrolytic 15 $\mu$ F +150 -10% 15 V	4450-3700		TT, 15 μF 15 V	
C112	Electrolytic 60 $\mu$ F +150 -10% 25 V	4450-2900		D17872	5910-799-9280
C113	Electrolytic 60 $\mu$ F +150-10% 25 V	4450-2900		D17872	5910-799-9280
C114	Electrolytic 2000 $\mu$ F +150-10% 6 V	4450-6106		TT, 2000 μF +150-10%	
DIODES					
CR101	Type 1N645	6082-1016	24446	1N645	5961-944-8222
CR102	Type 1N645	6082-1016	24446	1N645	5961-944-8222
CR103	Type 1N4009	6082-1012	24446	1N4009	5961-892-8700
CR104	Type 1N645	6082-1016	24446	1N645	5961-944-8222
CR105	Type 1N645	6082-1016	<b>2444</b> 6	1N645	5961-944-8222
RESISTO	RS				
R101	Film 15.9 kΩ ±1% 1/8 W	6250 <b>-</b> 21 <b>5</b> 9	75042	CEA, 15.9 k $\Omega$ ±1%	
R102	Composition 12 k $\Omega$ ±5% 1/4 W	6099-3125	75042	BTS, 12 k $\Omega$ ±5%	
R103	Composition 51 k $\Omega$ ±5% 1/4 W	6099-3515		BTS, 51 k $\Omega$ ±5%	5905-200-6731
R104	Composition 68 $\Omega \pm 5\% 1/4$ W	6099-0685		, , ,	
R105	Composition 330 $\Omega$ ±5% 1/4 W	6099-1335		BTS, 330 $\Omega \pm 5\%$	5905-686-3369
R106	Composition 18 k $\Omega$ ±5% 1/4 W	6099-3185		BTS, 18 k $\Omega$ ±5%	5905-687-0000
R107	Composition 430 $\Omega$ ±5% 1/4 W	6099-1435		BTS, 430 $\Omega$ ±5%	
R108	Composition 1.8 k $\Omega$ ±10% 1/4 W	6099-2189		BTS, 1.8 k $\Omega$ ±10%	
R109	Composition 430 $\Omega \pm 5\% 1/4$ W	6099-1435		BTS, 430 $\Omega$ ±5%	F00F 000 0100
R110	Thermistor 100 k $\Omega$ ±20%	6740-2021		51A161GR	5905-933-8183
R111	Pot. Wire Wound 2 k $\Omega$ ±10%	6056-0100		115, 2 k $\Omega$ ±10%	
R112	Pot. Wire Wound 2 k $\Omega$ ±10%	6056-0100		115, 2 k $\Omega$ ±10%	
R113 R114	Pot. Wire Wound 2 k $\Omega$ ±10% Pot. Wire Wound 100 $\Omega$ ±10%	6056-0100		115, 2 k $\Omega$ ±10%	
R114 R115	Film 15 k $\Omega$ ±1% 1/8 W	6056-0132 6250-2150		115, 100 $\Omega$ ±10% CEA, 15 k $\Omega$ ±1%	5905-581-7626
R115	Film 1.21 k $\Omega \pm 1\%$ 1/8 W	6250-1121		CEA, 13 KM $\pm 1\%$ CEA, 1.21 k $\Omega \pm 1\%$	3903-301-7020
R117	Composition 1 k $\Omega$ ±10% 1/4 W	6099-2109		BTS, 1 k $\Omega$ ±10%	
R118	Composition 1 kM $\pm 10\%$ 1/4 W Composition 4.7 k $\Omega \pm 5\%$ 1/4 W	6099-2109		BTS, $4.7 k\Omega \pm 5\%$	5905-686-9998
R119	Composition 2.7 k $\Omega$ ±5% 1/4 W	6099-2275		BTS, 4.7 k $\Omega \pm 5\%$ BTS, 2.7 k $\Omega \pm 5\%$	0700 000 7770
R120	Composition 2.7 km $\pm 5\%$ 1/4 W Composition 3.9 k $\Omega \pm 5\%$ 1/4 W	6099-2395		BTS, 3.9 k $\Omega$ ±5%	
R121	Composition 1.1 k $\Omega$ ±5% 1/4 W	6099-2115		BTS, 1.1 k $\Omega \pm 5\%$	
R122	Composition 68 k $\Omega$ ±5% 1/4 W	6099-3685		BTS, 68 k $\Omega$ ±5%	5905-681-8853
R123	Composition 470 $\Omega \pm 10\% 1/4$ W	6099-1479		BTS, 470 $\Omega \pm 5\%$	
R124	Composition 3.9 k $\Omega$ ±5% 1/4 W	6099-2395		BTS, 3.9 k $\Omega$ ±5%	
R125	Composition 62 $\Omega \pm 5\% 1/2$ W	6100-0625		RC20GF620J	5905-279-1760
R126	Composition 62 $\Omega \pm 5\% 1/2$ W	6100-0625		•	5905-279-1760
R127	Composition 3.9 k $\Omega$ ±5% 1/4 W	6099-2395		BTS, 3.9 k $\Omega$ ±5%	
R128	Composition 2.2 k $\Omega$ ±5% 1/4 W	6099-2225		BTS, 2.2 k $\Omega$ ±5%	5905-723-5251
R129	Composition 330 $\Omega \pm 5\% 1/4$ W	6099-1335		BTS, 330 k $\Omega$ ±5%	5905-686-3369
R130	Thermistor 200 $\Omega \pm 10\%$	6740-1600	02606		
R131	Composition 180 $\Omega \pm 5\% 1/4$ W	6099-1185		BTS, 180 $\Omega \pm 5\%$	5905-279-5476
R132	Thermistor 200 $\Omega \pm 10\%$	6740-1600		KB22]1	
133	Composition 12 $\Omega \pm 5\% 1/4$ W	6099-0125		BTS, 12 $\Omega$ ±5%	5905-279-5455
R134	Thermistor 50 $\Omega$ ±10%	6740-1900		CB15L1	
			-		

ELECTRICAL PARTS LIST

.

- -

### TRANSISTORS

.

.

.

.

.

.

Q101 Q102	Type 2N4123 Type 2N4123	8210-112 8210-112		
Q103	Type 2N4125	8210-112		
Q104	Type 2N3414	8210-104	47 24446 2N3416	5961-989-2749
Q105	Type 2N3414	8210-104	7 24446 2N3416	5961-989-2749
Q106	Type 2N4125	8210-112	25 93916 2N4125	
Q107	Type 2N697	8210-104	0 82219 2N697	5961-752-0150
Q108	Type 2N1131	8210-102	25 96214 2N1131	5960-788-8644



### SIGNAL INDEX

### **OSCILLATOR ETCHED BOARD**

(Reference Figures 7-3 and 7-4)

Signal	Description	Signal Type
PAO	Power-Amplifier Output	rms
GND	Signal Ground	
PAI	Power-Amplifier Input	dc and rms
+15 V	Power-Supply Voltage	dc
–15 V	Power-Supply Voltage	dc
OSIN	Oscillator Input	dc and rms
GND	Signal Ground	
OSO	Oscillator Output	dc and rms
OS1	100-Hz Oscillator-Network Output	dc and rms
OS2	1-kHz Oscillator-Network Output	dc and rms
OS3	10-kHz Oscillator-Network Output	dc and rms
OS4	100-kHz Oscillator-Network Output	dc and rms

.

.

· ·

.

.

.

.

.

.

.

.

## 7-4 PARTS LISTS AND DIAGRAMS

.

.



.

.

•


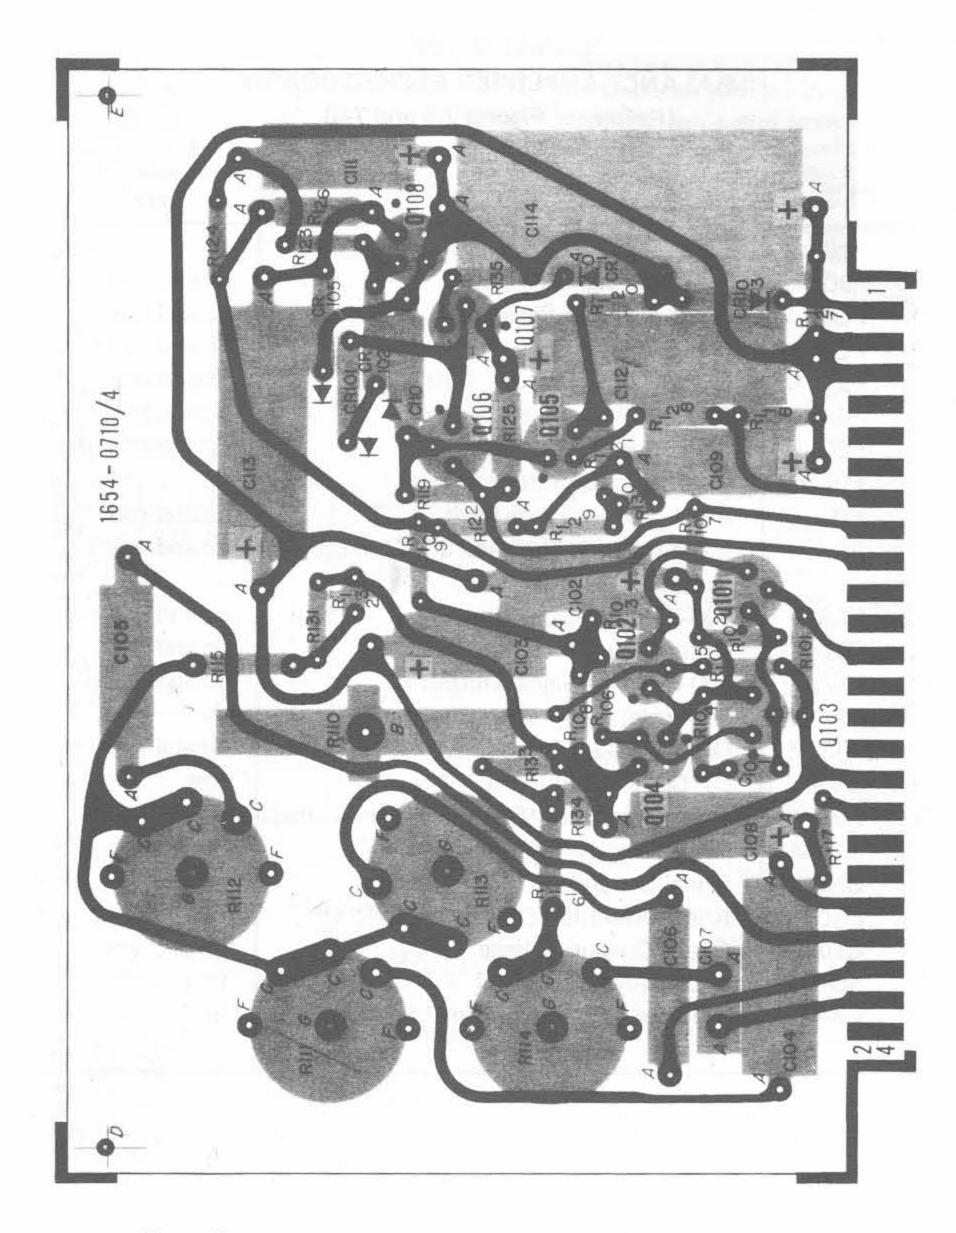


Figure 7-3. Oscillator-circuit etched-board assembly (P/N 1654-4711).

NOTE: The board is shown foil-side up. The number appearing on the foil side is *not* the part number. The dot on the foil at the transistor socket indicates the collector lead.





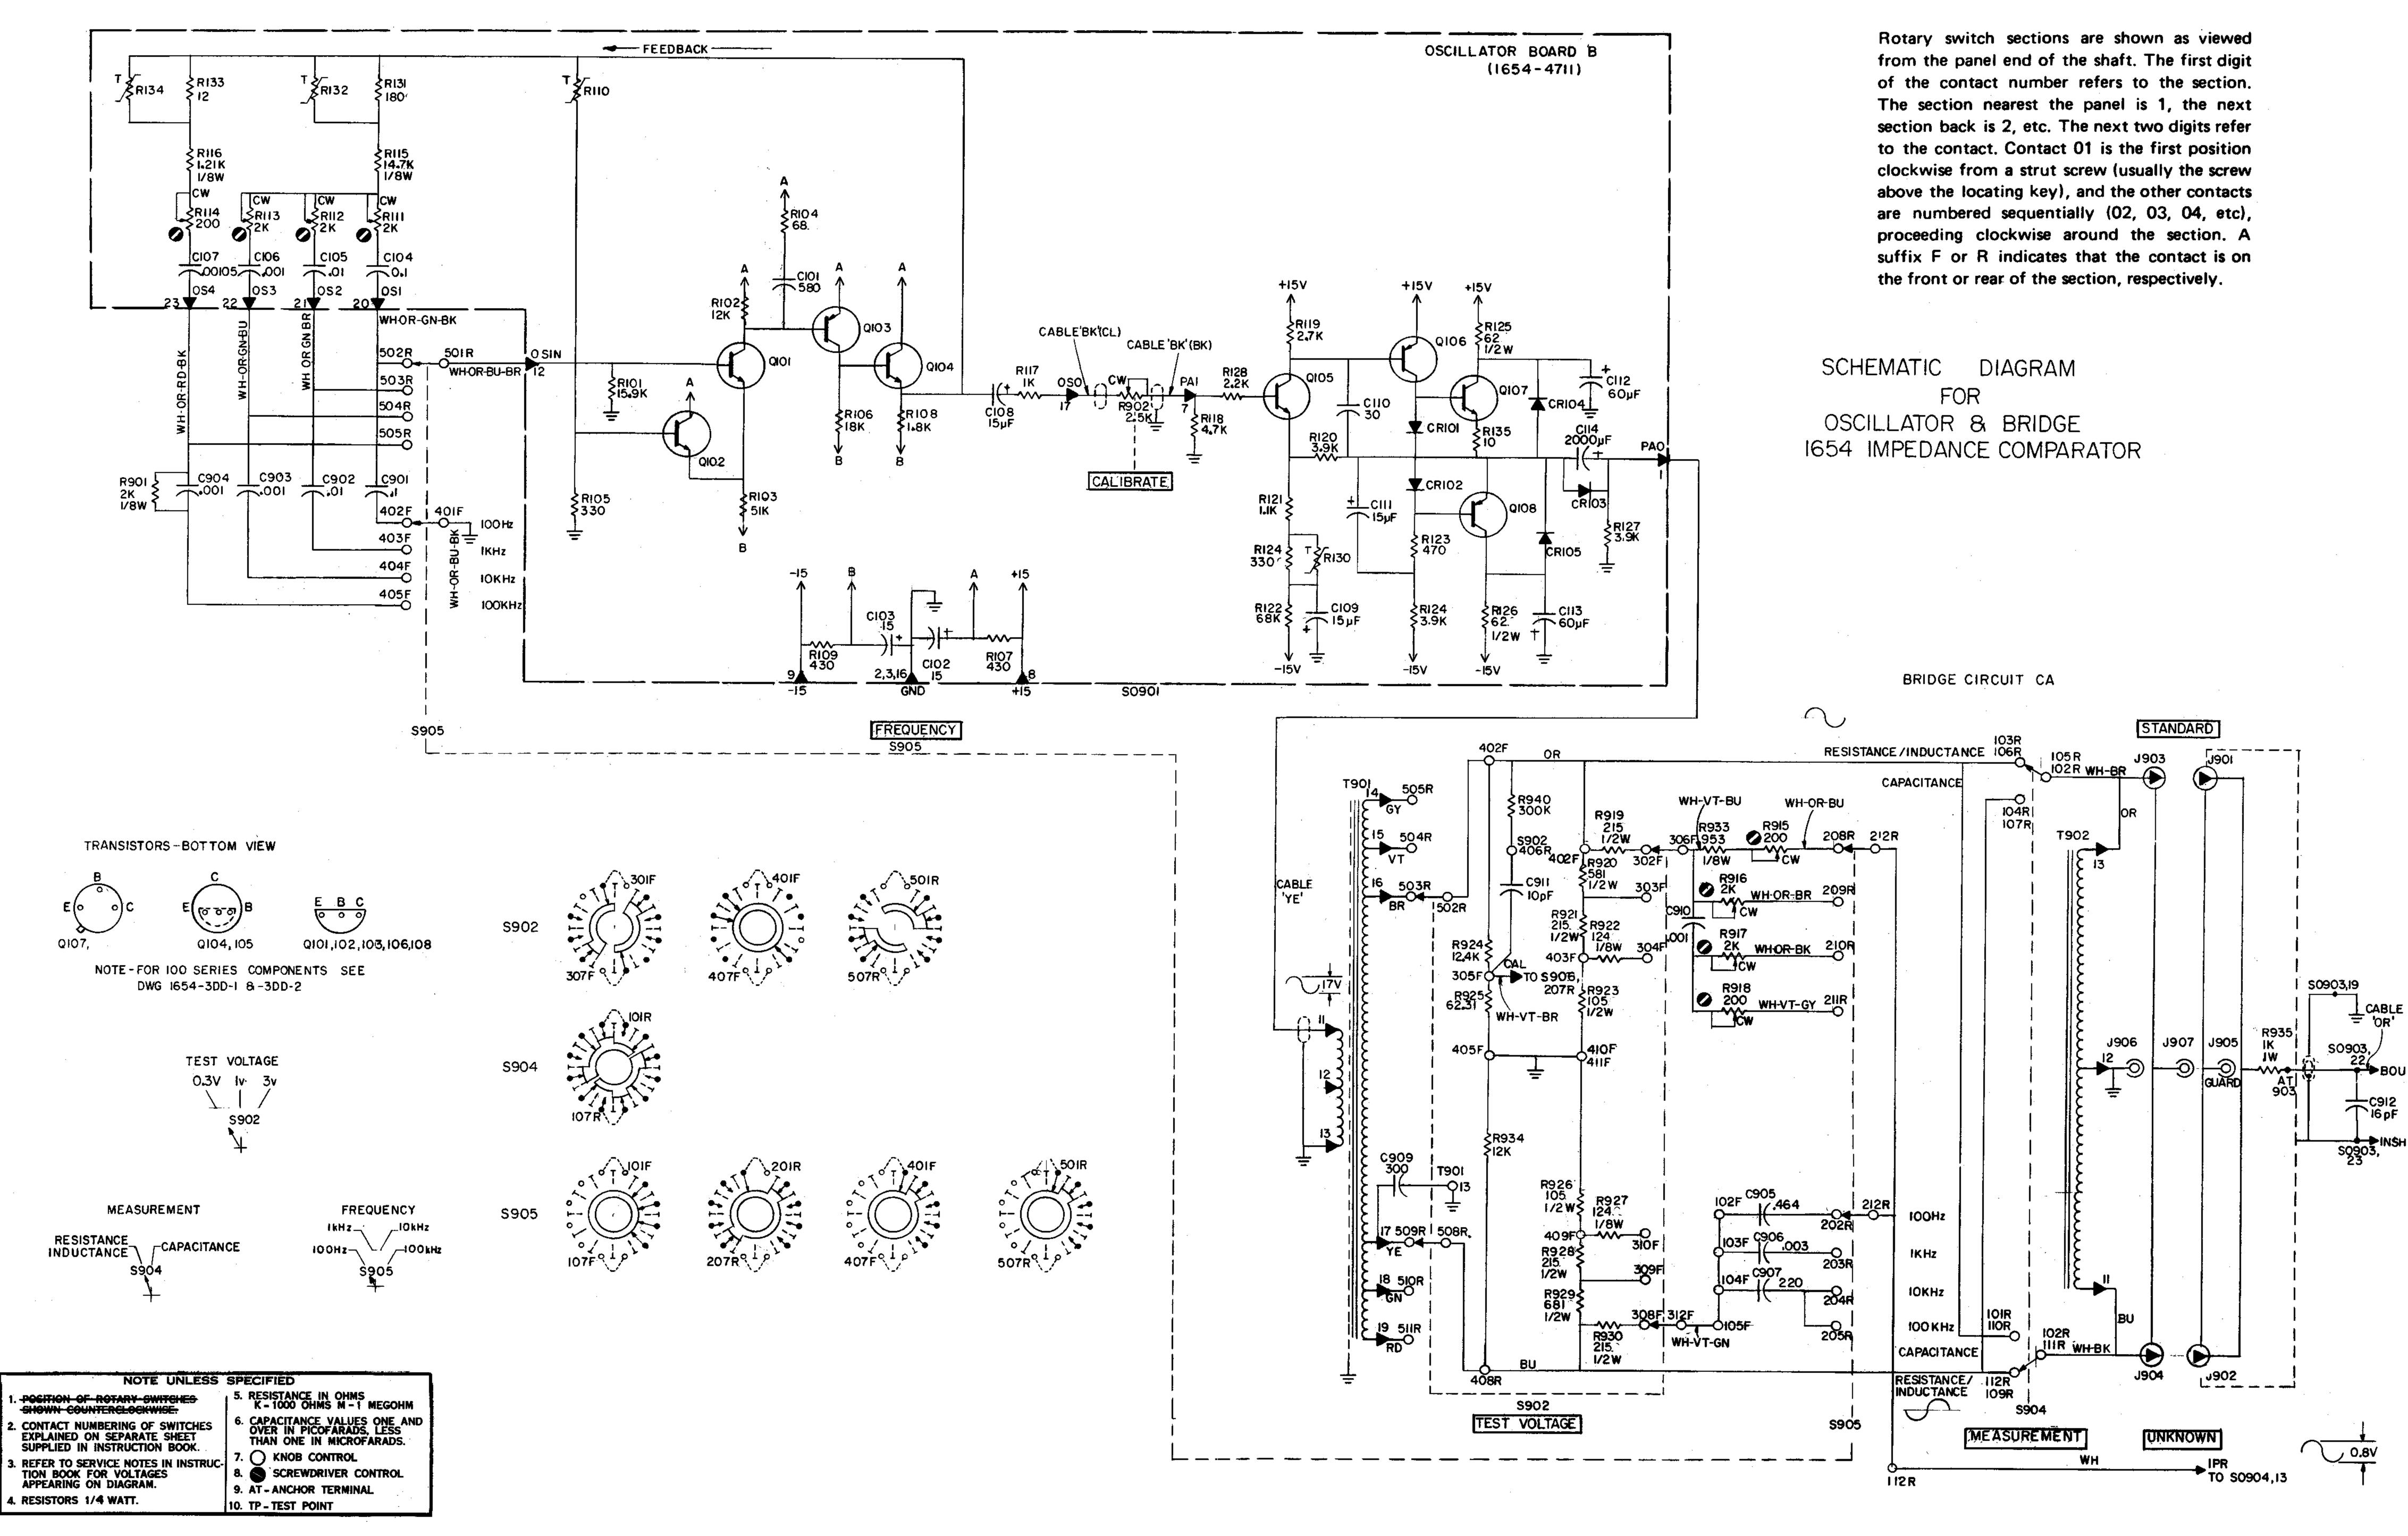

### Figure 7-4. Oscillator and bridge-circuit schematic diagram.

### PARTS LISTS AND DIAGRAMS 7-5

	ELECTRICAL PARTS LIST							
Ref. No.	Description	GR Part No.	Fed. Mfg Code	. Mfg. Part No.	Fed. Stock No.			
CAPACII	TORS							
C301	Plastic .01 µF ±10% 400 V	4860-7648	84411	663 UW, .01 μF ±10%				
C302	Electrolytic 100 $\mu$ F +150-10% 15 V	4450-2800	56289	D17872	5910-034-5368			
C303	Electrolytic 100 µF +150-10% 15 V	4450-2800		D17872	5910-034-5368			
C304	Plastic 0.047 ±10% 200 V	4860-7869	84411	663 UW, 0.047 µF ±10% 2	200 V			
C305	Electrolytic 18 $\mu$ F ±20% 15 V	4450-5230	56289	150D186X0015B2				
C306	Electrolytic 18 $\mu$ F ± 20% 15 V	4450-5230	56289	150D186X0015B2				
C307	Ceramic 330 pF ±10% 500 V	4404-1338	72982	831, 330 pF ±10%	5910 <b>-</b> 974-5702			
C308	Mica 39 pF ±5% 500 V	4640-0200	72136	CM, 39 pF ±5%				
C309	Electrolytic 18 µF ±20% 15 V	4450-5230	56289	150D186X0015B2				
C310	Plastic 0.1 µF ±10% 200 V	4862-8050	84411	GR-19, 0.1 µF ±10%				
C311	Ceramic .0018 µF ±10% 500 V	<b>44</b> 06 <b>-21</b> 88	72982	811, 1800 pF ±10%				
C312	Plastic 0.68 µF ±10% 200 V	4862-8340	84411	GR-19, 0.68 µF ±10%				
C313	Electrolytic 100 µF +150-10% 15 V	4450-2800	56289	D17872	<b>5910-034-5368</b>			
C314	Ceramic .001 µF +80-20% 500 V	4404-2109	72982	831, .001 μF +80-20%	5910-983-9994			
C315	Ceramic .001 µF +80-20% 500 V	4404-2109	72982	831,.001 μF +80-20%	5910-983-9994			
C316	Electrolytic 15 µF +150-10% 15 V	4450-3700	37942	TT, 15 μF 15 V				
C317	Electrolytic 15 µF +150-10% 15 V	4450-3700	3,7942	TT, 15 μF 15 V				
C318	Plastic 0.1 µF ±2% 100 V	4860-8251	84411	663 UW, 0.1 μF ±2% 100	V			
C319	Mica .001 µF ±2% 300 V	4690-4200	88419	CM20E, 1000 pF ±2%	5910-669-3241			
C320	Mica .01 μF ±2% 300 V	4780-0300	88419	· · · · · ·				
C321	Ceramic 2.2 pF ±10% 500 V	4400-0200	78488	GA, 2.2 pF ±10%				
RESISTO	RS			· ·				

.

KE31310					
R301	Film 47.5 kΩ ±1% 1/8 W	6250-2475	75042	CEA, 47.5 kΩ ±1%	5905-577-6747
R302	Composition 470 $\Omega$ ±10% 1/4 W	6099-1479	75042	BTS, 470 Ω ±10%	
R303	Composition 1.5 m $\Omega$ ±5% 1/2 W	6100-5155	01121	RC20GF155J	5905-279-1754
R304	Composition 1 m $\Omega$ ±5% 1/4 W	6099-5105	75042	BTS, $1 \text{ m}\Omega \pm 5\%$	
R305	Composition 470 $\Omega$ ±10% 1/4 W	6099-1479	75042	BTS, 470 $\Omega$ ±10%	
<b>R3</b> 06	Composition 22 m $\Omega$ ±5% 1/2 W	6100-6225	01121	RC20GF226J	5905-259-2990
R307	Composition 39 k $\Omega$ ±10% 1/4 W	6099-3399	75042	BTS, 39 k $\Omega$ ±10%	
R308	Composition 47 k $\Omega$ ±5% 1/4 W	6099-3475	75042	BTS, 47 k $\Omega$ ±5%	5905-683-2246
R309	Composition 47 k $\Omega$ ±5% 1/4 W	6099-3475	75042	BTS, 47 k $\Omega$ ±5%	5905-683-2246
R310	Composition 1 k $\Omega$ ±5% 1/4 W	6099-2105	75042	BTS, 1 k $\Omega$ ±5%	5905-681-6462
R311	Composition 30 k $\Omega$ ±5% 1/4 W	6099-3305	75042	BTS, 30 k $\Omega$ ±5%	5905-803-2908
R312	Composition 6.8 k $\Omega$ ±10% 1//4 W	6099-2689	75042	BTS, 6.8 k $\Omega$ ±10%	
R313	Composition 68 $\Omega$ ±5% 1/4 W	6099-0685	75042	BTS, 68 $\Omega \pm 5\%$	
R314	Composition 12 k $\Omega$ ±10% 1/4 W	6099-3129	75042	BTS, 12 k $\Omega$ ±5%	
R315	Composition 3.9 k $\Omega$ ±5% 1/4 W	6099-2395	75042	BTS, 3.9 k $\Omega$ ±5%	
R316	Composition 100 k $\Omega$ ±5% 1/4 W	6099-4105	75042	BTS, 100 k $\Omega$ ±5%	5905-686-3129
R317	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105		BTS, 10 k $\Omega$ ±5%	5905-683-2238
R318	Composition 10 $\Omega$ ±10% 1/4 W	6099-0109		BTS, 10 $\Omega \pm 10\%$	
R319	Composition 1 k $\Omega$ ±5% 1/2 W	6100-2105	01121	RC20GF102J	5905-195-6806
R320	Composition 62 k $\Omega$ ±5% 1/4 W	6099-3625	75042	BTS, 62 k $\Omega$ ±5%	
R321	Composition 27 k $\Omega$ ±5% 1/4 W	6099-3275	75042	BTS, 27 k $\Omega$ ±5%	5905-683-3838
R322	Composition 220 k $\Omega$ ±10% 1/4 W	6099-4229	75042	BTS, 220 $\Omega \pm 10\%$	
R323	Composition 100 $\Omega \pm 10\%$ 1/4 W	6099-1109		BTS, 100 $\Omega \pm 10\%$	· · ·
R324	Film 3.32 k $\Omega$ ±1% 1/8 W	6250-1332		CEA, 3.32 k $\Omega$ ±1%	<b>EODE</b> (0) 0000
R325	Composition 20 k $\Omega$ ±5% 1/4 W	6099-3205	75042		5905-686-3368
R326	Film 33.2 k $\Omega$ ±1% 1/8 W	6250-2332	75042		5905-681-8758
R327	Composition 3.3 k $\Omega$ ±10% 1/4 W	6099-2339	75042	BTS, 3.3 k $\Omega$ ±10%	·
R328	Composition 24 k $\Omega$ ±5% 1/4 W	6099-3245			
R329	Composition 3.9 k $\Omega$ ±5% 1/4 W	6099-2395		BTS, 3.9 k $\Omega$ ±5%	
R330	Composition 100 $\Omega \pm 10\% 1/4$ W	6099-1109	75042	BTS, 100 $\Omega \pm 10\%$	
R331	Film 3.32 k $\Omega$ ±1% 1/8 W	6250-1332		CEA, 3.32 k $\Omega \pm 1\%$	
R332	Film 20 k $\Omega$ ±1% 1/8 W	6250 - 2200	75042	, , , ,	5905-702-5971 5905-682-4007
R333	Composition 3 k $\Omega$ ±5% 1/4 W	6099-2305		BTS, 3 k $\Omega$ ±5%	5905-682-4097 5005-882-4847
R334	Film 10 k $\Omega$ ±1% 1/8 W Composition 110 k $\Omega$ ±5% 1/4 W	6250-2100		CEA, 10 k $\Omega \pm 1\%$	5905-883-4847
R335	Composition 110 k $\Omega$ ±5% 1/4 W	6099-4115		BTS, 110 k $\Omega \pm 5\%$	
R336	Composition 15 k $\Omega$ ±10% 1/4 W Composition 100 $\Omega$ ±10% 1/4 W	6099-3159 6099-1109		BTS, 15 k $\Omega$ ±10%	
R337	Film 10 k $\Omega$ ±1% 1/8 W	6250-2100		BTS, 100 Ω ±10% CEA, 10 kΩ ±1%	5905-883-4847
R338 R339	Film 10 k $\Omega \pm 1\%$ 1/8 W Film 33 k $\Omega \pm 5\%$ 1/4 W	6099-3335			3703-003-4047
R340	Film 2 k $\Omega \pm 5\% 1/4$ W	6099-3335		BTS, 33 k $\Omega$ ±5% BTS, 2 k $\Omega$ ±5%	5905-279-4629
R340 R341	Film 2.8.2 $\pm 5\%$ 1/4 W Film 130 $\Omega \pm 5\%$ 1/4 W	6099-2205		BTS, $2 \text{ K}_{2} \pm 5\%$ BTS, 130 $\Omega \pm 5\%$	5905-807-6269
	Film 130 $\Omega \pm 5\%$ 1/4 W	6099 <b>-</b> 1135		BTS, 130 $\Omega \pm 5\%$ BTS, 130 $\Omega \pm 5\%$	5905-807-6269
R342 R343	Pot. Wire Wound 2 k $\Omega$ ±10% 1 W	6051-2209	07990	$2600 \text{ PC}, 2 \text{ k}\Omega \pm 10\%$	5905-007-0209
R344	Pot. Wire Wound 1 k $\Omega$ ±10% 1 W	6051-2109	02660	$2600 - PC$ , $1 k\Omega \pm 10\%$	
R345	Composition 300 $\Omega \pm 5\% 1/4$ W	6099-1305	75042	BTS, 300 $\Omega \pm 5\%$	5905-279-5481
R346	Film 15 k $\Omega \pm 1\%$ 1/8 W	6250-2150		CEA, 15 k $\Omega \pm 1\%$	5905-581-7626
R347	Pot. Wire Wound 1 k $\Omega$ ±10% 1 W	6051-2109		2600-PC, 1 k $\Omega$ ±10%	
R348	Pot. Wire Wound 200 $\Omega \pm 10\%$ 1 W	6051-1209		$2600 - PC$ 200 $\Omega \pm 10\%$	
R349	Film 1.47 k $\Omega \pm 1\% 1/4$ W	6350-1147		CEB, 1.47 k $\Omega \pm 1\%$	5905-577-6733
1.01/			10014		

.

.

.

Ref. No.	Description	GR Part No.	Fed. Mfg Code	Mfg. Part No.	Fed. Stock No.
TRANSIS	TORS				
Q301	Type 2N4220	8210-1143	93916	2N4220	
Q302	Type 2N4250	8210-1135	93916	<b>2</b> N4250	
Q303	Type 2N4123	8210-1123	93916	2N4123	
Q304	Type 2N4250	8210-1135	93916	2N4250	
Q305	Type 2N4123	8210-1123	93916	2N4123	
Q306	Type 2N4250	8210-1135	93916	2N4250	
Q307	Type 2N4250	8210-1135	93916	2N4250	
Q308	Type 2N4123	8210-1123	93916	2N4123	
Q309	Type 2N4125	8210-1125	93916	2N4125	
Q310	Type 2N4123	8210-1123	93916	2N4123	
Q311	Type 2N4123	8210-1123	93916	2N4123	
Q312	Type 2N4125	8210-1125	93916	2N4125	
Q313	Type 2N4123	8210-1123	93916	2N4123	
Q314	Type 2N4123	8210-1123	93916	2N4123	
Q315	Type 2N4125	8210-1125	93916	2N4125	
Q316	Type 2N3414	8210-1047	24446	2N3416	5961-989-274

### ELECTRICAL PARTS LIST (cont)

.

.

.

.

.

### MISCELLANEOUS

.

CR301	Type IN4009 Diode	6082-1012	24446	1N4009	5961-892-8700
	Relay Coil	6090-1131	24655	6090-1131	
	Relay Coil	6090-1130	71707	XU-8242-P	
	Relay Switch	6090-0800	30874	76586S	

K302S Relay Switch

. .

.

6090-0800 30874 76586S

.

. .



## SIGNAL INDEX UNBALANCE-AMPLIFIER ETCHED BOARD (Reference Figures 7-5 and 7-6)

.

.

Cirmet		Signal
Signal	Description	Туре
GND	Signal Ground	· · · ·
E90	90° Error-Signal Output	dc and rms
FO4	Input, 100-kHz Phase Shift	dc and rms
FO3	Input, 10-kHz Phase Shift	dc and rms
F91	Output, 100 Hz Phase Shift	dc and rms
F9A	Output, Phase-Shift Network	dc and rms
FO2	Input, 1-kHz Phase-Shift	dc and rms
+15 V	Power-Supply Voltage	dc
FO1	Input, 100-Hz Phase Shift	dc and rms
FOA	Input to Phase Shift and 0° Error-Signal	dc and rms
	Output	
FLS	100-Hz Error-Signal Input	dc and rms
F92	Output, 10-kHz Phase Shift	dc and rms
FLA	100-Hz Error-Signal Output	dc and rms
GA1	Off-Scale, Relay-Signal Input	dc
F <b>9</b> 3	Output, 1-kHz Phase Shift	dc and rms
OVS (	Off-Scale Signal Input	rms
PUF	Unregulated +15 V Power-Supply Voltage	dc
—15 V	Power-Supply Voltage	dc
GND	Signal Ground	
PRO	Bridge-Amplifier Output	rms
GUA	Guard Output Voltage	dc and rms
BOU	Bridge-Amplifier Input	rms
EXR	External Start-Relay Signal Input	dc

.

### 7-6 PARTS LISTS AND DIAGRAMS

.

.

. .

· .

File Courtesy of GRWiki.org 

.

.

.

.

.

.

.

.


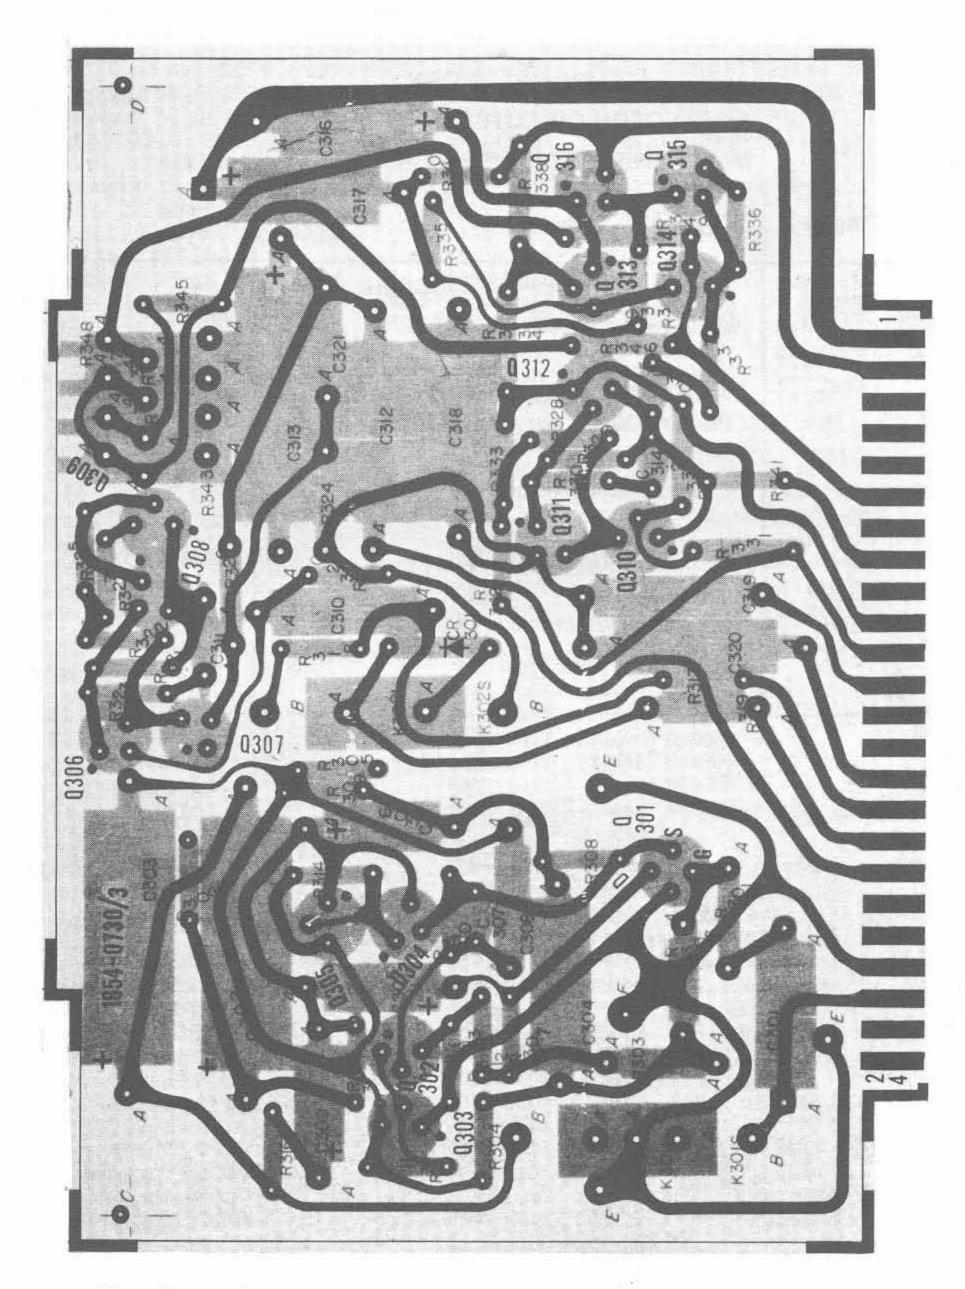


Figure 7-5. Unbalance-amplifier circuit etched-board assembly (P/N 1654-4731).

NOTE: The board is shown foil-side up. The number appearing on the foil side is *not* the part number. The dot on the foil at the transistor socket indicates the collector lead.



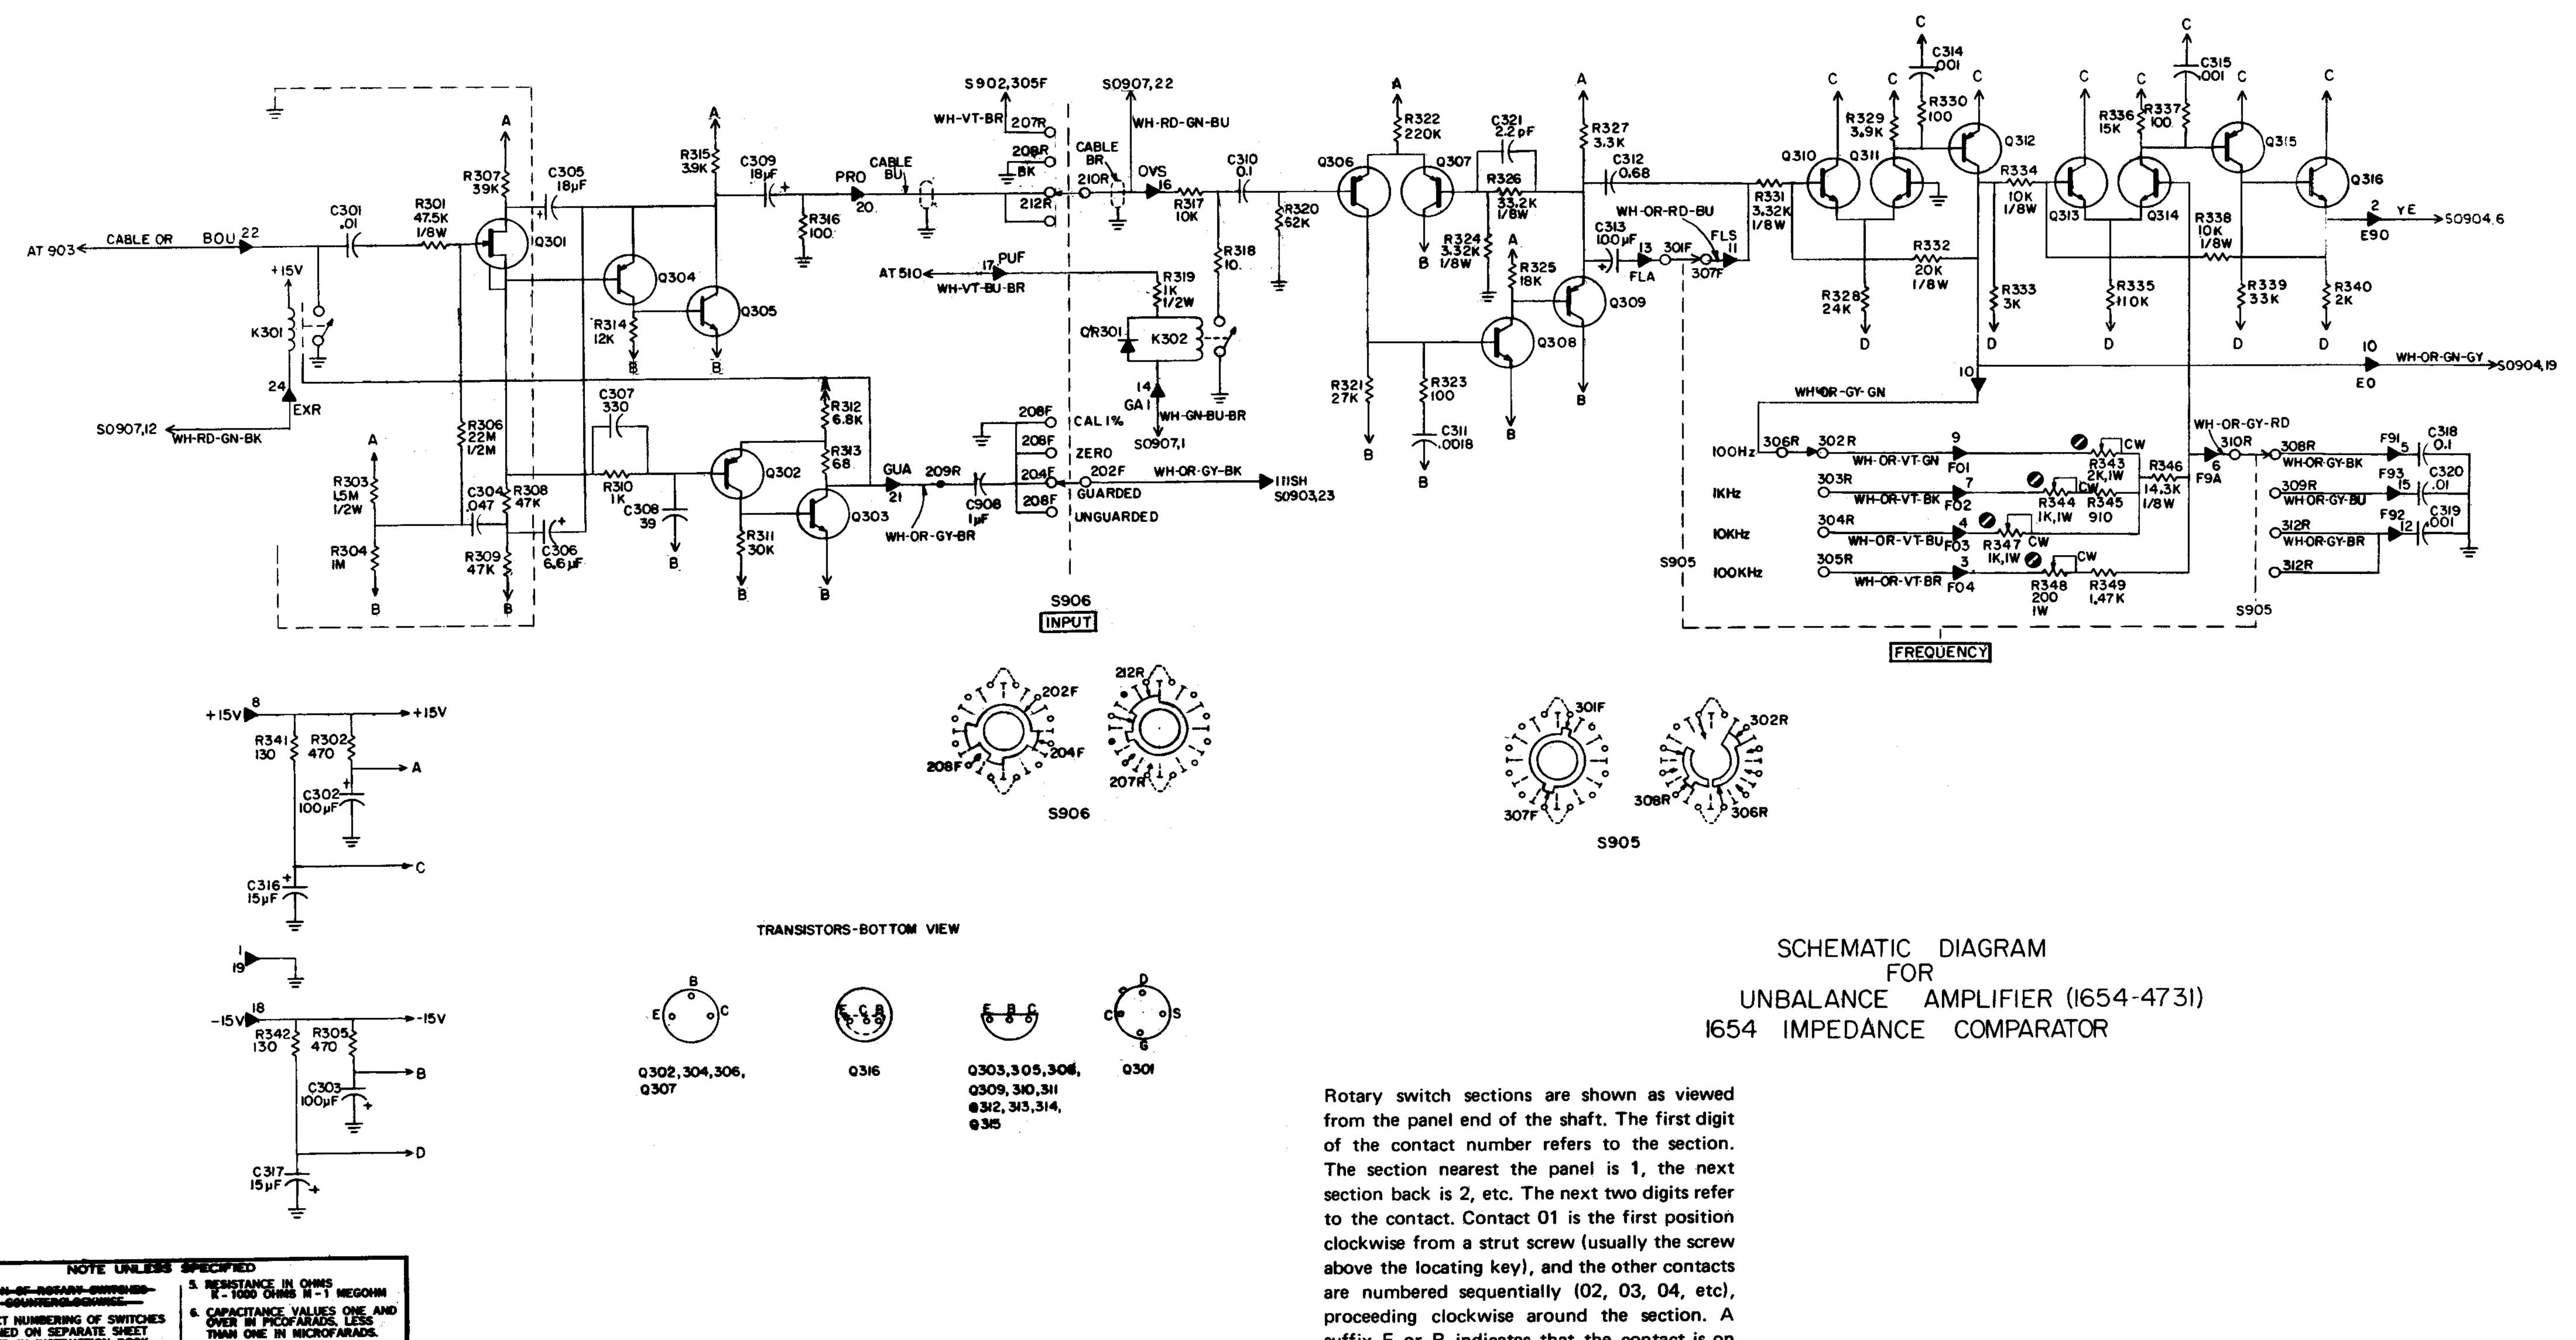

- CONTACT NUMBERING OF SWITCHES EXPLAINED ON SEPARATE SHEET SUPPLIED IN INSTRUCTION BOOK. 3. REFER TO SERVICE NOTES IN INSTRUC-TION BOOK FOR VOLTAGES APPEARING ON DIAGRAM.
- 4. RESISTORS 1/4 WATT.
- 10. TP TEST POINT

8. SCREWDRIVER CONTROL



File Courtesy of GRWiki.org

suffix F or R indicates that the contact is on the front or rear of the section, respectively.

Figure 7-6. Unbalance-amplifier circuit schematic diagram.

## PARTS LISTS AND DIAGRAMS 7-7

ef. No.	Description	GR Part No.	Fed. Mfg Code	. Mfg. Part No.	Fed. Stock No.
	rors				
401	Mica .001 $\mu$ F ±2% 300 V	4690-4200	88419	CM20E, 1000 pF ±2%	
403	Electrolytic 68 $\mu$ F ±20% 15 V	4450-5615	80183	150D686X0015R2	
404	Electrolytic 68 $\mu$ F ±20% 15 V	4450-5615	80183	150D686X0015R2	
405	Ceramic .02 µF +80-20% 50 V	4402-3200		35-203W	5910-952-8659
406	Ceramic .02 $\mu$ F +80-20% 50 V	4402-3200		35-203W	5910-952-8659
407	Electrolytic 15 $\mu$ F +150-10% 15 V	4450-3700		TT, 15 $\mu$ F 15 V	Forth and Forth
408 409	Ceramic .05 $\mu$ F +80-20% 50 V Coramic .05 $\mu$ F +80-20% 50 V	4403-3500		40-503W	5910-883-7321
409 410	Ceramic .05 µF +80-20% 50 V Mica 13 pF ±5% 500 V	4403-3500 4640-0093		40-503W	5910-883-732 <b>1</b>
411	Trimmer 1-4.5 pF	4040-0093		CM15, 13 pF ±5% 4910-1103	
412	Plastic .75 pF $\pm 5\%$ 100 V	4860-8006	•	663 UW, .75 pF ±5% 100	N VZ
413	Plastic .464 $\mu$ F ±2% 100 V	4860-7990		663 UW, .464 $\mu$ F ±1% 10	
414	Ceramic .01 $\mu$ F +80-20% 50 V	4401-3100		CC61, .01 µF +80-20%	5910-974-5694
415	Electrolytic 6.8 $\mu$ F +20% 35 V	4450-5000		150D685X0035B2	5910-814-5869
416	Electrolytic 6.8 $\mu$ F ±20% 35 V	4450-5000	56289	150D685X0035B2	5910-814-5869
417	Mica 13 pF ±5% 500 V	4640-0093		CM15, 13 pF ±5%	
418	Trimmer 1-4.5 pF	4910-1103		4910-1103	. <b></b>
419	Plastic .75 pF ±5% 100 V	4860-8006		663 UW, .75 pF ±5% 100	
420	Plastic .464 µF ±2% 100 V	4860-7990		663 UW, .464 μF ±1% 10	· · · · · · · · · · · · · · · · · · ·
421	Ceramic .01 µF +80-20% 50 V	4401-3100		CC61 .01 $\mu$ F +80-20%	5910-974-5697
422	Ceramic 100 pF +80-20% 500 V	4404-1109	-	831, 100 pF $+80-20\%$	5010-011-4799
423	Ceramic 0.1 $\mu$ F +80-20% 50 V	4403-4100		CC63, .1 $\mu$ F +80-20%	5910-811-4788 5910-931-0533
424 425	Plastic .68 $\mu$ F ±10% 100 V Plastic .68 $\mu$ F ±10% 100 V	4860-8008 4860-8008		663 UW, .68 μF ±10% 663 UW, .68 μF ±10%	5910-931-0533
425	Plastic .68 µF ±10% 100 V	4000-0000	77030	003 0 ₩, .00 μr. ±10/0	J/10 /01 0000
0 <b>DES</b> R401	Type 1N759A	6083-1014	81349	IN759A	5961-846-9157
R402	Type 1N753A	6083-1006	•-	IN753A	5961-752-6121
R403	Type 1N4009	6082-1012		IN4009	5961-892-8700
R404	Type 1N4009	6082-1012		IN4009	5961-892-8700
R405	Type 1N4009	6082-1012	24446	IN4009	5961-892-8700
R406	Type 1N4009	6082-1012	24446	IN4009	5961-892-8700
R407	Type 1N4009	6082-1012	24446	IN4009	5961-892-8700
ESISTO					
401	Composition 1 m $\Omega$ ±5% 1/4 W	6099-5105		BTS, $1 \text{ m}\Omega \pm 5\%$	
402	Composition 3.3 k $\Omega$ ±10% 1/4 W	6099-2339		BTS, 3.3 k $\Omega$ ±10%	EDDE (00 004/
403	Composition 47 k $\Omega$ ±5% 1/4 W	6099-3475		BTS, 47 k $\Omega$ ±5%	5905-683-2246
404	Composition 3.3 k $\Omega$ ±5% 1/4 W	6099-2335		BTS, 3.3 k $\Omega$ ±5%	5905-577-0627
405	Composition 39 k $\Omega$ ±10% 1/4 W	6099-3399 6099-3185	75042	BTS, 39 k $\Omega$ ±10%	EODE 200 0500
406 407	Composition 1.8 k $\Omega$ ±10% 1/4 W Composition 300 $\Omega$ ±5% 1/4 W	6099-2185 6099-1305	75042 75042	BTS, 1.8 k $\Omega$ ±5% BTS 300 $\Omega$ ±5%	5905-688-3738 5905-279-5481
407 408	Composition 300 $\Omega$ ±5% 1/4 W Composition 1 k $\Omega$ ±5% 1/4 W	6099-1305 6099-2105	75042 75042	BTS, 300 $\Omega \pm 5\%$ BTS, 1 k $\Omega \pm 5\%$	5905-279-5481 5905-681-6462
408 409	Composition 1 KM $\pm 5\%$ 1/4 W Composition 820 $\Omega \pm 10\%$ 1/4 W	6099-2105		BIS, I KM $\pm 5\%$ BTS, 820 $\Omega \pm 10\%$	J70J-001-0402
410	Composition $1 k\Omega \pm 5\% 1/4 W$	6099-1829	75042	BTS, $320 \ x \pm 10\%$ BTS, 1 k $\Omega \pm 5\%$	5905-681-6462
411	Composition 1 m $\Omega \pm 5\%$ 1/4 W	6099-5105	75042	BTS, 1 m $\Omega$ ±5%	0700 001 0104
412	Composition 1 m $\Omega$ ±5% 1/4 W	6099-5105		BTS, $1 \text{ m}\Omega \pm 5\%$	
413	Composition 1 In $\Omega = 5/c$ 1/4 W Composition 22 $\Omega \pm 10\%$ 1/4 W	6099-0229		BTS, 22 $\Omega \pm 10\%$	
414	Composition 1 k $\Omega$ ±5% 1/4 W	6099-2105	75042	BTS, 1 k $\Omega$ ±5%	5905-681-6462
415	Composition 22 $\Omega \pm 10\% 1/4$ W	6099-0229	75042	BTS, 22 $\Omega \pm 10\%$	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~
416	Composition 4.7 k $\Omega$ ±5% 1/2 W	6100-2475	01121	- /V	
417	Composition 1 k $\Omega$ ±10% 2 W	6120-2109	01121		
418	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105	75042	BTS, 10 k $\Omega$ ±5%	5905-683-2238
419	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105	75042	BTS, 10 k $\Omega \pm 5\%$	5905-683-2238
420	Film 21 k $\Omega \pm 1\% 1/2$ W	6450-2210		CEC, 21 k $\Omega \pm 1\%$	5905-581-1526
421	Film 28.7 k $\Omega \pm 1\% 1/4$ W	6350-2287		CEB, 48.7 k $\Omega \pm 1\%$	5905-542-7733
422	Composition 3.9 k $\Omega$ ±5% 1/4 W	6099-2395		BTS, 3.9 k $\Omega$ ±5%	
423	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105		BTS, 10 k $\Omega$ ±5%	5905-683-2238
424	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105		BTS, 10 k $\Omega$ ±5%	5905-683-2238
425	Film 21 k $\Omega' \pm 1\% 1/2$ W	6450-2210		CEC, 21 k $\Omega$ ±1%	5905-581-1526
426	Film 28.7 k $\Omega$ ±1% 1/4 W	6350-2287		CEB, 28.7 k $\Omega \pm 1\%$	5905 <b>-</b> 733-9506
427	Composition 3.9 k $\Omega$ ±5% 1/4 W	6099-2395		BTS, 3.9 k $\Omega$ ±5%	E00E-270-4600
428 429	Composition 2 k $\Omega$ ±5% 1/4 W Composition 5.1 k $\Omega$ ±5% 1/4 W	6099-2205 6099-2515		BTS, 2 k $\Omega$ ±5% BTS 5 1 k $\Omega$ +5%	5905-279-4629 5905-279-4623
ANSIS	Composition 5.1 kΩ ±5% 1/4 W	6099-2515	75042	BTS, 5.1 k $\Omega$ ±5%	3703-277-4023
anjij 01	Type MPF103	8210-1157	04713	MPF-103	
ю1 Ю2	Type 2N4125	8210-1125		2N4125	
403	Type 2N4275	8210-1126		2N4275	
404	Type 2N4275	8210-1126		2N4275	
405	Type 2N4220	8210-1143		2N4220	
406	Type 2N4220	8210-1143		2N4220	
407	Type MPF103	8210-1157		MPF-103	
408	Type 2N4125	8210-1125		2N4125	
409	Type 2N4220	8210-1143		2N4220	
410	Type 2N4220	8210-1143	93916	2N4220	
411	Type MPF103	8210-1157		MPF-103	
	Type 2N4125	8210-1125	93916	2N4125	
12					

### ELECTRICAL PARTS LIST (cont)

.

· · ·

٢D

### SIGNAL INDEX

.

.

• • • • •

.

.

.

.

.

.

.

.

### **DETECTOR-CIRCUIT ETCHED BOARD**

## (Reference Figures 7-7 and 7-8)

.

.

.

.

Signal	Description	Signal Type
ED90 <sup>1</sup>	100 Hz, 90° Phase-Detector-Filter Ground	
ED90	90° Phase Detector Output	dc
GND	Signal Ground	
E90	90° Detector Input	dc and rms
—15 V	Power-Supply Voltage	dc
GND	Signal Ground	
IPR	0° Reference Voltage	rms
+15 V	Power-Supply Voltage	dc
EO	0° Detector Input	dc and rms
GND	Signal Ground	
EDO	0° Phase-Detector Output	dc
EDO <sup>1</sup>	100-Hz, 0° Phase-Detector-Filter Ground	

### 7-8 PARTS LISTS AND DIAGRAMS

.



File Courtesy of GRWiki.org

.



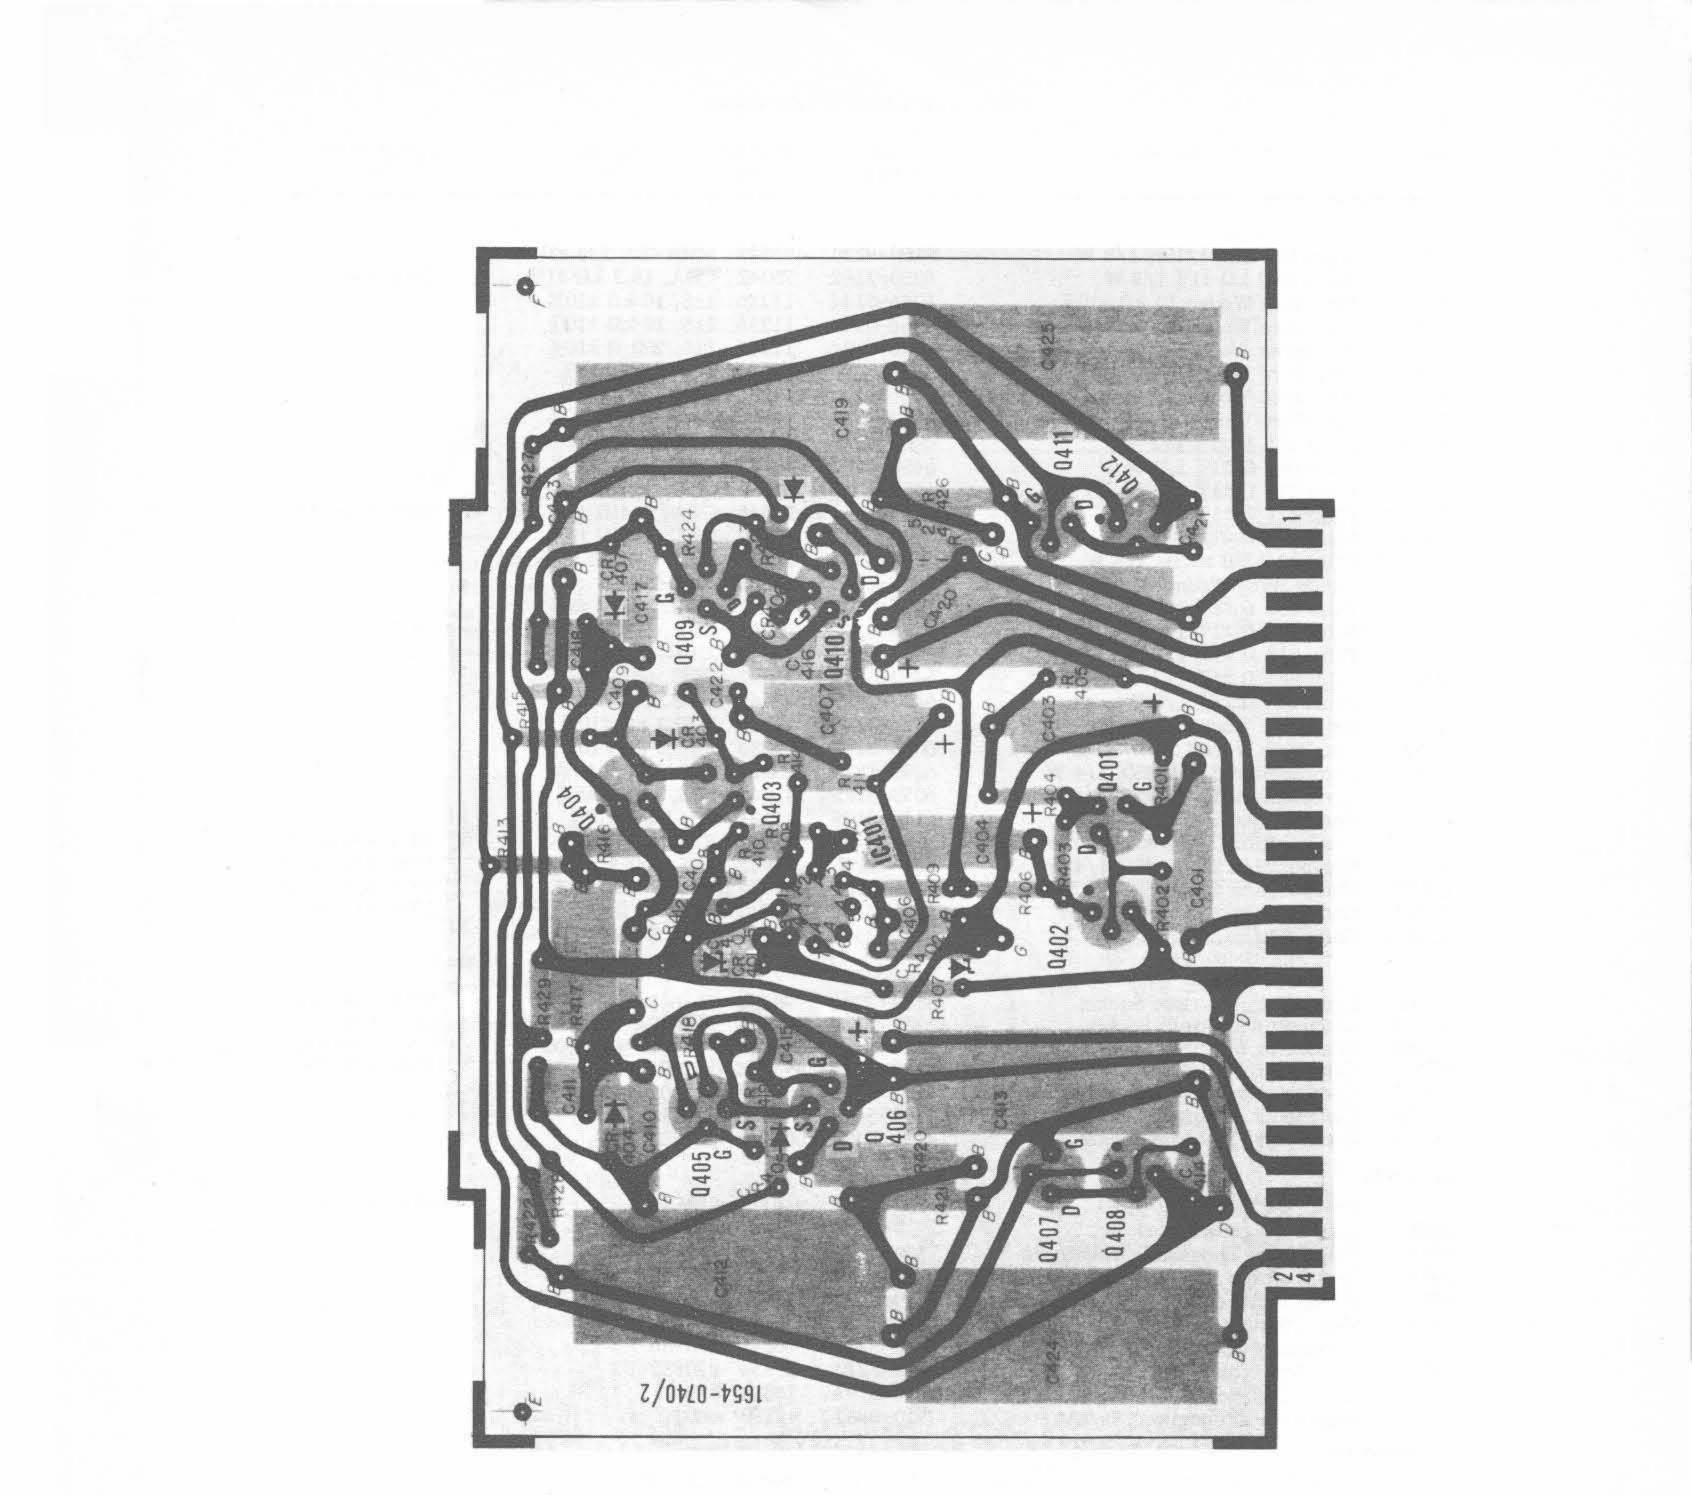


Figure 7-7. Detector-circuit etched-board assembly (P/N 1654-4741).

NOTE: The board is shown foil-side up. The number appearing on the foil side is *not* the part number. The dot on the foil at the transistor socket indicates the collector lead.



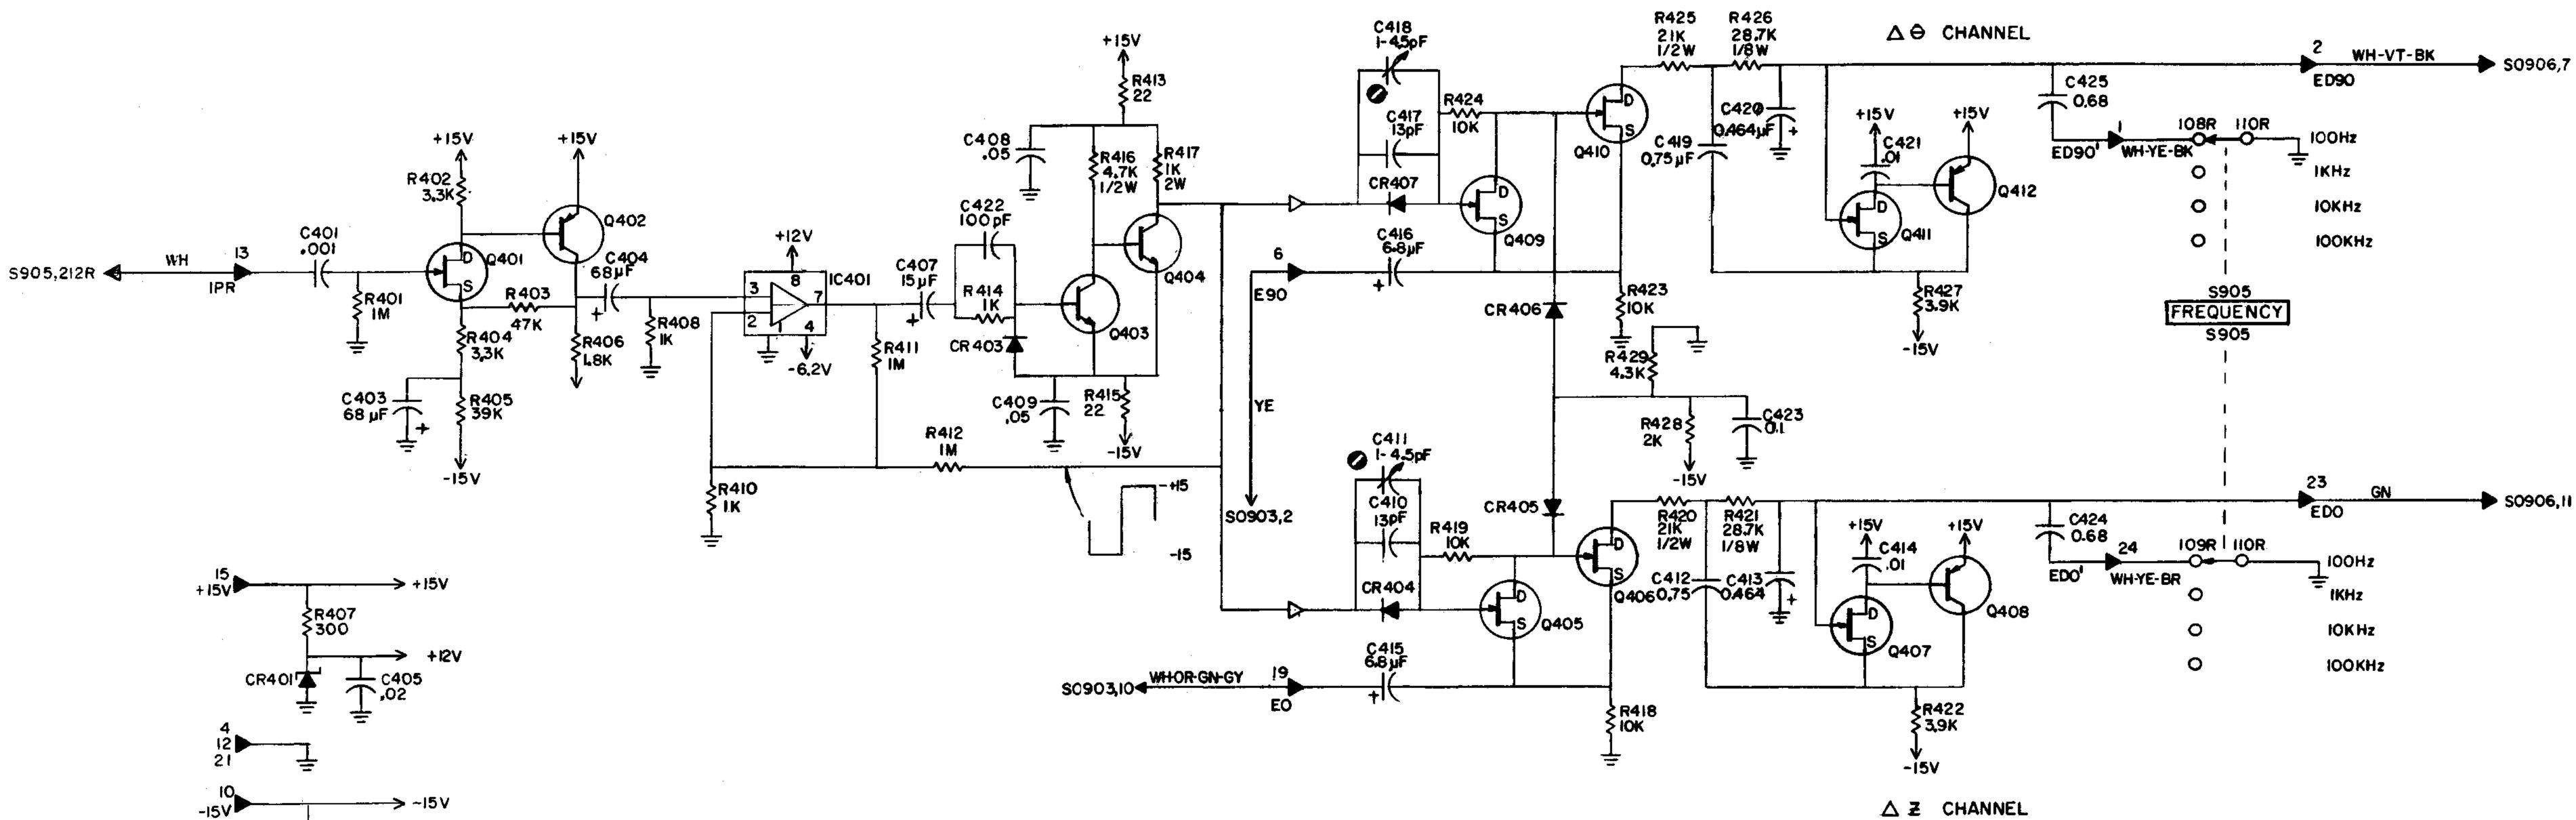

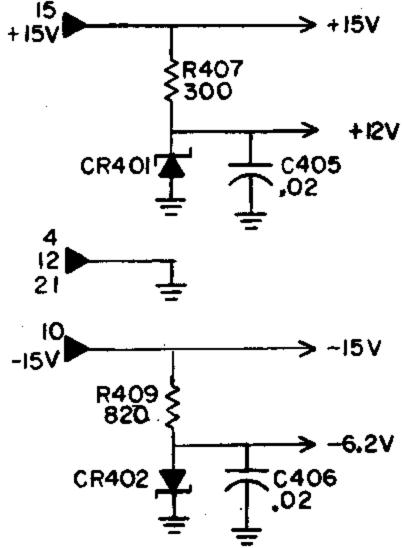



1C 40ì


NOTE UNLESS 1. POSITION OF NOTARY SWITCHES SHOWN COUNTERCLOCHWIGE. 2. CONTACT NUMBERING OF SWITCHES EXPLAINED ON SEPARATE SHEET SUPPLIED IN INSTRUCTION BOOK. 3. REFER TO SERVICE NOTES IN INSTRUC TION BOOK FOR VOLTAGES APPEARING ON DIAGRAM. 4. RESISTORS 1/4 WATT.	<ol> <li>RESISTANCE IN OHMS</li> <li>K - 1000 OHMS M - 1 MEGOHM</li> <li>CAPACITANCE VALUES ONE AND OVER IN PICOFARADS, LESS THAN ONE IN MICROFARADS.</li> <li>KNOB CONTROL</li> </ol>
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

DSG


Q401,407**,**411

Rotary switch sections are shown as viewed from the panel end of the shaft. The first digit of the contact number refers to the section. The section nearest the panel is 1, the next section back is 2, etc. The next two digits refer to the contact. Contact 01 is the first position clockwise from a strut screw (usually the screw above the locating key), and the other contacts are numbered sequentially (02, 03, 04, etc), proceeding clockwise around the section. A suffix F or R indicates that the contact is on the front or rear of the section, respectively.



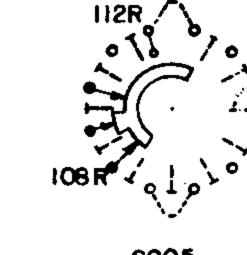


S905

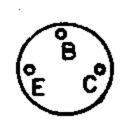


**Q4**03, 404

Q402, 408, 4i2 TRANSISTORS —

E B C

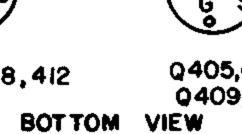

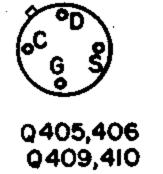

SCHEMATIC DIAGRAM FOR DETECTORS 1654 IMPEDANCE COMPARATOR (1654 - 4741)

Figure 7-8. Detector-circuit schematic diagram.

PARTS LISTS AND DIAGRAMS 7-9

Ref. No.	Description	GR Part No.	Fed. Mf Code	.0	Fed. Stock No.
CAPACII	TORS				
C501	Electrolytic 660 µF +150-10% 25 V	4450-6125	37942	TT, 660 μF	
C502	Electrolytic 660 µF +150-10% 25 V	4450-6125		TT, 660 $\mu$ F	
C503	Ceramic .01 µF +80-20% 500 V	4406-3109		811 .01 μF +80-20%	5910-754-7049
C504	Electrolytic 60 µF +150-10% 25 V	4450-2900			5910-799-9280
C505	Ceramic .01 µF +80-20% 500 V	4406-3109			5910-754-7049
C506	Electrolytic 33 $\mu$ F +20% 10 V	4450-5400	56289	150D336X0010B1	5910-823-1623
C507	Electrolytic 60 µF +150-10% 25 V	4450-2900	56289	D17872	5910-799-9280
C901	Plastic 0.1 µF ±2% 100 V	4860-8251	84411	663 UW, .1 μF ±2% 100 V	
C902	Mica .01 µF ±2% 300 V	4780-0300	88419	CM35E .01 µF ±2%	
2903	Mica .001 $\mu$ F ±2% 300 V	4690-4200	88419		5910-669-3241
C904	Mica .001 µF ±2% 300 V	4690-4200		CM20E, 1000 pF ±2%	5910-669-3241
C905	Plastic .464 µF ±2% 100 V	4860-7990		663 UW, .464 µF ±1% 100	
2906	Mica .003 µF ±2% 500 V	4750-0202		1464, $.003 \ \mu F \pm 2\%$	
C907	Mica 220 pF ±2% 500 V	4690-2700		CM20E221G	5910-931-4153
C908	Plastic 1 $\mu$ F ±10% 200 V	4860-8275	84411		
C909	Mica 300 pF ±5% 300 V	4640-0770		CM15, 300 pF ±5%	
C910	Mica .001 µF ±5% 300 V	4680-3200	18	CM20D1021	5910-636-2134
				j	
		0074 4504	04655	0074 4504	
901	Standard	0874-4504		0874-4504	
902	Unknown	0874-4504		0874-4504	
903	Standard	0874-4504	•	0874-4504	
904	Unknown	0874-4504		0874-4504	
905	Guard	4150-3200		4150-3200	· · ·
	Ground	4150-3200		4150-3200	
	Guard	4150-3200		4150-3200	
908	Start	4260-1030	82389	#TTT	
DIODES					
	Type 1N3253	6081-1001		IN3253	5961-814-4251
	Type 1N3253	6081-1001		IN3253	5961-814-4251
	Type 1N3253	6081-1001	79089	IN3253	5961-814-4251
	Type 1N3253	6081-1001		IN3253	5961-814-4251
	Type 1N4009	6082-1012		IN4009	5961-892-8700
	Type 1N4009	6082-1012	•	IN4009	5961-892-8700
	Type 1N4009	6082-1012		IN4009	5961-892-8700
	Type 1N4009	6082-1012	24446	IN4009	5961-892-8700
	Type 1N4009	6082-1012		IN4009	5961-892-8700
CR514	Type 1N957B	6083-1009	07910	IN957B	
RESISTO					
7501 Lov	w Power Wire Wound 2.7 $\Omega$ ±10% 2 W	6760 <b>-</b> 9279	75042	BWH, 2.7 Ω ±10%	5905-794-3857
R502 Lo	w Power Wire Wound 4.7 $\Omega \pm 10\%$ 2 W	6760-9479	75042	BWH, 4.7 Ω ±10%	5905-101-7586
<b>\50</b> 3	Composition 4.7 k $\Omega$ ±5% 1/4 W	6099-2475	75042	BTS, 4.7 k $\Omega$ ±5%	5905-686-9998
<b>R</b> 504	Composition 10 $\Omega$ ±5% 1/4 W	6099-0105	75042		5905-809-8596
8505 Lo	w Power Wire Wound 2.7 $\Omega$ ±10% 2 W	6760-9279		BWH, 2.7 $\Omega \pm 10\%$	5905-794-3857
	Composition 47 $\Omega$ ±5% 1/4 W	6099-0475		BTS, 47 $\Omega$ ±5%	
1507	Film 5.11 k $\Omega$ ±1% 1/8 W	6250-1511		CEA, 5.11 k $\Omega \pm 1\%$	5905-577-6734
1509	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105	75042	BTS, 10 k $\Omega$ ±5%	5905-683-2238
R510	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105	75042	BTS, 10 k $\Omega \pm 5\%$	5905-683-2238
8511	Composition 4.7 k $\Omega$ ±5% 1/4 W	6099-2475		BTS, 4.7 k $\Omega$ ±5%	5905-686-9998
	w Power Wire Wound 4.7 $\Omega \pm 10\%$ 2 W	6760-9479	75042	,,,	5905-101-3857
R513	Composition 10 $\Omega$ ±5% 1/4 W	6099-0105		BTS, 10 $\Omega$ ±5%	5905-809-8596
8514	Composition 1.2 k $\Omega$ ±5% 1/4 W	6099-2125		BTS, 1.2 k $\Omega$ ±5%	
\$15	Composition 47 $\Omega$ ±5% 1/4 W	6099-0475	75042	BTS, 47 $\Omega$ ±5%	
516	Composition 82 k $\Omega$ ±5% 1/4 W	6099-3825			
1517	Composition 2.7 k $\Omega$ ±5% 1/4 W	6099-2275	75042		
518	Composition 2.7 k $\Omega$ ±5% 1/4 W	6099-2275		BTS, 2.7 k $\Omega$ ±5%	
519	Pot. Wire Wound 1 k $\Omega \pm 10\%$	6056-0138		115, 1 k $\Omega \pm 10\%$	
520	Composition 3.3 k $\Omega$ ±5% 1/4 W	6099-2335		BTS, 3.3 k $\Omega$ ±5%	5905-681-9969
.521	Composition 43 k $\Omega$ ±5% 1/4 W	6099-3435		BTS, 43 k $\Omega$ ±5%	5905-549-9833
522	Film 5.11 k $\Omega \pm 1\% 1/8$ W	6250-1511		CEA, 5.11 k $\Omega \pm 1\%$	5905-549-9833 5905-577-6734
.523	Composition 4.7 k $\Omega$ ±5% 1/4 W	6099-2475		BTS, 4.7 k $\Omega \pm 5\%$	5905-686-9998
	w Power Wire Wound 100 $\Omega \pm 10\%$ 2 W	6760-1109		B15, 4.7 KM $\pm 5\%$ BWH, 100 Ω	5905-817-5635
	Film 2 k $\Omega \pm 1\%$ 1/8 W	6250-1200		CEA, 2 k $\Omega$ ±1%	5905-817-5035
	Pot. Comp. 2.5 k $\Omega$ ±10%	6000-0400		53 MS, 2.5 k $\Omega$ ±10%	5905-776-0400
902				MEA-T2, 3.24 k $\Omega \pm 10\%$	
			7.7042	NIDA 12, 0.24 KM170	
.903	Film $3.24 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$	6190 - 4050		MEA_TO 10 / 1-O ± 107	
.903 .904	Film $3.2\hat{4} \ k\Omega \ \pm 1/10\% \ \hat{1/8} \ W$ Film $12.4 \ k\Omega \ \pm 1/10\% \ 1/8 \ W$	6190-6950	75042	MEA-T2, 12.4 k $\Omega \pm .1\%$	
.903 .904 .905	Film $3.24 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $12.4 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $41.2 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$	6190-6950 6190-7750	75042 75042	MEA-T2, 41.2 k $\Omega \pm .1\%$	
903 904 905 906	Film $3.24 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $12.4 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $41.2 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $133 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$	6190-6950 6190-7750 6190-9230	75042 75042 75042	MEA-T2, 41.2 kΩ ±.1% MEA-T2, 133 kΩ ±.1%	
903 904 905 906 907	Film $3.24 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $12.4 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $41.2 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $133 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $18.2 \text{ k}\Omega \pm 1\% 1/8 \text{ W}$	6190-6950 6190-7750 6190-9230 6250-2182	75042 75042 75042 75042	MEA-T2, 41.2 kΩ ±.1% MEA-T2, 133 kΩ ±.1% CEA, 18.2 kΩ ±1%	5905-686-3373
.903 .904 .905 .906 .907 .908	Film 3.24 k $\Omega$ ±1/10% 1/8 W Film 12.4 k $\Omega$ ±1/10% 1/8 W Film 41.2 k $\Omega$ ±1/10% 1/8 W Film 133 k $\Omega$ ±1/10% 1/8 W Film 18.2 k $\Omega$ ±1% 1/8 W Film 3.24 k $\Omega$ ±1/10% 1/8 W	6190-6950 6190-7750 6190-9230 6250-2182 6190-4050	75042 75042 75042 75042 75042	MEA-T2, 41.2 k $\Omega \pm .1\%$ MEA-T2, 133 k $\Omega \pm .1\%$ CEA, 18.2 k $\Omega \pm 1\%$ MEA-T2, 3.24 k $\Omega \pm .1\%$	5905-686-3373
1903 1904 1905 1906 1907 1908 1908	Film $3.24 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $12.4 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $41.2 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $133 \text{ k}\Omega \pm 1/10\% 1/8 \text{ W}$ Film $18.2 \text{ k}\Omega \pm 1\% 1/8 \text{ W}$	6190-6950 6190-7750 6190-9230 6250-2182	75042 75042 75042 75042 75042 75042	MEA-T2, 41.2 kΩ ±.1% MEA-T2, 133 kΩ ±.1% CEA, 18.2 kΩ ±1%	5905-686-3373

### ELECTRICAL PARTS LIST

.

.

۰.

. ۰ ۰

. .



File Courtesy of GRWiki.org

Ref. No.	Description	GR Part No.	Fed. Mf Code		Fed. Stock No.
D011	$T_{1}^{2} = 122 + 0 + 1/1007 + 1003$	6100-0000	75040	MEA = 0.199 + 0.107	
R911	Film 133 k $\Omega$ ±1/10% 1/8 W	6190-9230		MEA-T2, 133 k $\Omega$ ±.1%	E00E-696-2272
R912	Film 18.2 k $\Omega \pm 1\% 1/8$ W	6250-2182		CEA, 18.2 k $\Omega \pm 1\%$	5905-686-3373
R913	Pot. Wire Wound 10 k $\Omega$ ±10%	6056-0144		115, 10 k $\Omega$ ±10%	
R914	Pot. Wire Wound 10 k $\Omega \pm 10\%$	6056-0144		115, 10 k $\Omega$ ±10%	
R915	Pot. Wire Wound 200 $\Omega \pm 10\%$	6056-0134		115, 200 $\Omega \pm 10\%$	
R916	Pot. Wire Wound 2 k $\Omega$ ±10%	6056-0140		115, 2 k $\Omega$ ±10%	
R917	Pot. Wire Wound 2 k $\Omega$ ±10%	6056-0140		115, 2 k $\Omega$ ±10%	
R918	Pot. Wire Wound 200 $\Omega \pm 10\%$	6056-0134		115, 200 $\Omega \pm 10\%$ CEC, 215 $\Omega \pm 1\%$	
R919 R920	Film 215 $\Omega \pm 1\% 1/2$ W	6450-0215			
R920	Film 681 Ω ±1% 1/2 W Film 215 Ω ±1% 1/2 W	6450-0681 6450-0215		CEC, 681 $\Omega \pm 1\%$	
R921	Film 215 $\Omega \pm 1\%$ 1/2 W Film 124 $\Omega \pm 1\%$ 1/8 W	6250-0213		CEC, 215 Ω ±1% CEA, 124 Ω ±1%	5905-815-4136
R923	Film 124 $\Omega \pm 1/6$ W Film 105 $\Omega \pm 1\%$ 1/2 W	6450-0124		CEA, 124 $\Omega \pm 1\%$ CEC, 105 $\Omega \pm 1\%$	5705-015-4150
R923 R924	Film 10.5 & $\pm 1/2$ W Film 12.4 k $\Omega \pm 0.1\%$ 1/8 W	6190-6950		MEA-T2, 12.4 k $\Omega$ ±.1%	
	ecision Wire Wound 62.31 $\Omega \pm 0.1\%$ 1/			6981-2004	
R926	Film 105 $\Omega \pm 1\% 1/2$ W	6450-0105		CEC, 105 $\Omega \pm 1\%$	
R927	Film 124 $\Omega \pm 1\% 1/2$ W	6250-0124		CEA, 124 $\Omega \pm 1\%$	5905-815-4136
R928	Film 215 $\Omega \pm 1\% 1/2$ W	6450-0215		CEC, 215 $\Omega \pm 1\%$	0,00 010 4100
R929	Film 681 $\Omega \pm 1\% 1/2$ W	6450-0681		CEC, 681 $\Omega \pm 1\%$	
R930	Film 215 $\Omega \pm 1\% 1/2$ W	6450-0215		CEC, 215 $\Omega \pm 1\%$	
R931	Pot. Wire Wound 2 k $\Omega$ ±10%	6056-0140		115, 2 k $\Omega$ ±10%	
R932	Pot. Wire Wound 2 k $\Omega$ ±10%	6056-0140		115, 2 k $\Omega$ ±10%	
R933	Composition 820 $\Omega \pm 5\% 1/4$ W	6099-1825		BTS, 820 $\Omega \pm 5\%$	
R934	Composition 12 k $\Omega$ ±5% 1/4 W	6099-3125		BTS, 12 k $\Omega$ ±5%	
R935	Composition 1 k $\Omega$ ±10% 1 W	6110-2109		GB, 1 k $\Omega$ ±10%	
R936	Composition 200 $\Omega \pm 5\% 1/4$ W	6099-1205		BTS, 200 $\Omega \pm 5\%$	5905-892-0107
R937	Composition 200 $\Omega \pm 5\% 1/4$ W	6099-1205		BTS, 200 $\Omega \pm 5\%$	5905-892-0107
R938*	Composition 1 k $\Omega$ ±5% 1/4 W	6099-2105	75042	BTS, 1 k $\Omega$ ±5%	5905-681-6462
<b>R939*</b>	Composition 1 k $\Omega$ ±5% 1/4 W	6099-2105	75042	BTS, 1 k $\Omega$ ±5%	5905-681-6462
<b>\$94</b> 0	Composition 3.9 k ±5% 1/4 W	6099-2395	75042	BTS, 3.9 k ±5%	
0001	Connector Multiple Coelect	4000 0704	05054	01 (004 1001 00	F005 (00 0005
50901 50903	Connector, Multiple Socket Connector, Multiple Socket	4230-2724 4230-2724		91-6024-1201-00 91-6024-1201-00	5935-688-9925 5935-688-9925
SO904	Connector, Multiple Socket	4230-2724		91-6024-1201-00	5935-688-9925
SO906	Connector, Multiple Socket	4230-2724		91-6024-1201-00	5935-688-9925
50907	Connector, Multiple Socket	4230-2724		91-6024-1201-00	3733 000 7723
50909	Connector, Multiple Socket	4230-5406		126-198	
50910	Connector, Multiple Socket	4230-5405		126-218	
WITCHES					
501	Power OFF, Toggle	7910-1300		83053-SA	5930-909-3510
502	Line Voltage Selector	7910-0831		4603	
901	Full Scale, Thousands/Hundreds	7890-5200		270954-F2	
902	Test Voltage	7890-5210		270955-F5	
903	Full Scale, Tenths	7890-5200		270954-F2	
904	Measurement Selector	7890-5220		270953-F1C	
905	Frequency Selector	7890-5230		270956-F5	
906	Input Selector	7890-5240		270952-F2	
907	Start, Ext./Self	7910-0774		#78 4 ( 0 0	
908	Magnitude Linearizer, In/Out	7910-0831	42190	4603	
' <b>RANSIS</b> ' 2501	Type 2N3740	8210-1121	93916	2N3740	
Q502	Type 2N3906	8210-1112		2N3906	
2502 2503	Type 2N3414	8210-1047		2N3416	5961-989-2749
2504	Type 2N3414	8210-1047		2N3416	5961-989-2749
2505	Type 40250	8210-1095		40250	
2506	Type 2N3900	8210-1118		2N3900	
2507	Type 2N3638	8210-1096		2N3638	5961-912-9008
508	Type 2N3905	8210-1114		2N3905	
	ANEOUS				
F501	Slo-Blo	5330-0500		MDL, 0.15 Amp	
F502	Slo-Blo	5330-0400	71400	MDL, .1 Amp	5920-356-2185
P501	Pilot Light	5600-0316	71744	#345	
P901	Pilot Light	5600-0316	71744	#345	
	-	5730-1414	91929	ME-6	
M901		5730-1415		ME-6	
M901 M902					
<b>M902</b>	Power	0345-4026	24655	0345-4026	
И902 Г501	Power Power			0345-4026 0745-4470	
		0345-4026	24655		5935-816-0254

### ELECTRICAL PARTS LIST (cont)

\*FACTORY ADJUSTED

### 7-10 PARTS LISTS AND DIAGRAMS


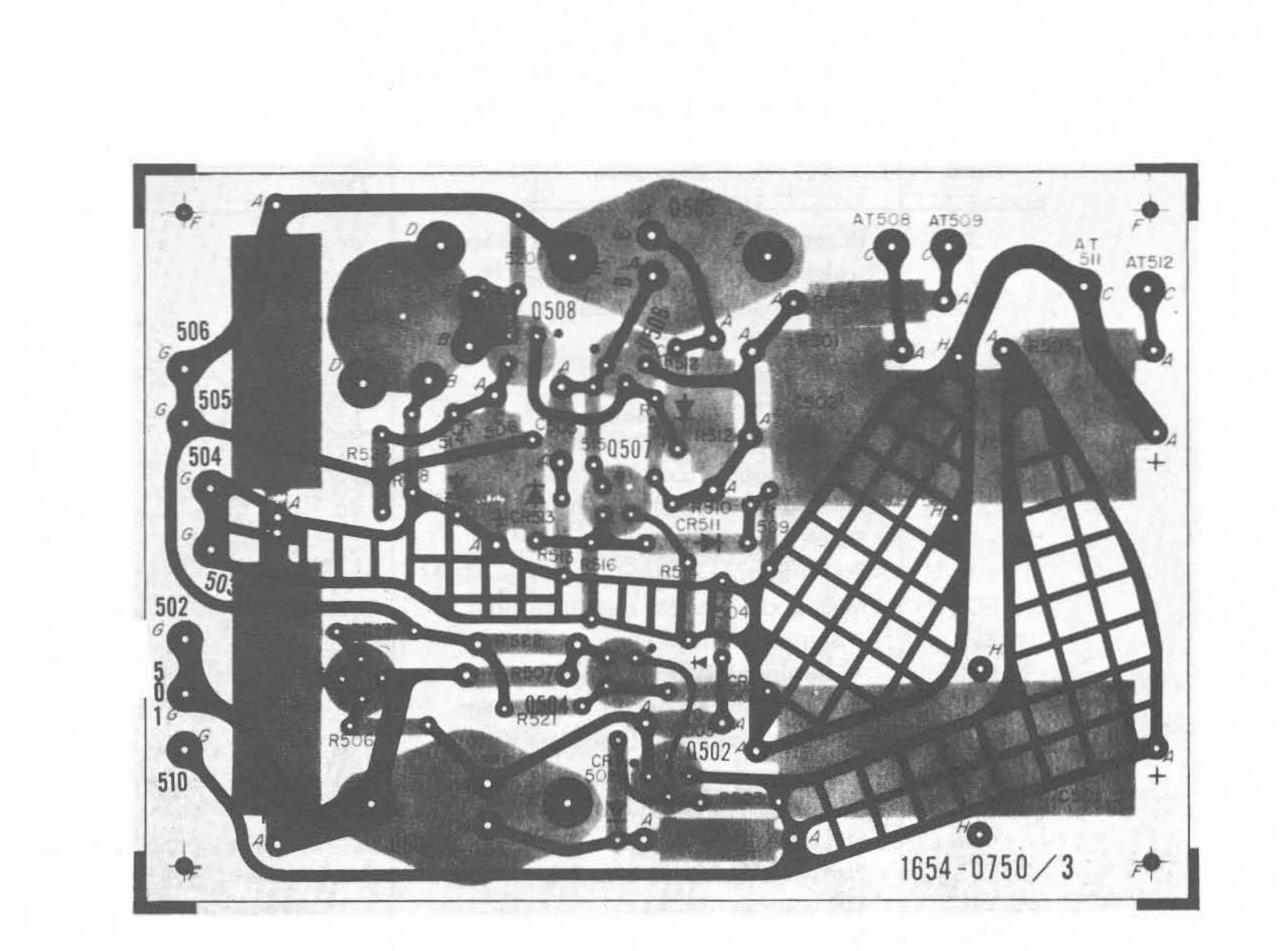


Figure 7-9. Power-supply etched-board assembly (P/N 1654-2751).

NOTE: The board is shown foil-side up. The number appearing on the foil side is *not* the part number. The dot on the foil at the transistor socket indicates the collector lead.



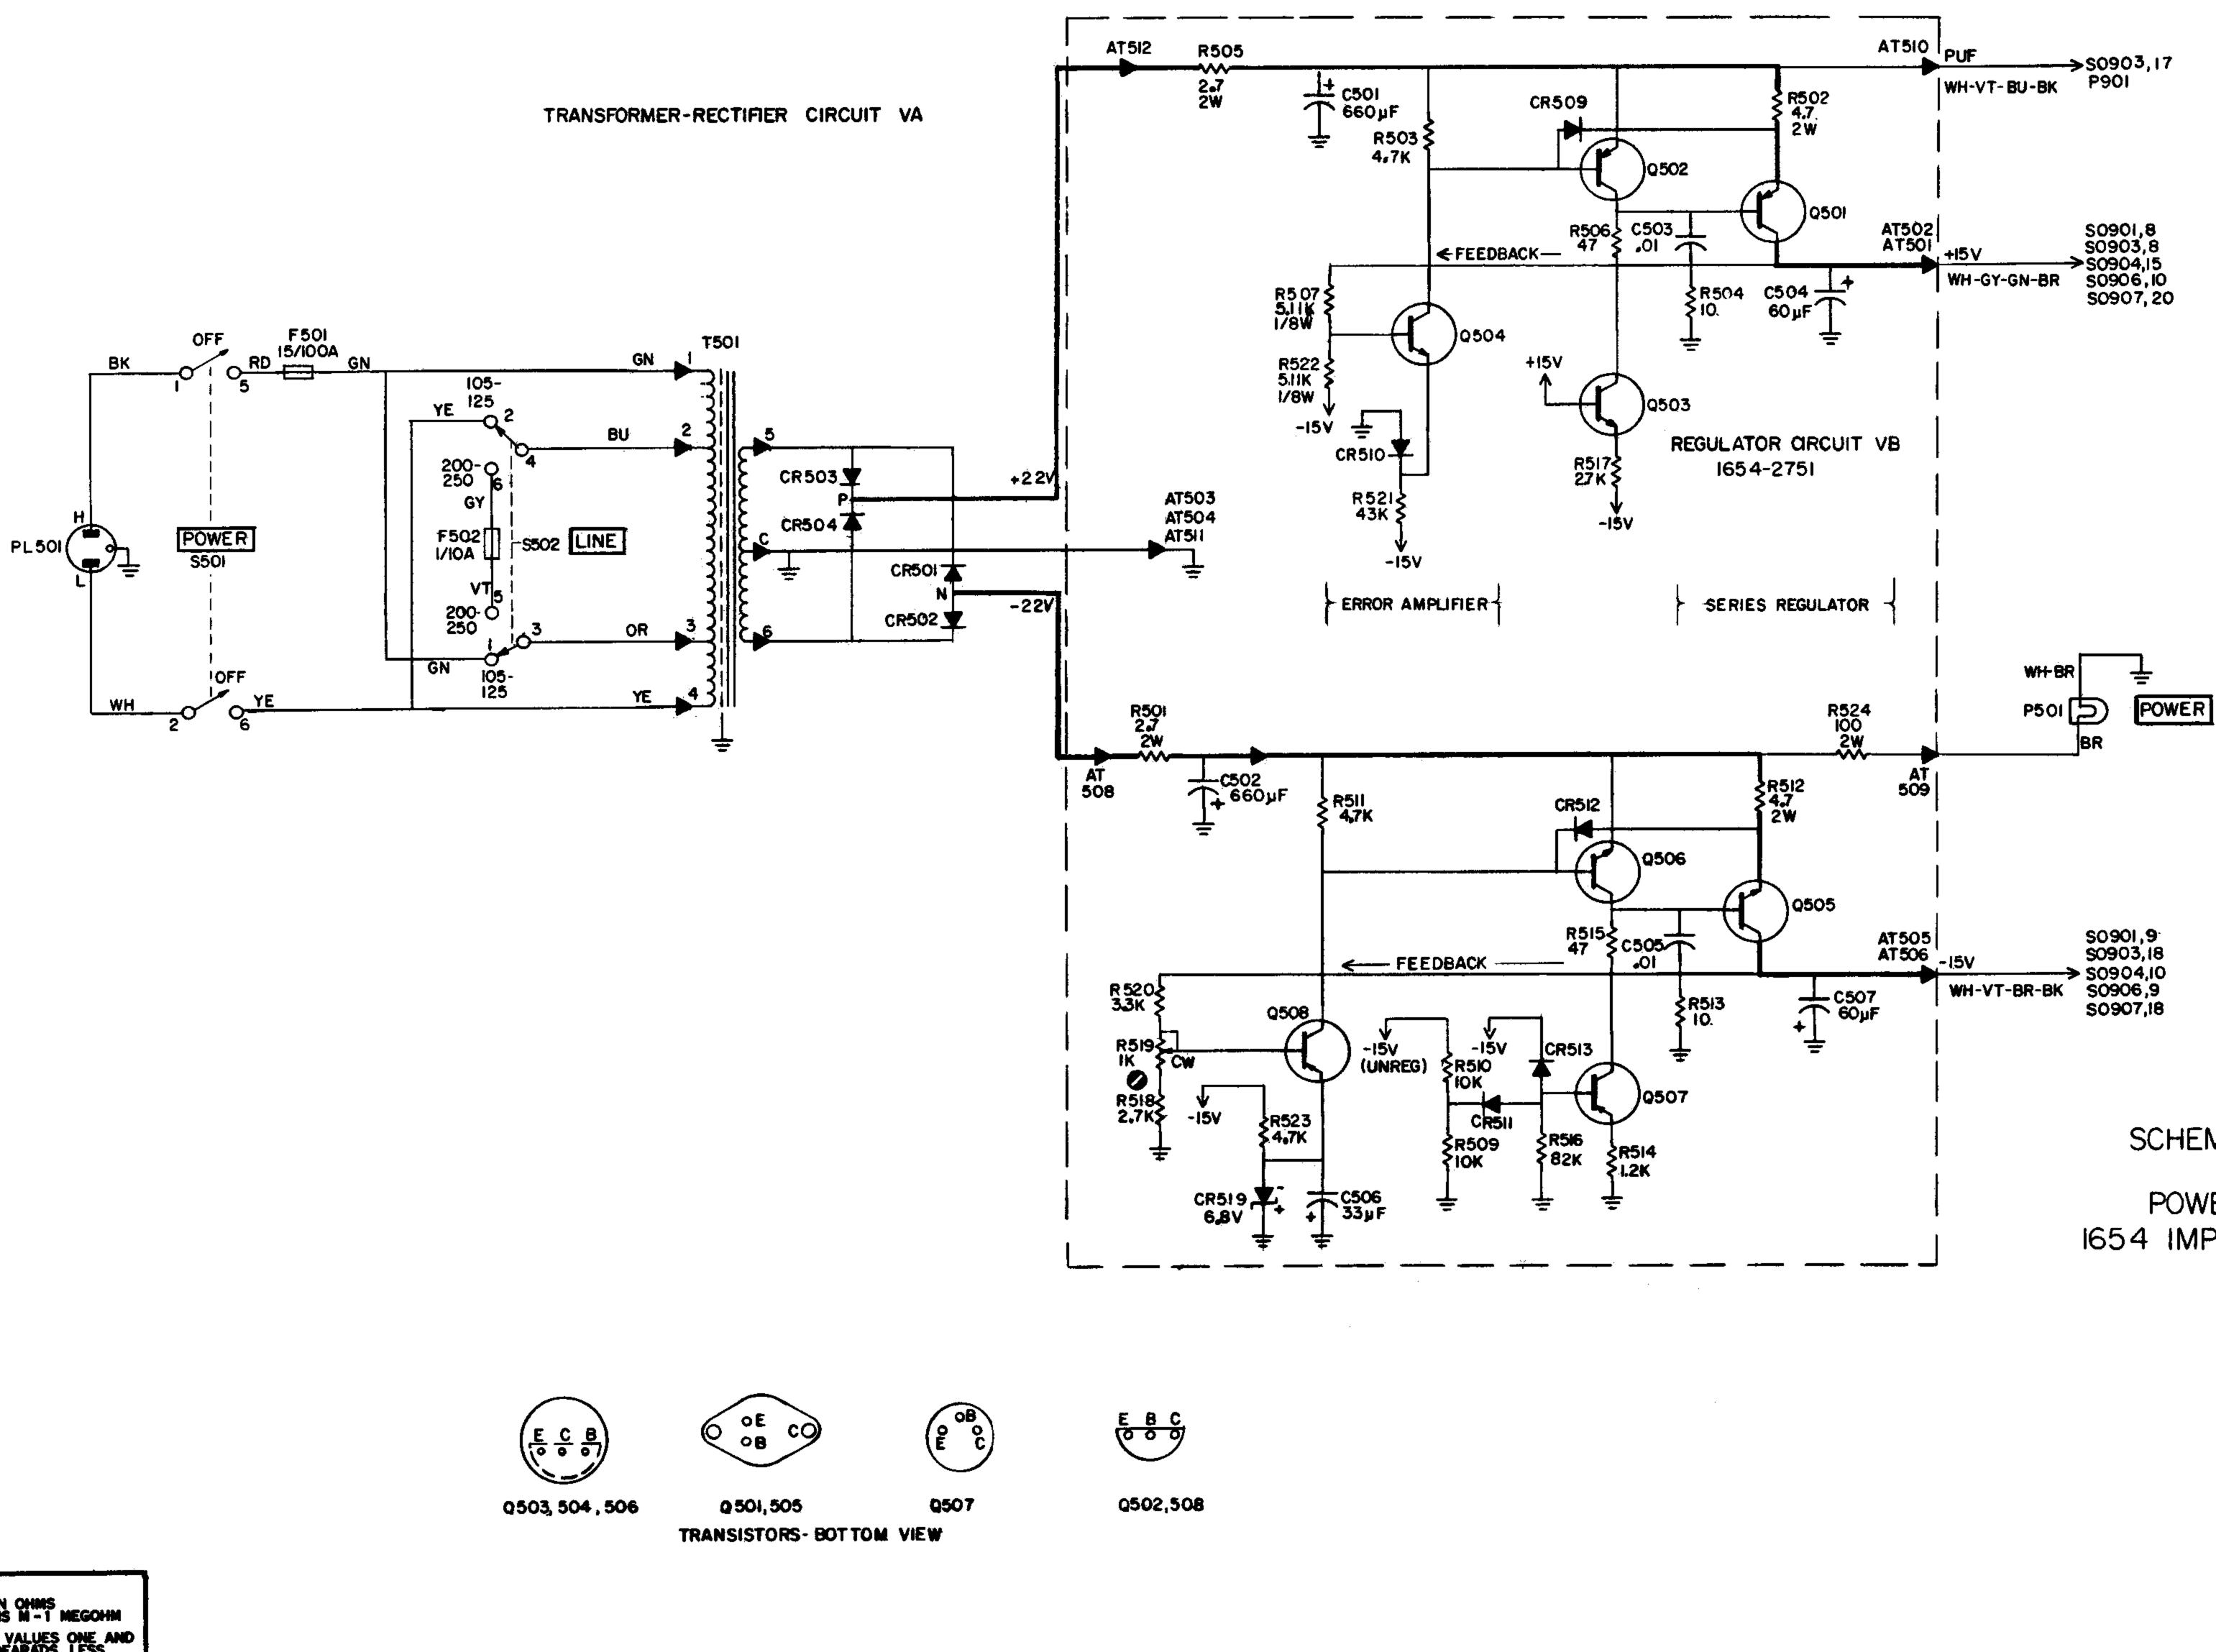

NOTE UNLESS	SPECIFIED
T. PODITION OF RETAIN SWITCHES	5. RESISTANCE IN OHMS K-1000 OHMS M-1 MEGOHM 5. CARACITANCE VALUES ONE AND
2. CONTACT NUMBERING OF SWITCHES EXPLAINED ON SEPARATE SHEET SUPPLIED IN INSTRUCTION BOOK.	6. CAPACITANCE VALUES ONE AND OVER IN PICOFARADS, LESS THAN ONE IN MICROFARADS. 7. () KNOB CONTROL
3. REFER TO SERVICE NOTES IN INSTRUC- TION BOOK FOR VOLTAGES	8. SCREWDRIVER CONTROL
APPEARING ON DIAGRAM. 4. RESISTORS 1/4 WATT.	9. AT - ANCHOR TERMINAL 10. TP - TEST POINT



File Courtesy of GRWiki.org

Figure 7-10. Power-supply schematic diagram.

PARTS LISTS AND DIAGRAMS 7-11

## SCHEMATIC DIAGRAM FOR POWER SUPPLY **1654 IMPEDANCE COMPARATOR**

Ref. No.	Description	GR Part No.	Fed. Mf Code	g. Mfg. Part No.	Fed. Stock No.
CAPACI	rors				
C601	Plastic 0.1 µF ±10% 100 V	4860-8250	84411	663 UW, .1 μF ±10%	
C602	Ceramic .01 µF +80-20% 500 V	4406-3109		811, .01 μF +80-20%	5910-754-7049
C603	Ceramic .001 µF +80-20% 500 V	4404-2109		831, $.001 \mu F + 80 - 20\%$	5910-983-9994
C605	Plastic 0.1 µF ±10% 100 V	4860-8250	84411	663 UW, .1 μF ±10%	
C606	Ceramic .01 µF +80-20% 500 V	4406-3109		811, .01 $\mu$ F +80-20 $\%$	5910-754-7049
C607	Ceramic .001 µF +80-20% 500 V	4404-2109		831, .001 μF +80-20%	5910-983-9994
DIODES					
CR601	Type 1N459A	6082-1011	07910	IN459A	5961-815-8451
CR602	Type 1N459A	6082-1011	07910	IN459A	5961-815-8451
CR603	Type 1N459A	6082-1011	07910	IN459A	5961-815-8451
CR604	Type 1N459A	6082-1011	07910	IN459A	5961-815-8451
CR605	Type 1N459A	6082-1011	07910	IN459A	5961-815-8451
CR606	Type 1N4009	6082-1012		IN4009	5961-892-8700
CR607	Type 1N4009	6082-1012		IN4009	5961-892-8700
CR608	Type 1N4009	6082-1012		IN4009	5961-892-8700
CR609	Type 1N4009	6082-1012		IN4009	5961-892-8700
CR610	Type 1N4009	6082-1012	24446	IN4009	5961-892-8700
INTEGRA	TED CIRCUITS				
IC601	Linear	5432-7091	07263	UA-709C	
IC602	Linear	5432-70.91		UA-709C	

.

### ELECTRICAL PARTS LIST

### RESISTORS

.

<b>KESISIO</b>					
R601	Mica 1.5 k $\Omega$ ±10%	6740-1603	02606	JB31J7	
R602	Composition 20 k $\Omega$ ±5% 1/4 W	6099-3205	75042	BTS, 20 k $\Omega$ ±5%	5905-686-3368
R603	Composition 20 k $\Omega$ ±5% 1/4 W	6099-3205	75042	BTS, 20 k $\Omega \pm 5\%$	5905-686-3368
R604*	Composition 1.5 m $\Omega$ ±5% 1/2 W	6100-5155	01121	RC20GF155J	5905-279-1754
R605	Film 49.9 Ω ±1% 1/8 W	6250-9499	75042	CEA, 49.9 Ω ±1%	5905-800-7815
R606*	Composition 820 k $\Omega$ ±5% 1/4 W	6099-4825	75042	BTS, 820 k $\Omega \pm 5\%$	
R607	Film 698 $\Omega$ ±1% 1/8 W	6250-0698	75042	CEA, 698 $\Omega \pm 1\%$	5905-824-8535
<b>R608</b>	Composition 390 k $\Omega$ ±5% 1/4 W	6099-4395	75042	BTS, 390 k $\Omega \pm 5\%$	
R609	Film 10 k $\Omega$ ±1% 1/8 W	6250-2100	75042	CEA, 10 k $\Omega$ ±1%	5905-883-4847
R610	Composition 4.3 m $\Omega$ ±5% 1/4 W	6099-5435	75042	BTS, 4.3 m $\Omega$ ±5%	
R611	Composition 2.7 k $\Omega$ ±5% 1/4 W	6099-2275	75042	BTS, 2.7 k $\Omega$ ±5%	
R612	Composition 4.7 k $\Omega \pm 5\%$ 1/4 W	6099-2475	75042	BTS, 4.7 kΩ ±5%	5905-686-9998
R613	Film 49.9 $\Omega \pm 1\% 1/8$ W	6250-9499	75042	CEA, 49.9 $\Omega \pm 1\%$	5905-800-7815
R614	Film 37.4 Ω ±1% 1/8 W	6250-9374	75042	CEA, 37.4 Ω ±1%	5905-878-2676
R615*	Composition 10 k $\Omega$ ±5% 1/4 W	6099-3105	75042	BTS, 10 k $\Omega$ ±5%	5905-683-2238
R616	Film 6.49 kΩ ±1% 1/8 W	6250-1649	75042	CEA, 6.49 kΩ ±1%	5905-833-8744
R617	Film 60.4 kΩ ±1% 1/8 W	6250-2604	75042	CEA, 60.4 k $\Omega$ ±1%	5905-755-0675
R618	Film 1 kΩ ±.1% 1/8 W	6190-2330	75042	MEA-T2, 1 k $\Omega$ ±.1%	
R619	Composition 1.5 k $\Omega$ ±10% 1/4 W	6099-2159	75042	BTS, 1.5 k $\Omega$ ±10%	
R620	Composition 20 kΩ ±5% 1/4 W	6099-3205	75042	BTS, 20 k $\Omega$ ±5%	5905-686-3368
R621	Composition 20 k $\Omega$ ±5% 1/4 W	6099-3205	75042	BTS, 20 k $\Omega$ ±5%	5905-686-3368
R622	Composition 270 Ω ±10% 1 W	6110 <b>-</b> 1279	01121	GB,270 Ω ±10%	
R623	Composition 270 $\Omega$ ±10% 1 W	6110-1279	01121	GB, 270 $\Omega$ ±10%	
R624	Composition 2.2 k $\Omega$ ±10% 1/4 W	6099-2229	75042	BTS, 2.2 k $\Omega \pm 10\%$	
R625	Film 6.81 kΩ ±.1% 1/8 W	6190-5120	75042	MEA-T2, 6.81 kΩ ±.1%	
R626	Film 3.16 k $\Omega$ ±.1% 1/8 W	6190-4000		MEA-T2, 3.16 k $\Omega$ ±.1%	
R628	Composition 4.3 m $\Omega$ ±5% 1/4 W	6099-5435	75042	BTS, 4.3 m $\Omega$ ±5%	
R629	Film 60.4 k $\Omega \pm 1\%$ 1/8 W	6250-2604	75042	CEA, 60.4 k $\Omega$ ±1%	5905-755-0675
R630	Film 1 k $\Omega$ ±.1% 1/8 W	6190-2330		MEA-T2, 1 k $\Omega$ ±.1%	
R631	Composition 1.5 k $\Omega$ ±10% 1/4 W	6099-2159	75042	BTS, 1.5 k $\Omega \pm 10\%$	
R632	Composition 20 k $\Omega$ ±5% 1/4 W	6099-3205	75042	BTS, 20 k $\Omega$ ±5%	5905-686-3368
R633	Composition 20 k $\Omega$ ±5% 1/4 W	6099-3205	75042	BTS, 20 k $\Omega$ ±5%	5905-686-3368
R634	Composition 270 $\Omega \pm 10\% 1$ W	6110-1279	01121	GB, 270 Ω ±10%	
R635	Composition 270 $\Omega \pm 10\% 1$ W			GB, 270 Ω ±10%	
D636	Composition 2.2 kO $\pm 1007$ 1/4 W	<u> </u>	ファロ オク	DTC 1 1 LO +1007	

R636	Composition 2.2 kΩ ±10% 1/4 W	6099-2229	BTS, 2.2 kΩ ±10%
R637	Film 6.81 kΩ ±.1% 1/8 W	6190-5120	MEA-T2, 6.81 ±.1%
R638	Film 3.16 k $\Omega$ ±.1% 1/8 W	6190-3120	MEA-T2, 3.16 k $\Omega \pm .1\%$

Q601	Type 2N3414	8210-1047	24446 2N3416	5961-989-2749
Q602	Type 2N4125	8210-1125	93916 2N4125	
Q603	Type 2N3414	8210-1047	24446 2N3416	5961-989-2749
Q604	Type 2N4125	8210-1125	93916 2N4125	

\*SELECTED BY LAB.

.



## SIGNAL INDEX DC AMPLIFIER ETCHED BOARD (Reference Figures 7-11 and 7-12)

.

Signal	Description	Signał Type
PO2	Phase-Channel Analog Output (3-V full scale)	dc
PO1	Phase-Channel Analog Output (10-V full scale)	dc
POU GND	Phase-Angle-Difference Output Signal Ground	dc
PIA	Phase-Channel, Inverting Feedback Signal	dc
ZEO	Phase-Channel, Zeroing Voltage	dc
ED90	Phase-Channel, Detected Input	dc
—15 V	Power-Supply Voltage	
+ 15 V	Power-Supply Voltage	
EDO	Magnitude-Channel, Detected Input	dc
ZEP	+ Zeroing Voltage	dc
ZEM	<ul> <li>Zeroing Voltage</li> </ul>	dc
ZEZ	Magnitude-Channel, Zeroing Voltage	dc
LL1	Negative Magnitude Linearizer (0.3-V test voltage)	dc
LH2	Positive Magnitude Linearizer (0.3-V test voltage)	dc
LL2	Negative Magnitude Linearizer (0.3 V test voltage)	dc
MIA	Magnitude-Channel, Inverting Feedback Signal	dc
LH1	Positive Magnitude Linearizer (0.3-V and 1-V test voltage)	dc
GND	Signal Ground	
MOU	Magnitude-Difference Output	dc
MO1	Magnitude-Channel Analog Output (10-V full scale)	dc
MO2	Magnitude-Channel Analog Output (3-V full scale)	dc

### 7-12 PARTS LISTS AND DIAGRAMS



File Courtesy of GRWiki.org

.

.

.

.


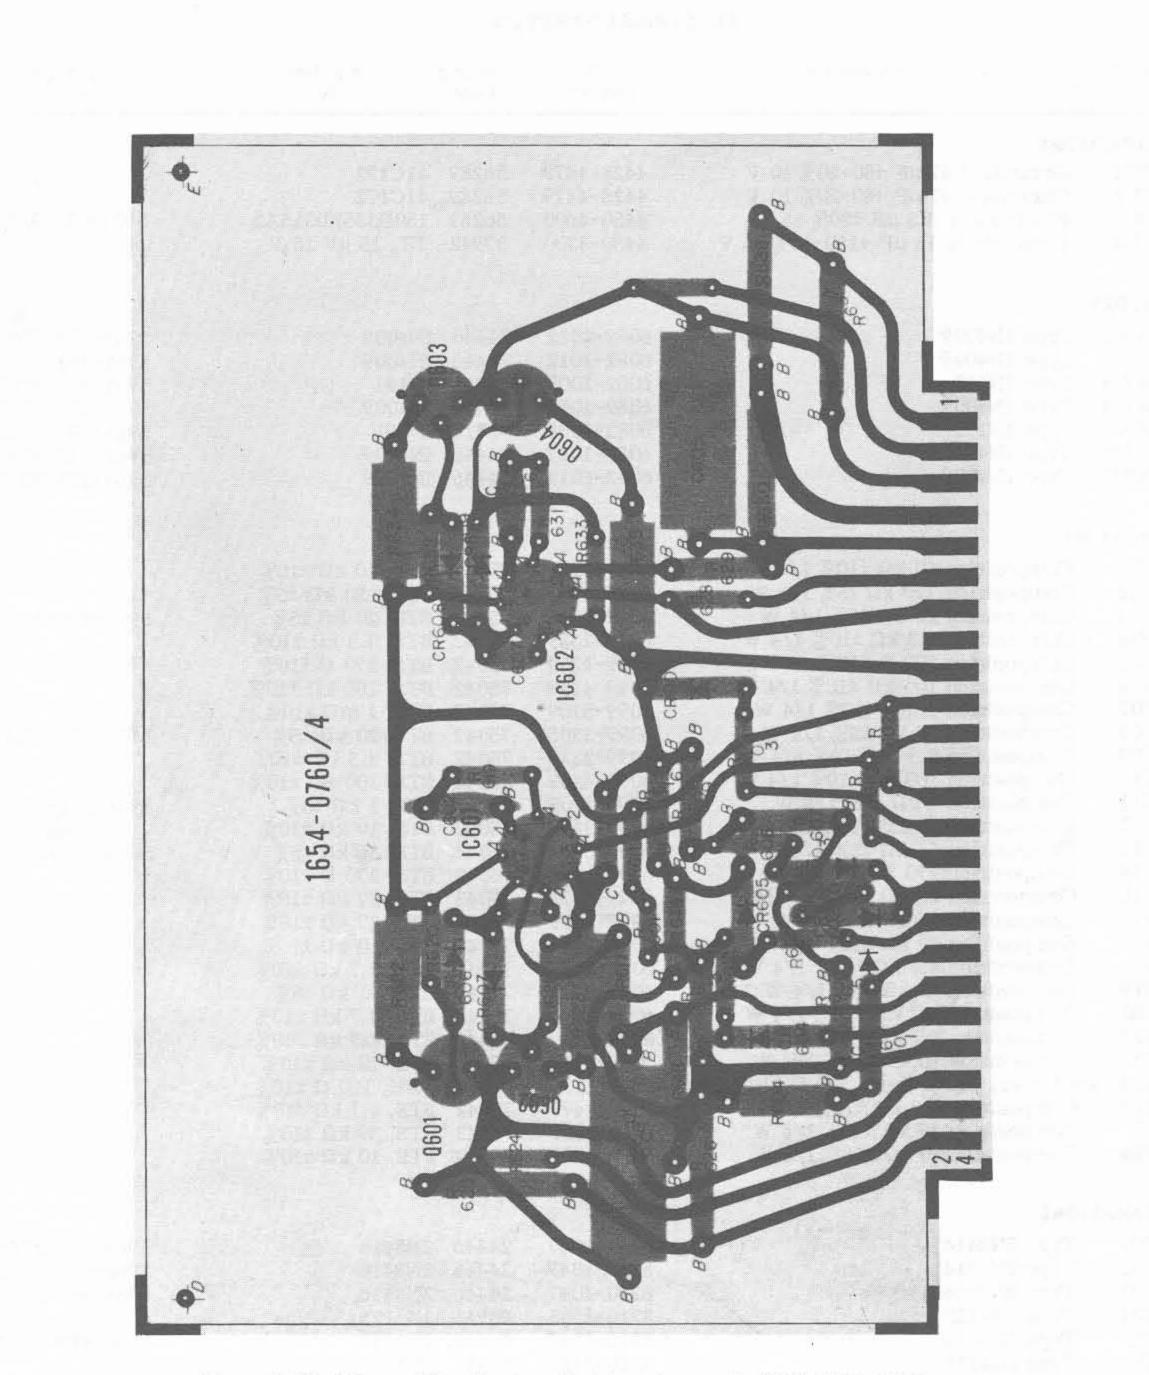


Figure 7-11. DC amplifier circuit etched-board assembly (P/N 1654-4761).

NOTE: The board is shown foil-side up. The number appearing on the foil side is *not* the part number. The dot on the foil at the transistor socket indicates the collector lead.



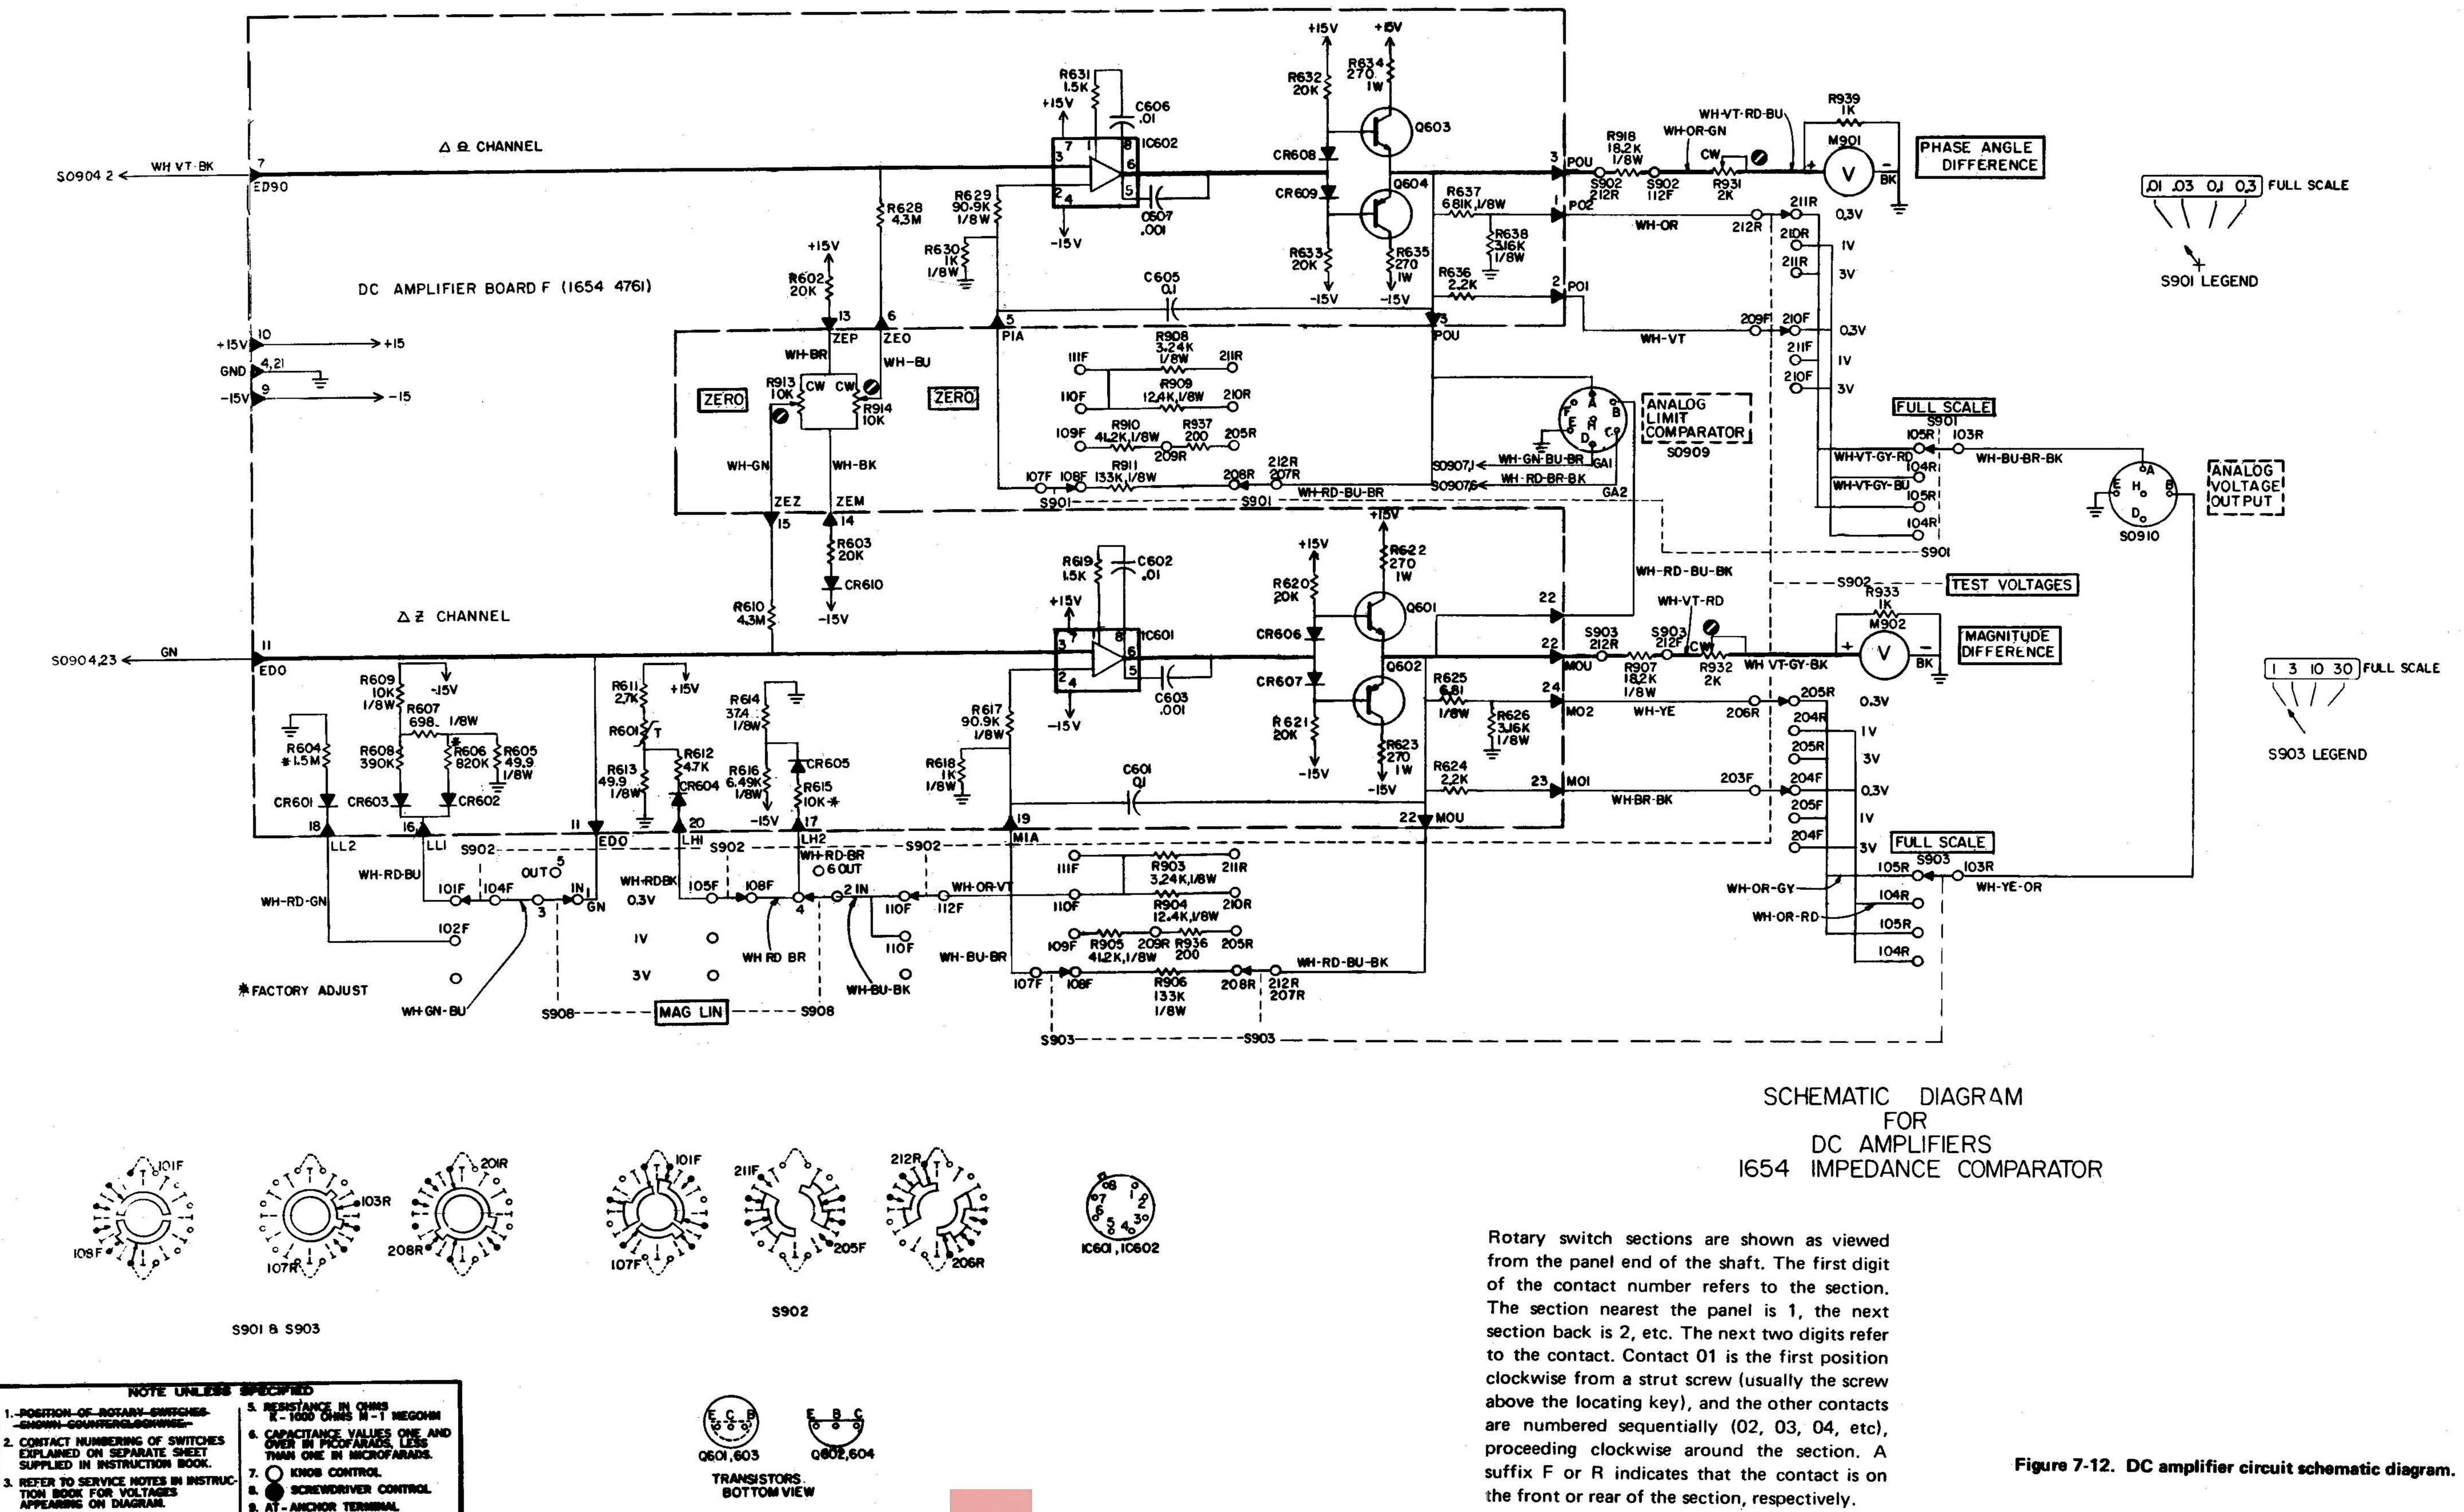

4. RESISTORS 1/2 WATT.

9. AT-ANCHOR TERMINAL 10. TP - TEST POINT



the front or rear of the section, respectively.

PARTS LISTS AND DIAGRAMS 7-13

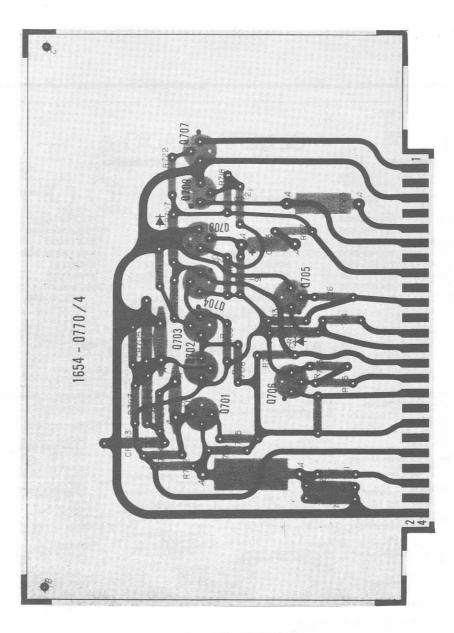



Figure 7-13. Start-circuit etched-board assembly (P/N 1654-4771).

NOTE: The board is shown foil-side up. The number appearing on the foil side is *not* the part number. The dot on the foil at the transistor socket indicates the collector lead.

## **SIGNAL INDEX** START-CIRCUIT ETCHED BOARD (Reference Figures 7-13 and 7-14)

Signal	Description	Signal Type
GA1	Off-Scale, Relay-Driver Output	dc
GND	Signal Ground	
OSL	Off-Scale, Lamp-Driver Output	dc
GA2	Inhibit Input to 1782 GO Indicator	dc
OFS	Off-Scale Output	dc
EXT	External-Start Input	contact
		closure
EXR	External-Start, Relay-Driver Output	dc
EXR <sup>1</sup>	External-Start Signal to INPUT Switch	dc
SELF	Self-Start Signal Output	dc
EXO	External-Start Operating Signal	dc
EXT <sup>1</sup>	External-Start Output	dc
–15 V	Power-Supply Voltage	dc
+15 V	Power-Supply Voltage	dc
ovs	Off-Scale Signal Input	rms
GND	Signal Ground	

Rotary switch sections are shown as viewed from the panel end of the shaft. The first digit of the contact number refers to the section. The section nearest the panel is 1, the next section back is 2, etc. The next two digits refer to the contact. Contact 01 is the first position clockwise from a strut screw (usually the screw above the locating key), and the other contacts are numbered sequentially (02, 03, 04, etc), proceeding clockwise around the section. A suffix F or R indicates that the contact is on the front or rear of the section, respectively.

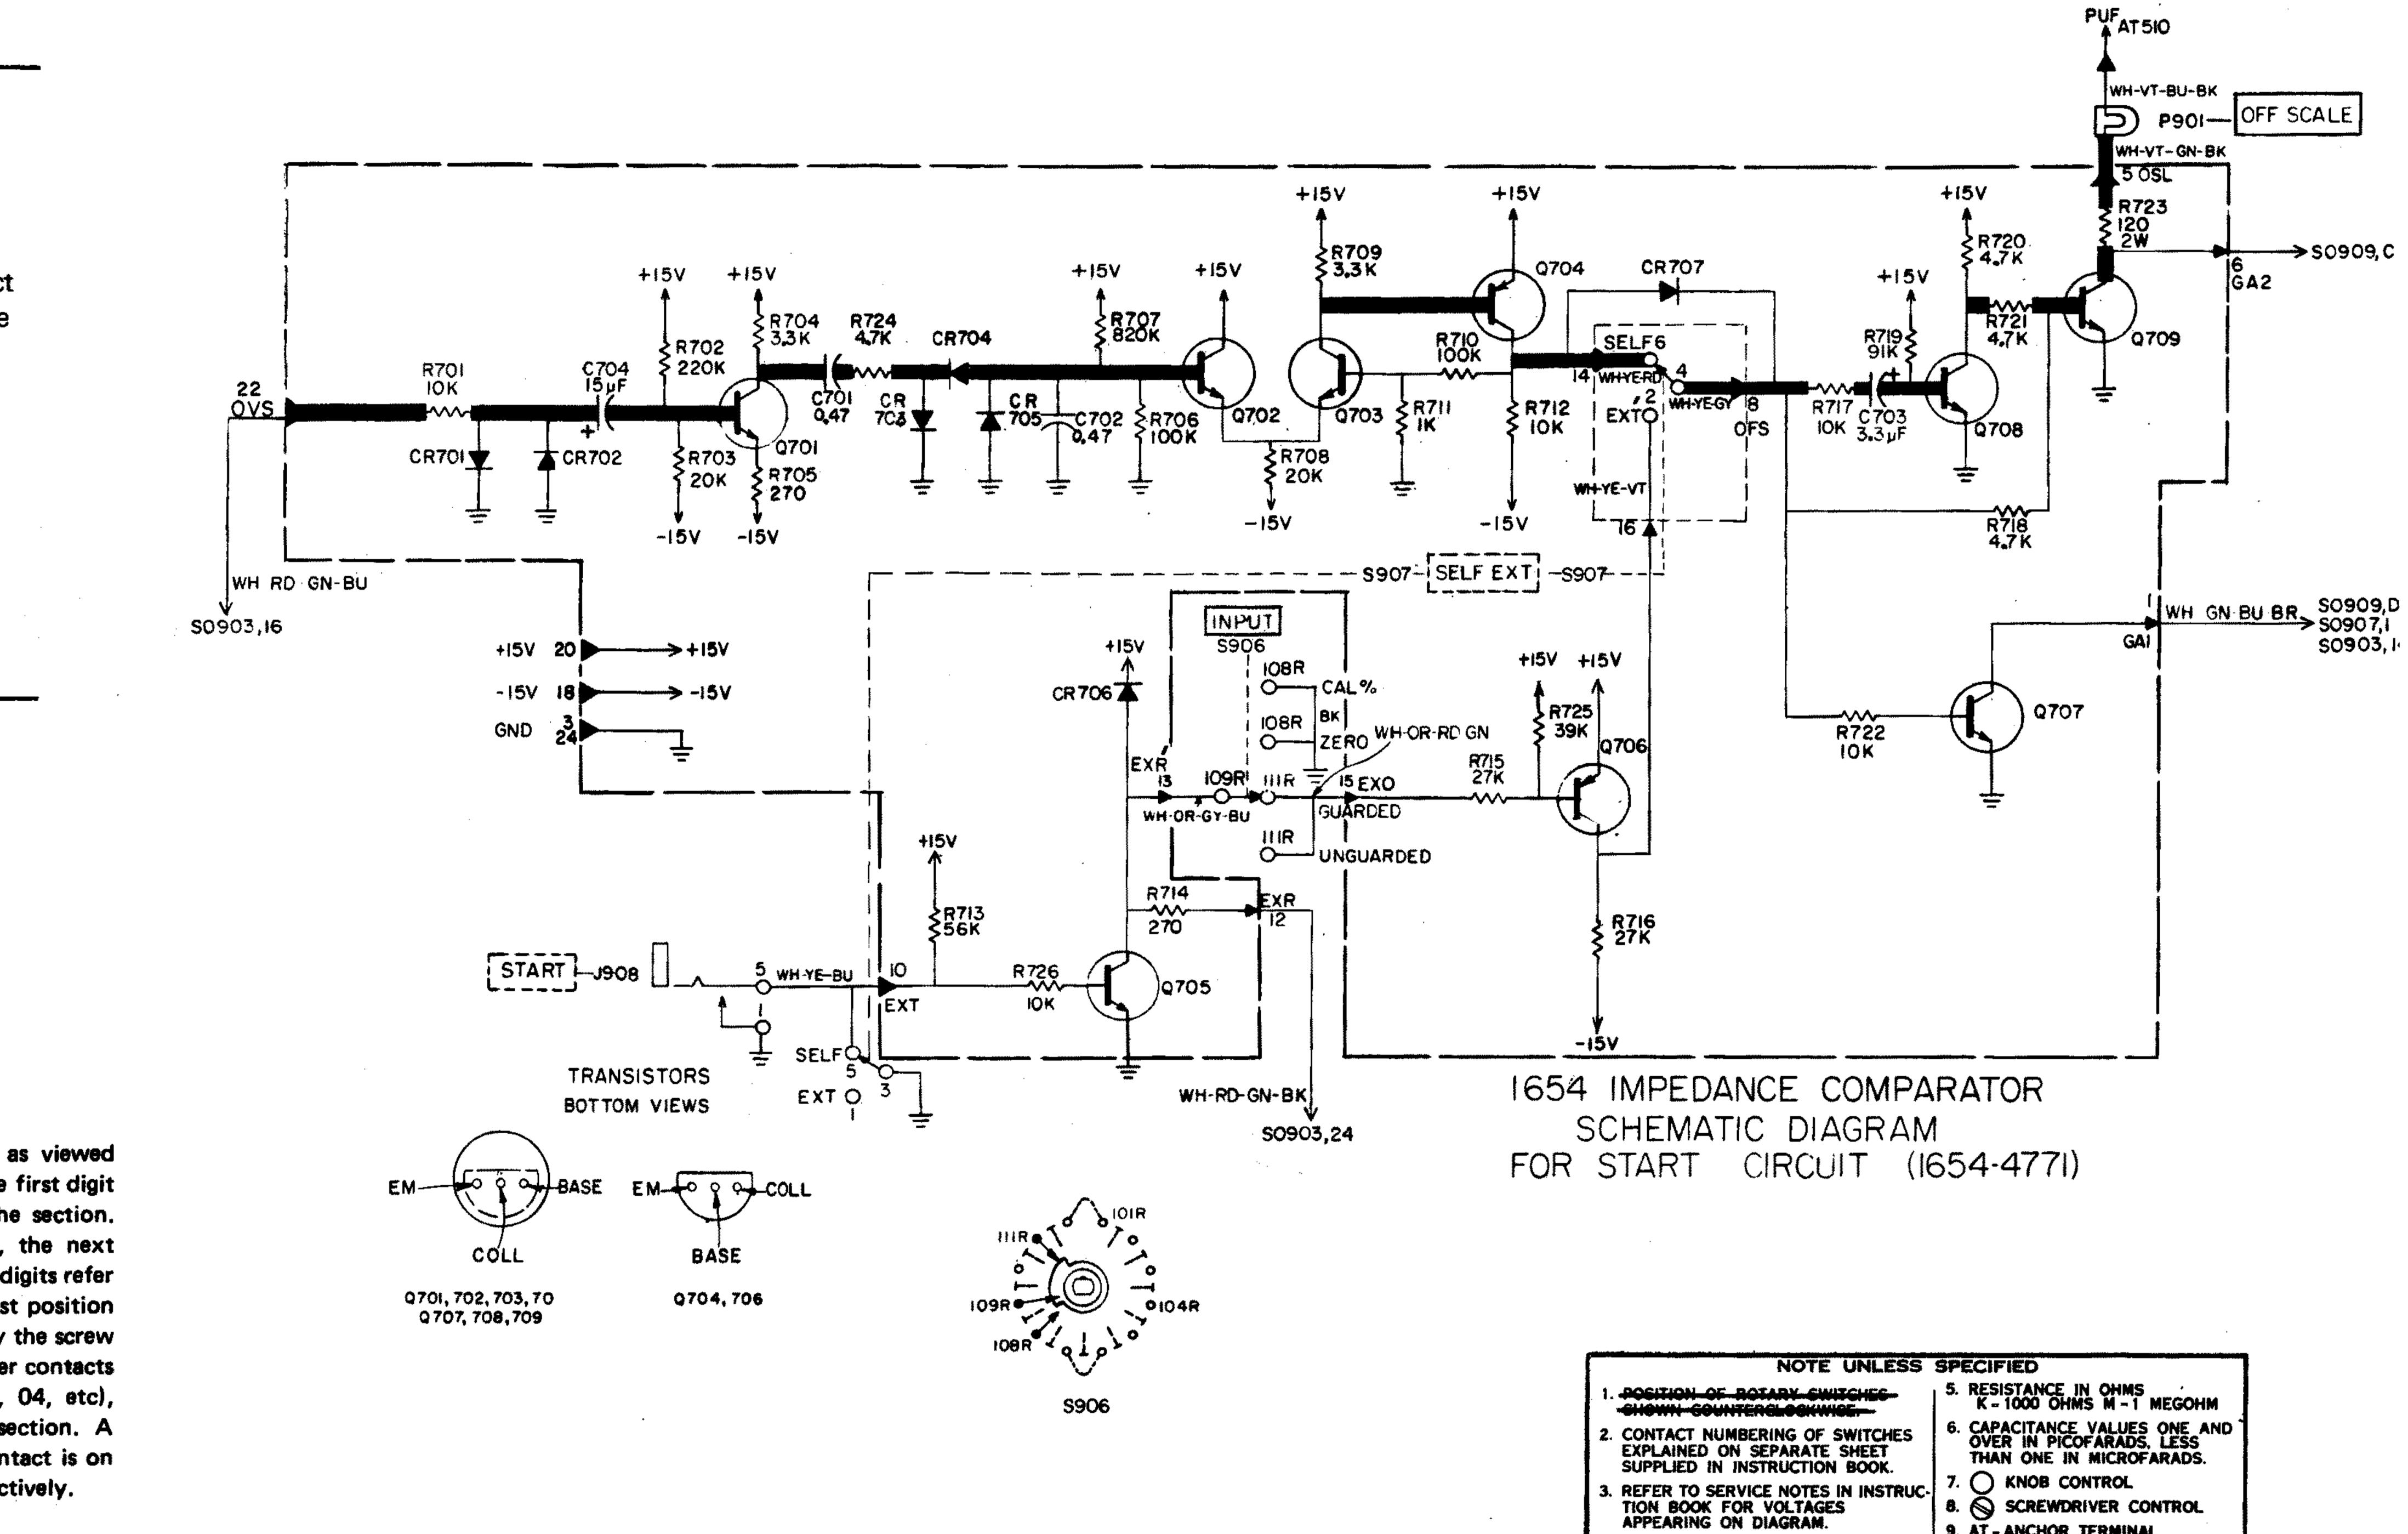



File Courtesy of GRWiki.org

E UNLESS	SPECIFIED
WITCHEG-	5. RESISTANCE IN OHMS K = 1000 OHMS M - 1 MEGOHM
F SWITCHES TE SHEET ON BOOK. IS IN INSTRUC- GES	<ul> <li>6. CAPACITANCE VALUES ONE AND OVER IN PICOFARADS, LESS THAN ONE IN MICROFARADS.</li> <li>7. O KNOB CONTROL</li> <li>8. O SCREWDRIVER CONTROL</li> <li>9. AT - ANCHOR TERMINAL.</li> </ul>
	10. TP - TEST POINT

4. RESISTORS 1/4 WATT.

Figure 7-14. Start circuit schematic diagram.

PARTS LISTS AND DIAGRAMS 7-15

## GENERAL RADIO

WEST CONCORD, MASSACHUSETTS 01781

617 369-4400

### SALES AND SERVICE

25

ATLANTA	404 633-6183
*BOSTON	617 646-0500
BRIDGEPORT	203 377-0165
*CHICAGO	312 992-0800
CLEVELAND	216 886-0150
COCOA BEACH	800 241-5122
*DALLAS	214 637-2240
DAYTON	513 434-6979

DENVER	303 447-9225
DETROIT	313 261-1750
GREENSBORO	919 288-4316
HARTFORD	203 658-2496
HOUSTON	713 464-5112
HUNTSVILLE	800 241-5122
INDIANAPOLIS	317 636-3907
*LOS ANGELES	213 469-6201
*NEW YORK (NY)	212 964-2722
(NJ)	201 943-3140

ROCHESTER	315 394-2037
PHILADELPHIA	215 646-8030
SAN DIEGO	714 232-2727
*SAN FRANCISCO	415 948-8233
SEATTLE	206 GL4-7545
SYRACUSE	315 454-9323
*WASHINGTON,	
BALTIMORE	301 946-1600

## INTERNATIONAL DIVISION

### WEST CONCORD, MASSACHUSETTS 01781, USA

### AUSTRALIA

Warburton Franki Industries Pty. Ltd. Sydney, Melbourne, Brisbane, Adelaide

### CANADA -

#General Radio Canada Limited Toronto, Montreal, Ottawa

### DEMOCRATIC REPUBLIC OF THE CONGO

Rudolph-Desco Co., Inc. New York

### HONG KONG and MACAU

Gilman & Co., Ltd. Hong Kong, B.C.C.

### INDIA

**Motwane Private Limited** Bombay, Calcutta, Lucknow, Kanpur, New Delhi, Bangalore, Madras

### JAPAN

Midorlya Electric Co., Ltd. Tokyo

### KOREA

M-C International San Francisco, Seoul, Korea

MALAYSIA and SINGAPORE Vanguard Company Kuala Lumpur, Malaysia

MEXICO Fredin S.A. Mexico, D.F.

NEW ZEALAND W. & K. McLean Limited Auckland

### PAKISTAN Pakland Corporation Karachi

PHILIPPINES T, J. Wolff & Company Makati, Rizal

**REPUBLIC OF SOUTH** AFRICA G. H. Langler & Co., Ltd.

### SOUTH and CENTRAL

Johannesburg

AMERICA Ad. Auriema, Inc. New York

TAIWAN Heighten Scientific Co., Ltd. Taipei

THAILAND G. Simon Radio Company Ltd. Bangkok

### TURKEY Mevag Engineering, Trading

and Industrial Corporation Istanbul

.

### FINLAND Into O/Y Helsinki

AUSTRIA

BELGIUM

Bruxelles

EIRE

DENMARK

Københaven Ø

(Overseas)

Groenpol-Belgique S. A.

Semler & Matthiassen

General Radio Company

General Radio Company

(U.K.) Limited

Wien

\*GENERAL RADIO COMPANY (OVERSEAS)

Helenastrasse 3, CH-8034, Zurich 34, Switzerland

### Dipl. Ing. Peter Marchetti

FRANCE General Radio France Paris, Lyon

GERMANY General Radio GmbH München Norddeutsche Vertretung Dr.-Ing. Nüsslein Wedel

GREECE Marios Dalleggio Athens

ISRAEL

Eastronics Ltd. Tel Aviv

ITALY Jng, S. & Dr. Guido Belotti Milano, Genova, Roma, Napoli

### NORWAY Gustav A. Ring A/S Oslo

SWEDEN Firma Johan Lagercrantz KB Solna

### SWITZERLAND

Seyffer & Co. AG Zürich

### UNITED KINGDOM

\*General Radio Company (U.K.) Limited Bourne End, Buckinghamshire

### YUGOSLAVIA

Sanford de Brun Wien, Österreich

### PORTUGAL and SPAIN

Ad. Auriema, Inc. New York, Madrid, Lisbon

### \*Repair services are available at these offices.

NETHERLANDS Groenpol Groep Verkoop Amsterdam

### PRINTED IN U.S.A.



